



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
<b>2 Identification</b>	<b>2</b>
<b>3 Repair instructions</b>	<b>3</b>
3.1 General repair instructions	3
<b>4 Technical data</b>	<b>4</b>
4.1 Allocation gearbox - engine	4
4.2 Capacities	4
<b>5 Overview - power transmission</b>	<b>5</b>
<b>6 Electrical components</b>	<b>6</b>
6.1 Overview of fitting locations - electrical components	6
<b>30 - Clutch</b>	<b>7</b>
<b>1 Clutch mechanism</b>	<b>7</b>
1.1 Assembly overview - clutch release mechanism	7
1.2 Removing and installing clutch slave cylinder together with release bearing	7
1.3 Repairing clutch release mechanism	9
<b>2 Clutch</b>	<b>10</b>
2.1 Assembly overview - clutch	10
2.2 Removing and installing clutch	11
<b>34 - Controls, housing</b>	<b>22</b>
<b>1 Selector mechanism</b>	<b>22</b>
1.1 Renewing selector shaft seal	22
<b>2 Removing and installing gearbox</b>	<b>24</b>
<b>3 Transporting gearbox</b>	<b>25</b>
<b>4 Dismantling and assembling gearbox</b>	<b>27</b>
4.1 Assembly overview - gearbox	27
4.2 Assembly overview - selector unit	29
4.3 Removing and installing selector unit	30
4.4 Dismantling and assembling gearbox	32
<b>5 Gearbox housing, clutch housing</b>	<b>55</b>
5.1 Assembly overview - gearbox housing	55
5.2 Assembly overview - clutch housing	58
5.3 Repairing gearbox housing	60
5.4 Repairing clutch housing	68
<b>6 Securing to engine and gearbox support</b>	<b>75</b>
<b>7 Gear oil</b>	<b>76</b>
<b>35 - Gears, shafts</b>	<b>77</b>
<b>1 Input shaft</b>	<b>77</b>
1.1 Assembly overview - input shaft	77
1.2 Dismantling and assembling input shaft	80
1.3 Renewing input shaft seal	96
<b>2 Output shaft</b>	<b>98</b>
2.1 Assembly overview - output shaft	98
2.2 Dismantling and assembling output shaft	99
<b>3 Reverse shaft</b>	<b>110</b>
3.1 Assembly overview - reverse shaft	110
3.2 Dismantling and assembling reverse shaft	110



3.3	Adjusting reverse shaft .....	112
<b>39</b>	<b>- Final drive - differential .....</b>	<b>117</b>
<b>1</b>	<b>Oil seals .....</b>	<b>117</b>
1.1	Overview of fitting locations - oil seals .....	117
1.2	Renewing left seal .....	117
1.3	Renewing right seal .....	120
<b>2</b>	<b>Differential .....</b>	<b>124</b>
2.1	Adjusting differential .....	124
<b>3</b>	<b>Adjustment overview .....</b>	<b>130</b>