



Contents

00 - Technical data	1
1 Safety information and repair notes	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Electrical components	2
2.1 Access to diagnoses	2
27 - Starter, current supply, CCS	3
1 Safety information and repair notes	3
1.1 Safety information	3
1.2 Repair instructions	3
2 Battery	4
2.1 Assembly overview – battery	4
2.2 Removing and installing battery A	4
2.3 Disconnecting and connecting battery	9
2.4 Removing and installing battery tray	12
2.5 Checking battery A	12
2.6 Charging battery A	15
2.7 Removing and installing earth wire with battery monitor control unit [J367]	16
2.8 Commissioning battery monitor control unit [J367]	17
90 - Gauges, instruments	18
1 Safety information and repair notes	18
1.1 Safety information	18
1.2 Repair instructions	18
2 Dash panel insert	19
2.1 Assembly overview ? control unit with display unit for driver information system	19
2.2 Assembly overview - head-up display	19
2.3 Removing and installing control unit with display unit for driver information system [J1254]	20
2.4 Removing and installing control unit for head-up display [J898]	21
2.5 Calibrating control unit for head-up display [J898]	24
3 Horn	28
3.1 Assembly overview – horn	28
3.2 Removing and installing horn or dual tone horn [H1]	28
92 - Windscreen wash/wipe system	30
1 Safety information and repair notes	30
1.1 Safety information	30
1.2 Repair instructions	30
2 Windscreen wiper system	31
2.1 Assembly overview – windscreen wiper system	31
2.2 Moving wipers to service position	32
2.3 Removing and installing wiper blade	32
2.4 Removing and installing wiper arms	33
2.5 Adjusting wiper arms	35
2.6 Removing and installing wiper motor	37
2.7 Deactivating APP function	37
2.8 Removing and installing rain and light sensor [G397]	38
3 Windscreen washer system	42
3.1 Assembly overview ? windscreen washer system	42
3.2 Removing and installing washer fluid reservoir	43
3.3 Removing and installing washer pump [V59]	44



3.4	Removing and installing spray jets	45
3.5	Adjusting spray jets	46
4	Rear window wiper system	47
4.1	Assembly overview – rear window wiper system	47
4.2	Removing and installing wiper blade	47
4.3	Removing and installing wiper arm	48
4.4	Adjusting wiper arm	49
4.5	Removing and installing rear window wiper motor [V12]	50
5	Rear window washer system	52
5.1	Assembly overview – rear window washer system	52
5.2	Removing and installing spray jet, rear window washer system	52
6	Washer fluid lines	54
6.1	Repairing washer fluid lines	54
94	Lights, bulbs, switches - exterior	56
1	Safety information and repair notes	56
1.1	Safety information	56
1.2	Repair instructions	56
2	Headlights	57
2.1	Assembly overview - headlight, LED	57
2.2	Assembly overview - headlight, LED matrix	58
2.3	Assembly overview – repair kit for headlight housing	60
2.4	Removing and installing headlight	61
2.5	Adjusting headlights	62
2.6	Removing and installing front turn signal bulb [M5]/[M7], LED	63
2.7	Removing and installing front turn signal bulb [M5]/[M7], LED matrix	64
2.8	Installing repair kit for headlight housing	64
2.9	Removing and installing headlight range control motor [V48]/[V49]	65
2.10	Removing and installing headlight range control motor [V48]/[V49]	67
2.11	Removing and installing LED module for daytime running light and side light [L176]/[L177]	69
2.12	Removing and installing output module 1 for LED headlight [A27]/[A31]	71
2.13	Removing and installing light conductor for contour lighting in radiator grille [L362]/[L363]	72
2.14	Removing and installing headlight fan [V407]/[V408]	73
3	Tail lights	75
3.1	Assembly overview – tail light cluster in body	75
3.2	Assembly overview – tail light clusters in rear lid	76
3.3	Removing and installing tail light cluster [MX3]/[MX4]	77
3.4	Removing and installing rear fog light [X3]	77
3.5	Removing and installing trim for tail light cluster	78
4	LED module for charging socket	80
4.1	Removing and installing LED module for charging socket 1 [L263]	80
5	High-level brake light	81
5.1	Assembly overview ? high-level brake light	81
5.2	Removing and installing high-level brake light bulb [M25]	81
6	Entry and start authorisation system	83
6.1	Overview of fitting locations ? entry and start authorisation system	83
6.2	Overview of fitting locations ? keyless entry system	85
6.3	Assembly overview ? control unit for break-in protection	89
6.4	Removing and installing interface for entry and start system [J965]	90
6.5	Removing and installing interior aerial 1 for entry and start system [R138]	92
6.6	Removing and installing luggage compartment aerial for entry and start system [R137]	93
6.7	Removing and installing control unit 2 for break-in protection [J1192]/control unit 3 for break-in protection [J1193]	93
6.8	Removing and installing control unit 4 for break-in protection [J1194]/control unit 5 for break-in protection [J1195]	94



6.9	Removing and installing contact sensor for front left exterior door handle [G605]	95
6.10	Removing and installing contact sensor for front right exterior door handle [G606]	95
6.11	Removing and installing entry and start authorisation aerial [R200]/[R201]	95
7	Steering column switch module	97
7.1	Assembly overview - steering column switch module	97
7.2	Removing and installing steering column electronics control unit [J527]	98
7.3	Removing and installing immobiliser reader coil [D2]	99
8	Automatic headlight range control	100
8.1	Assembly overview - automatic headlight range control	100
9	Towing bracket	101
9.1	Assembly overview – socket, trailer detector control unit	101
9.2	Removing and installing trailer detector control unit [J345]	101
10	Additional exterior lights	103
10.1	Removing and installing number plate light [X4]/[X5]	103
10.2	Assembly overview - lights in exterior mirror	103
10.3	Removing and installing exterior mirror turn signal bulb [L131]/[L132]	105
10.4	Removing and installing entry light in exterior mirror [W52]/[W53]	105
10.5	Assembly overview – lights in exterior door handle	106
10.6	Removing and installing bulb for exterior door handle illumination	107
96 -	Lights, bulbs, switches - interior	109
1	Safety information and repair notes	109
1.1	Safety information	109
1.2	Repair instructions	109
2	Lights	110
2.1	Overview of fitting locations – lights in dash panel	110
2.2	Overview of fitting locations - lights in front doors	110
2.3	Overview of fitting locations - lights in centre console	111
2.4	Overview of fitting locations – lights in luggage compartment	112
2.5	Overview of fitting locations – lights in roof trim	113
2.6	Removing and installing footwell light [W9]/[W10]	114
2.7	Removing and installing central locking SAFELOCK function warning lamp [K133]	116
2.8	Removing and installing luggage compartment light [W3]	116
2.9	Removing and installing illuminated vanity mirror [W20]/[W14]	117
2.10	Removing and installing dynamic light strip 1 for information in dash panel [L385]	118
2.11	Removing and installing light 1 for front centre console background lighting [L193]	118
2.12	Removing and installing light for dash panel contour lighting	119
3	Controls	122
3.1	Overview of fitting locations – controls in dash panel	122
3.2	Overview of fitting locations – controls in front doors	123
3.3	Overview of fitting locations ? controls in rear doors	124
3.4	Overview of fitting locations – controls in luggage compartment	125
3.5	Overview of fitting locations – controls in roof trim	126
3.6	Removing and installing operating unit for lighting [EX59]	127
3.7	Removing and installing centre switch module in dash panel [EX22]	130
3.8	Removing and installing operating unit for window regulator in driver door [EX36]	131
3.9	Removing and installing front passenger side window regulator button [E716]	132
3.10	Removing and installing rear window regulator button [E711]/[E713]	132
3.11	Removing and installing starter button [E378]	133
3.12	Removing and installing front interior light [WX1]	134
3.13	Removing and installing rear interior light [WX2]	135
4	Anti-theft alarm system	136
4.1	Assembly overview – interior monitor	136
4.2	Removing and installing alarm horn [H12]	136
4.3	Removing and installing anti-theft alarm sensor [G578]	137



5	Cigarette lighter, socket	139
5.1	Removing and installing 12 V socket [U5/U19]	139
97 - Wiring	140
1	Safety information and repair notes	140
1.1	Safety information	140
1.2	Repair instructions	140
2	Relay carriers, fuse holders, electronics boxes	141
2.1	Overview of fitting locations ? relay carriers, fuse holders, E-boxes	141
2.2	Assembly overview ? relay carriers, fuse holders, electronics boxes	142
2.3	Removing and installing electronics box	144
2.4	Removing and installing fuse holder A [SA]	145
2.5	Removing and installing fuse holder B [SB]	147
2.6	Removing and installing fuse holder C [SC]	149
3	Control units	153
3.1	Overview of fitting locations ? control units	153
3.2	Assembly overview ? onboard supply control unit	154
3.3	Removing and installing onboard supply control unit [J519]	156
3.4	Removing and installing bracket for onboard supply control unit [J519]	158
3.5	Removing and installing data bus diagnostic interface [J533]	161
3.6	Removing and installing fan for control unit [V274]	161
4	Connector housings	163
4.1	Dismantling connector housings	163
5	Cleaning contact surfaces	164
5.1	Cleaning battery clamp and battery terminal	164
5.2	Anti-corrosion treatment of contact surfaces	165
5.3	Cleaning cable lugs	166
5.4	Cleaning threaded connections	167
6	Wires	168
6.1	Repairing aerial wires	168
6.2	Repairing wires with a cross section of 0.13mm ² to 6mm ²	172
6.3	Repairing 2.5 mm, 4 mm or 6 mm aluminium wires with a single crimp connector	176
6.4	Repairing a 10 mm ² or 16 mm ² wire	179
6.5	Repairing Ethernet lines	183
6.6	Section repairs to electrical wiring	183
7	Fibre optic cables	185
7.1	Repairing fibre optic cables	185
7.2	Removing and installing fibre optic cable of wiring harness connector	189