



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working with pyrotechnic components	3
1.2 Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	4
1.3 Additional safety regulations for belt tensioners	4
1.4 Additional safety regulations for driver airbag and front passenger airbag	5
1.5 Additional safety instructions for curtain airbag	5
1.6 Renewing pyrotechnic, electrical and mechanical components of the restraint system after an accident	5
1.7 Accident without airbag triggering	5
1.8 Checking seat belts	6
1.9 Checking belt webbing	6
1.10 Checking inertia reel (locking mechanism)	7
1.11 Visually inspecting belt buckle	8
1.12 Checking operation of belt buckle	8
1.13 Checking belt guide fittings and latch plates	8
1.14 Checking securing parts and anchorage points after an accident	8
1.15 Checking child seat anchors after an accident	9
68 - Interior equipment	10
1 Compartments/covers	10
1.1 Removing and installing fuse box cover	10
1.2 Removing and installing upper steering column trim	10
1.3 Removing and installing lower steering column trim	11
1.4 Removing and installing glove compartment	12
2 Equipment	14
2.1 Removing and installing sun visor	14
2.2 Removing and installing roof grab handle	16
3 Centre console	18
3.1 Removing and installing drinks holder	18
3.2 Removing and installing parking brake cover cap	19
3.3 Removing and installing trim for operating and display unit	20
3.4 Removing and installing cover for centre console	22
3.5 Removing and installing centre console	23
3.6 Removing and installing centre console bracket	30
4 Front centre armrest	31
4.1 Removing and installing front centre armrest	31
5 Interior mirror	32
5.1 Removing and installing interior mirror	32
5.2 Removing and installing retaining plate	34
69 - Passenger protection	37
1 Seat belts	37
1.1 Removing and installing front 3-point seat belt	37
1.2 Removing and installing rear three-point seat belt	43
1.3 Removing and installing front belt end anchor	46
1.4 Removing and installing belt height adjustment	49
1.5 Removing and installing front belt buckle	52
1.6 Removing and installing rear belt buckle	53
2 Airbag control unit	55
2.1 Removing and installing airbag control unit J234	55



3	Driver side airbag	57
3.1	Assembly overview - driver side airbag	57
3.2	Removing and installing airbag unit with igniter	59
3.3	Removing and installing return spring with slip ring (coil connector)	66
4	Front passenger side airbag	68
4.1	Removing and installing front passenger side airbag unit with igniter	68
5	Side airbags	73
5.1	Removing and installing front side airbag with igniter	73
6	Curtain airbags	77
6.1	Removing and installing curtain airbag with igniter	77
7	Airbag crash sensors	80
7.1	Removing and installing side airbag crash sensor on driver side G179/side airbag crash sensor on front passenger side G180	80
7.2	Removing and installing rear side airbag crash sensor on driver side G256/rear side airbag crash sensor on front passenger side G257	84
8	Seat belt verification	87
8.1	Removing and installing seat occupied sensor, front passenger side G128	87
70 - Trim, insulation	90	
1	Front door trims	90
1.1	Removing and installing door trim at front	90
1.2	Removing and installing mirror cover trim	99
2	Rear door trims	102
2.1	Removing and installing rear door trim	102
3	Dash panel	108
3.1	Removing and installing mounting frame for radio/navigation system	108
3.2	Removing and installing centre dash panel compartment	108
3.3	Removing and installing mounting for storage compartment in centre dash panel	110
3.4	Removing and installing dash panel end cover	112
3.5	Removing and installing dash panel	113
4	Dash panel central tube	121
4.1	Removing and installing dash panel central tube	121
5	Interior trims	129
5.1	Removing and installing sill panel moulding	129
5.2	Removing and installing A-pillar trim	132
5.3	Detaching and attaching B-pillar trim	136
5.4	Removing and installing B-pillar trim	138
5.5	Releasing and securing C-pillar trim	143
5.6	Removing and installing C-pillar trim	146
5.7	Removing and installing side trim panel	151
5.8	Removing and installing wheel housing trims	153
5.9	Floor lining - remove and install	155
6	Luggage compartment trims	157
6.1	Removing and installing lower rear lid trim	157
6.2	Removing and installing luggage compartment floor	158
6.3	Removing and installing lock carrier trim	159
6.4	Removing and installing rear shelf support	160
6.5	Removing and installing support for variable luggage compartment floor	163
6.6	Removing and installing luggage compartment side trim	164
7	Roof trims	166
7.1	Removing and installing roof end strip	166
7.2	Removing and installing moulded headliner	166
7.3	Mounting roof reinforcement on body	174



72 - Seat frames	178
1 Front seats	178
1.1 Removing and installing front seat	178
1.2 Removing and installing seat trim on tunnel side	182
1.3 Removing and installing seat trim on sill side	183
1.4 Removing and installing seat height adjustment operating lever	189
1.5 Removing and installing lumbar support adjustment	189
1.6 Removing and installing mounting for drawer	190
1.7 Removing and installing front backrest	192
1.8 Removing and installing head restraint guide	195
2 Rear seats	197
2.1 Removing and installing bench seat / individual seats	197
2.2 Removing and installing rear seat backrest	197
2.3 Removing and installing head restraint guide	201
2.4 Removing and installing locking mechanism for rear seat backrest	202
74 - Seat - padding, covers	205
1 Front seat covers and padding	205
1.1 Removing and installing seat cover and seat cushion for seat pan	205
1.2 Removing and installing backrest cover and cushion	208
2 Rear seat covers and padding	210
2.1 Removing and installing bench seat cover and padding	210
2.2 Removing and installing rear seat backrest cover and padding	213