



Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
1.2 Prefix, correspondence, gearbox ratio, filling volume	2
2 gearbox assembly scheme	3
2.1 Nomenclature	3
2.2 Gear ratios	3
3 Gearbox ratio "i"	5
3.1 Gearbox ratio "i" - calculation	5
4 General repair instructions	6
4.1 gearbox	6
4.2 Gaskets and retainers	6
4.3 Screws, nuts	7
4.4 Roller Bearings	7
4.5 Adjustment shims	8
4.6 Synchronizer rings	8
30 - Clutch	9
1 Command system	9
1.1 Command system - component overview	9
1.2 Command pedals - assembly overview	10
1.3 Clutch pedal switch F36 - remove and install	12
1.4 Clutch pedal return spring - remove and install	14
1.5 Clutch pedal support - remove and install	16
1.6 Clutch pedal - remove install	19
1.7 Hydraulic system - assembly overview	20
1.8 Transmitting cylinder - clutch hydraulic drive - remove and install	22
2 Clutch drive mechanism	26
2.1 Clutch drive mechanism - assembly overview	26
2.2 Clutch slave cylinder - remove and install	29
2.3 Clutch drive mechanism - bleed	30
3 Clutch	32
3.1 Clutch - assembly overview	32
3.2 Clutch - repair	33
34 - Controls, housing	37
1 Shift mechanism	37
1.1 Shift mechanism - installation position	37
1.2 Gearshift mechanism - component overview	38
1.3 Handle and boot on the gear lever - assembly overview	38
1.4 Handle and boot on the gear lever - remove and install	39
1.5 Gearshift lever and mechanism - repair	41
1.6 Drive cables - remove and install	46
1.7 Gearshift mechanism - remove and install	50
1.8 Gear selection mechanism - adjust	54
2 gearbox - remove and install	59
2.1 gearbox - remove and install	59
2.2 Gearbox - transport	82
3 Gearbox oil level	84
3.1 Oil level - check	84
3.2 Oil level - replenish	85
4 gearbox - disassemble and assemble	87



4.1	Gearbox - overview	87
4.2	gearbox - assembly overview	87
4.3	Gearbox housing cover and 5th gear	88
4.4	Clutch housing	89
4.5	Input shaft, planet pinion, differential, selection mechanism and selector forks	90
4.6	Input shaft, planet pinion, differential, selection mechanism and selector forks - disassemble and assemble	92
5	Gearbox and clutch housings	102
5.1	Gearbox and clutch housings - repair	102
6	Gear selection mechanism - adjust	108
6.1	Gear selection mechanism - disassemble and assemble	108
7	Selector forks	111
7.1	Selector forks - disassemble and assemble	111
35	Gears, shafts	117
1	Input shaft	117
1.1	Primary shaft - general overview of assembly	117
1.2	Input shaft - disassemble and assemble	119
2	Planet pinion	131
2.1	Pinion shaft - general overview of assembly	131
2.2	Planet pinion - disassemble and assemble	134
39	Final drive - differential	142
1	Drive flange	142
1.1	Left drive flange retainer (left side) - replace	142
1.2	Drive flange retainer (right side) - replace	146
2	Differential	149
2.1	Differential - general overview of assembly	149
2.2	Differential - disassemble and assemble	151
2.3	Differential - adjust	159