



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 General repair notes</b>	<b>1</b>
1.1 Gearbox	1
1.2 Torque converter	1
1.3 ATF	1
1.4 Automatic gearbox control unit J217 with Fuzzy logic	1
1.5 Control units in vehicle	1
1.6 Information on "09G gearbox"	1
1.7 Tools	2
1.8 Gearbox	2
1.9 Gaskets, seals and oil	2
1.10 Nuts and bolts	3
1.11 Electrical components	3
1.12 Guided fault finding, vehicle self-diagnosis and testing	4
<b>2 Gearbox identification</b>	<b>5</b>
2.1 Gearbox codes	5
<b>3 Code letters, engine allocation</b>	<b>7</b>
<b>4 Capacities</b>	<b>8</b>
4.1 Planetary gearbox and final drive	8
<b>32 - Torque converter</b>	<b>9</b>
<b>1 Torque converter</b>	<b>9</b>
1.1 Identification of torque converter	9
1.2 Draining torque converter	9
1.3 Removing and installing torque converter oil seal	9
1.4 Installing torque converter	10
<b>37 - Controls, housing</b>	<b>12</b>
<b>1 Connecting »tester«</b>	<b>12</b>
1.1 Connecting vehicle diagnosis, testing and information system VAS 5051	12
<b>2 Electrical and electronic components and their locations</b>	<b>14</b>
<b>3 Multifunction switch F125</b>	<b>19</b>
3.1 Removing multifunction switch F125	19
3.2 Installing multifunction switch F125	21
3.3 Adjusting multifunction switch F125	22
<b>4 Selector mechanism</b>	<b>24</b>
4.1 Assembly overview - selector mechanism	24
4.2 Emergency release of selector lever	24
4.3 Removing and installing selector lever handle	25
4.4 Moving push button to installation position in the handle	29
4.5 Removing and installing selector lever and selector mechanism with selector lever cable	31
4.6 Checking selector lever cable	33
4.7 Adjusting selector lever cable	34
<b>5 Checking selector mechanism</b>	<b>36</b>
5.1 Selector lever in "P" position and ignition switched on	36
5.2 Selector lever in "N" position and ignition switched on	36
5.3 Selector lever in position "Tiptronic"	36
5.4 Ignition and light switched on	36
5.5 Selector lever position display	36
<b>6 Removing and installing gearbox</b>	<b>37</b>
6.1 Removing and installing gearbox, 1.6 l - 77 kW, petrol engine	37
6.2 Removing and installing gearbox, 1.6 l - 81 kW, petrol engine	47



6.3	Specified torques for gearbox	47
<b>7</b>	<b>Transporting gearbox</b>	<b>50</b>
<b>8</b>	<b>Checking ATF level and topping up</b>	<b>51</b>
8.1	Checking ATF level	52
8.2	Topping up ATF	53
8.3	Draining and filling ATF	54
<b>9</b>	<b>ATF cooler</b>	<b>56</b>
9.1	Assembly overview - ATF cooler	56
9.2	Removing and installing ATF cooler	57
<b>38 - Gears, control</b>		<b>62</b>
<b>1</b>	<b>Renewing oil seal for selector shaft</b>	<b>62</b>
<b>2</b>	<b>Removing and installing ATF pan</b>	<b>63</b>
2.1	Removing	63
2.2	Installing	64
<b>3</b>	<b>Removing and installing ATF strainer</b>	<b>66</b>
3.1	Removing	66
3.2	Installing	66
<b>4</b>	<b>Removing and installing valve body</b>	<b>68</b>
4.1	Overview - valve chest	68
4.2	Removing valve body	71
4.3	Installing valve body	74
4.4	Wire routing, connectors, connections and retainer on valve body	78
4.5	Specified torques	79
<b>5</b>	<b>Removing and installing wiring harness for solenoid valves and senders</b>	<b>80</b>
5.1	Removing	80
5.2	Installing	80
5.3	Removing and installing gearbox input speed sender G182	80
5.4	Removing and installing gearbox output speed sender G195	81
<b>39 - Final drive - differential</b>		<b>83</b>
<b>1</b>	<b>Renewing oil seals for flange shafts</b>	<b>83</b>
1.1	Renewing oil seal for left flange shaft	83
1.2	Renewing seal for right flange shaft	85