



## Contents

<b>1</b>	<b>Engine list</b>	<b>1</b>
<b>2</b>	<b>Service work</b>	<b>4</b>
2.1	Information on long-life service and time or distance dependent service	4
2.2	Service tables	6
2.3	Delivery inspection	11
2.4	Oil change service	12
2.5	Inspection service every 12 months for vehicles ▶2000	15
2.6	Inspection service every 30,000 km for vehicles ▶2000	17
2.7	Additional work for vehicles ▶2000	19
2.8	Inspection service for vehicles 2001▶2007	22
2.9	Interval service 2008▶	24
2.10	Inspection service 2008▶	26
2.11	Time or distance dependent additional work for vehicles 2001▶	28
<b>3</b>	<b>General information</b>	<b>33</b>
3.1	Raising vehicle with lifting platform or trolley jack	33
3.2	Stickers	34
3.3	Entries in service schedule	36
3.4	Connecting vehicle diagnostic tester	36
3.5	Vehicle identification number	39
3.6	Vehicle data sticker	39
3.7	Countries where diesel has a high sulphur content	40
3.8	Engine code and engine number	41
3.9	RME fuel (biodiesel)	41
3.10	Identification plate	41
3.11	Severe operating conditions	41
3.12	“Countries with hot climate” includes	42
<b>4</b>	<b>Descriptions of work:</b>	<b>43</b>
4.1	Removable towing bracket: checking and cleaning if necessary	45
4.2	Additive container: Extract and replenish new additive	47
4.3	Rear final drive: Check oil level	53
4.4	Swivel joints and suspension link mountings: inspecting	53
4.5	Front passenger airbag: checking key switch and “On/Off function”	54
4.6	Diesel particulate filter: Reading ash loading level	55
4.7	Automatic gearbox: changing ATF (099 gearbox)	55
4.8	Automatic gearbox: Change ATF strainer (099 gearbox)	55
4.9	Automatic gearbox: Check oil level of front wheel drive (099 gearbox)	55
4.10	Automatic gearbox: check ATF level.	55
4.11	Battery: checking battery terminal clamps for secure seating	56
4.12	Battery: Check using battery tester with printer VAS 5097A or VAS 6161	57
4.13	Tyres: checking condition, wear pattern, tyre pressure and tread depth	57
4.14	Changing brake fluid	60
4.15	Brake fluid level: checking	64
4.16	Brake system and shock absorbers: inspecting for leaks and damage	64
4.17	Brakes, front and rear: checking thickness of brake pads and condition of brake discs	65
4.18	Renewing diesel particulate filter	68
4.19	Electric windows: checking positioning (open and close functions)	68
4.20	Carry out vehicle system test	68
4.21	Boots: inspecting	70
4.22	Haldex coupling: Renew oil filter	70
4.23	Haldex coupling: Change oil	70
4.24	Poly V-belt: checking condition	70
4.25	V-belt: Check condition and tension (vehicles with 4-cylinder engine)	71
4.26	Diesel fuel filter: Renewing	72



4.27	Diesel fuel filter: Drain water (not TDI unit injector engine)	73
4.28	Interior and exterior body: inspecting for corrosion with doors and flaps open	73
4.29	Cooling system: checking frost protection and coolant level	74
4.30	Air filter: cleaning housing and renewing filter element	76
4.31	Engine oil level: checking	82
4.32	Engine oil: Draining or extracting and replenishing; renewing oil filter	82
4.33	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	86
4.34	Engine cover panel -top-: Removing and installing	87
4.35	Engine cover -bottom- (noise insulation): Removing and installing	88
4.36	Road test: performing (driving behaviour, noises, air conditioner etc.)	89
4.37	Radio/navigation system: entering PIN of anti-theft coding and storing local radio stations to station buttons	89
4.38	Wheel securing bolts: tightening to specified torque	90
4.39	Tyre repair set	93
4.40	Window wiper and washer system and headlight washer system: Checking function	93
4.41	Checking wiper blade setting angle: if wiper blades judder	99
4.42	Wiper blades: Check park position	101
4.43	Wiper blade protection: removing	101
4.44	Manual gearbox/final drive: Check oil level	103
4.45	Sunroof: checking function, cleaning and greasing guide rails	103
4.46	Track rod ends: checking clearance, firm seating and boots	104
4.47	Service interval display: recoding	104
4.48	Service interval display: resetting	111
4.49	Power assisted steering: check fluid level.	126
4.50	Checking/adjusting headlight setting	127
4.51	Door arrester: grease.	132
4.52	Dust and pollen filter: renew filter element	133
4.53	Underbody sealant: inspecting for damage to underbody sealant, underbody panels, routing of lines and plugs	133
4.54	Clock: setting to correct time	134
4.55	Camshaft drive belt: Renew (TDI engine)	134
4.56	Toothed belt and camshaft drive tensioning roller: Renew (TDI unit injector engine)	135
4.57	Camshaft drive toothed belt: Renew (4-cylinder petrol engine, 5-valve)	135
4.58	Toothed belt: Check for wear (diesel engine)	135
4.59	Camshaft drive toothed belt: Check (4-cylinder petrol engine)	136
4.60	Spark plugs: renewing	136
<b>5</b>	<b>Exhaust emissions test</b>	<b>143</b>
5.1	Exhaust emissions test for petrol engines without OBD	143
5.2	Exhaust emissions test for petrol engines with OBD	152
5.3	Exhaust emissions test for diesel engines without OBD	154
5.4	Exhaust emissions test for diesel engines with OBD	167
<b>6</b>	<b>Glossary</b>	<b>171</b>