



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Technical data, brakes</b> .....	<b>1</b>
1.1 Front brakes .....	1
1.2 Rear brakes .....	3
<b>2 Brake test</b> .....	<b>6</b>
2.1 General .....	6
2.2 Test for vehicles with front-wheel drive. ....	6
2.3 Test for vehicles with four-wheel drive via a viscous clutch. ....	6
2.4 Test for vehicles with four-wheel drive via a Haldex clutch. ....	7
<b>45 - Anti-lock brake system</b> .....	<b>8</b>
<b>1 Connect vehicle diagnosis, testing and information system VAS 5051 and select functions</b> .....	<b>8</b>
<b>2 ABS and ABS/EDL Mark 04 GI</b> .....	<b>10</b>
2.1 General information on this ABS, ABS/EDL .....	10
2.2 Notes for repair work on ABS, ABS/EDL .....	10
2.3 Electrical/electronic components and fitting locations .....	11
2.4 Fault display via warning lamps .....	13
2.5 Assembly overview - hydraulic unit, brake servo/brake master cylinder .....	14
2.6 Removing and installing control unit and hydraulic unit .....	16
<b>3 ABS Mark 20 IE up to model year 2000</b> .....	<b>20</b>
3.1 General information on this ABS .....	20
3.2 Notes for repair work on ABS .....	21
3.3 Electrical/electronic components and fitting locations .....	22
3.4 Fault display via warning lamps .....	25
3.5 Assembly overview - hydraulic unit/control unit .....	26
3.6 Removing and installing control unit and hydraulic unit .....	27
<b>4 ABS Mark 20 IE as of model year 2001 and Mark 25 as of model year 2003</b> .....	<b>33</b>
4.1 General information on this ABS .....	33
4.2 Notes for repair work on ABS .....	34
4.3 Electrical/electronic components and fitting locations .....	35
4.4 Fault display via warning lamps .....	38
4.5 Assembly overview - hydraulic unit, brake servo/brake master cylinder .....	39
4.6 Removing and installing control unit and hydraulic unit .....	42
<b>5 Removing and installing parts of ABS system on front and rear axle</b> .....	<b>48</b>
5.1 Removing and installing parts of ABS system on front axle .....	48
5.2 Removing and installing parts of ABS system on rear axle .....	53
<b>6 Removing and installing parts of ESP system</b> .....	<b>57</b>
6.1 Removing and installing yaw rate sender G202 , lateral acceleration sender G200 and ESP sensor unit G419 .....	57
6.2 Removing and installing steering angle sender G85 .....	59
6.3 Removing and installing longitudinal acceleration sender G251 .....	61
<b>46 - Brakes - mechanism</b> .....	<b>62</b>
<b>1 Repairing front brakes</b> .....	<b>62</b>
1.1 Repairing front brakes, Teves/Ate up to model year 2000 .....	62
1.2 Removing and installing brake pads .....	63
1.3 Repairing front brakes, FN3 brake caliper, model year 2001 .....	66
1.4 Removing and installing brake pads .....	67
1.5 Repairing front brakes, FN3 brake caliper, as of model year 2002 .....	70
1.6 Removing and installing brake pads .....	72
1.7 Repairing front brakes, FNR brake caliper as of model year 2001 .....	75



1.8	Removing and installing brake pads	77
<b>2</b>	<b>Repairing rear brakes</b>	<b>80</b>
2.1	Repairing 15" rear brakes	80
2.2	Removing and installing brake pads	82
2.3	Repairing 16" rear brakes	84
2.4	Removing and installing brake pads	86
2.5	Adjusting handbrake	89
<b>3</b>	<b>Assembly overview - handbrake lever</b>	<b>91</b>
3.1	Removing and installing front handbrake cable	91
3.2	Removing and installing centre handbrake cable	93
3.3	Removing and installing rear handbrake cable	94
<b>4</b>	<b>Assembly overview - brake pedal up to model year 2000</b>	<b>96</b>
4.1	Removing and installing brake pedal	97
<b>5</b>	<b>Assembly overview - brake pedal as of model year 2001</b>	<b>98</b>
5.1	Separating brake pedal from brake servo	99
5.2	Removing and installing brake pedal	100
<b>6</b>	<b>Removing and installing brake light switch F and brake pedal switch F47</b>	<b>102</b>
6.1	Brake light switch to week 45 of 2006	102
6.2	Brake light switch from week 45 of 2006	104
<b>47 - Brakes - hydraulics</b>		<b>105</b>
<b>1</b>	<b>Repairing front brake calipers</b>	<b>105</b>
1.1	Repairing Teves/Ate brake calipers and FN3 brake calipers	105
1.2	Removing and installing piston for brake caliper	106
1.3	Repairing front brake calipers, FNR brake calipers	107
1.4	Removing and installing piston for FNR brake calipers	108
<b>2</b>	<b>Repairing rear brake caliper</b>	<b>111</b>
2.1	Removing and installing piston for rear brake caliper	112
2.2	Pre-bleeding brake caliper	114
<b>3</b>	<b>Assembly overview: brake pressure regulator, delay dependent</b>	<b>115</b>
3.1	Checking brake pressure regulator, delay dependent	115
<b>4</b>	<b>Pressure leak test</b>	<b>116</b>
4.1	Test prerequisites	116
<b>5</b>	<b>Bleeding brake system</b>	<b>117</b>
5.1	Bleeding brake system using brake filling and bleeding unit VAS 5234 or V.A.G 1869	117
5.2	Changing brake fluid (every 2 years)	119
<b>6</b>	<b>Assembly overview: Brake servo/brake master cylinder up to model year 2000</b>	<b>120</b>
6.1	Checking non-return valve	121
<b>7</b>	<b>Assembly overview: Brake servo/brake master cylinder as of model year 2001</b>	<b>122</b>
<b>8</b>	<b>Assembly overview: Brake servo /brake master cylinder for vehicles with ABS/EDL/TCS/ESP as of model year 2001</b>	<b>124</b>
8.1	Removing and installing brake pressure sender 1 G201 and brake pressure sender 2 G214	125
8.2	Vehicles with mechanical brake assist system	126
<b>9</b>	<b>Removing and installing brake master cylinder</b>	<b>127</b>
9.1	Removing	127
9.2	Installing	128
<b>10</b>	<b>Removing and installing brake master cylinder, right-hand drive vehicles</b>	<b>129</b>
10.1	Removing	129
10.2	Installing	130
<b>11</b>	<b>Removing and installing brake servo</b>	<b>131</b>
11.1	Removing	131
11.2	Installing	132



---

<b>12</b>	<b>Removing and installing brake servo, right-hand drive vehicles</b>	<b>134</b>
12.1	Removing	134
12.2	Installing	134
<b>13</b>	<b>Repairing brake lines</b>	<b>136</b>
13.1	Assembly overview - flanging tool	138
13.2	Work instructions	138