



## Contents

<b>00 - Technical data</b>	<b>1</b>
1 Checklist for evaluating running gear of accident vehicles	1
2 General information	3
<b>40 - Front suspension</b>	<b>4</b>
1 Appraisal of accident vehicles	4
2 Repairing front suspension	5
3 I - Assembly overview - subframe, anti-roll bar, lower wishbone up to model year 2000	6
3.1 Modifications to the pendulum support	11
3.2 Modified screw for pendulum support	12
4 I - Assembly overview - subframe, anti-roll bar and wishbone from model year 2001	13
4.1 Removing and installing swivel joint	18
4.2 Removing and installing wishbone	20
4.3 Removing and installing subframe	21
4.4 Removing and installing front anti-roll bar to model year 2000	23
4.5 Removing and installing front anti-roll bar from model year 2001	25
4.6 Repairing nut in longitudinal member/body	28
4.7 Modified subframe connection to body	29
4.8 Aligning subframe to body	30
5 II - Removing and installing wheel bearing, suspension strut, drive shaft	31
5.1 Pressing front wheel bearing out and in with wheel bearing housing installed	35
5.2 Removing and installing wheel bearing housing	39
5.3 Removing and installing suspension strut	42
5.4 Repairing front suspension strut	45
6 Removing and installing drive shafts	48
6.1 Removing and installing drive shafts on vehicles with manual gearbox 006	48
6.2 Removing and installing drive shafts on vehicles with automatic gearbox 099	50
6.3 Removing and installing drive shafts on vehicles with automatic gearbox 099 and four-wheel drive	52
6.4 Removing and installing drive shafts on vehicles with manual gearbox 02N	56
6.5 Removing and installing drive shafts on vehicles with automatic gearbox 09B	58
7 Repairing drive shafts	62
7.1 Repairing drive shaft, vehicles with manual gearbox 006 and automatic gearbox 099	62
7.2 Checking outer constant velocity joint	67
7.3 Checking inner constant velocity joint	67
7.4 Repairing drive shaft from model year 2001	69
7.5 Repairing drive shaft with triple roller joint AAR 3300i	75
<b>42 - Rear suspension</b>	<b>82</b>
1 Appraisal of accident vehicles	82
2 Repairing rear suspension	83
2.1 Assembly overview - rear axle beam, front-wheel drive	83
2.2 Assembly overview - rear axle beam, syncro	87
2.3 Removing and installing rear wishbone	91
2.4 Repairing welded nut in longitudinal member/sill	94
2.5 Repairing thread in cross member	96
2.6 Aligning axle beam to vehicle	97
2.7 Removing and installing shock absorber/spring	98
3 Repairing rear wheel bearing	100
3.1 Pressing rear wheel bearing out and in with V.A.G 1459 B	103
4 Removing and installing rear drive shaft	109



4.1	Removing	109
4.2	Installing	109
<b>5</b>	<b>Repairing rear drive shaft</b>	<b>111</b>
5.1	Checking inner constant velocity joint	114
<b>44</b>	<b>Wheels, tyres, vehicle geometry</b>	<b>116</b>
<b>1</b>	<b>Appraisal of accident vehicles</b>	<b>116</b>
<b>2</b>	<b>Tightening torques for wheel bolts</b>	<b>117</b>
2.1	Modified wheel bolts from model year 2001	117
<b>3</b>	<b>Wheel alignment</b>	<b>118</b>
3.1	General	118
3.2	Test prerequisites	119
3.3	Test preparations	120
3.4	Measuring ride height	120
3.5	Specifications for wheel alignment, vehicles with front and four-wheel drive	122
3.6	Overview - wheel alignment procedure	122
3.7	Measuring vehicle longitudinal inclination	124
3.8	Adjusting toe	124
3.9	Checking left and right-hand wheel lock	124
<b>4</b>	<b>Wheels, tyres</b>	<b>126</b>
4.1	Models with breakdown set	126
4.2	Assembly overview - breakdown set	126
4.3	Renewing bottle with tyre sealant	127
4.4	Removing a tyre	129
4.5	Fitting a new tyre	130
4.6	Disposal of tyre sealant	130
<b>5</b>	<b>Instructions for changing or fitting wheels</b>	<b>131</b>
5.1	Fitting wheels	132
<b>6</b>	<b>Protecting wheel centring seat against corrosion</b>	<b>133</b>
<b>7</b>	<b>Rough running due to wheels/tyres - causes and rectification</b>	<b>134</b>
7.1	Causes of rough running	134
7.2	Balancing wheels	134
7.3	Conducting a road test before balancing wheels	135
7.4	Balancing wheels on stationary wheel balancing machine	135
7.5	Vibration control system VAS 6230	137
7.6	Finish balancer	137
7.7	Radial and lateral runout of wheels and tyres	138
7.8	Checking radial and lateral runout on wheels and tyres with tyre gauge V.A.G 1435	138
7.9	Checking radial and lateral runout on wheel	139
7.10	Matching	140
7.11	Flat spots caused by storage or handling	141
<b>48</b>	<b>Steering</b>	<b>143</b>
<b>1</b>	<b>Appraisal of accident vehicles</b>	<b>143</b>
<b>2</b>	<b>Column tube with steering column to model year 2000</b>	<b>144</b>
2.1	Removing and installing column tube with steering column	144
2.2	Assembly overview - steering column, column tube	147
2.3	Dismantling and assembling column tube	148
<b>3</b>	<b>Airbag to model year 2000</b>	<b>152</b>
3.1	Location overview	152
3.2	Safety precautions when working on the airbag	152
3.3	Replacing airbag units following an accident	153
3.4	Removing and installing driver's airbag unit	153
3.5	Removing and installing steering wheel	155



3.6	Removing and installing coil connector with slip ring	155
<b>4</b>	<b>Airbag, steering wheel, steering column from model year 2001</b>	<b>157</b>
4.1	Driver side airbag unit	157
4.2	Removing and installing driver's airbag unit	158
4.3	Repairing 4 spoke steering wheel	161
4.4	Removing and installing column tube with steering column	161
4.5	Checking ignition key lock	165
4.6	Assembly overview - steering column, column tube	167
4.7	Dismantling column tube and steering column	168
4.8	Assembling column tube and steering column	169
<b>5</b>	<b>Repairing power assisted steering</b>	<b>171</b>
5.1	Removing and installing power assisted steering box to model year 2000	171
5.2	Removing and installing power assisted steering box from model year 2001	174
5.3	Assembly overview - power assisted steering box	178
5.4	Assembly overview - power assisted steering box (RHD)	180
5.5	Removing and installing track rod when steering box is installed	182
5.6	Checking and adjusting track rod length	184
<b>6</b>	<b>Vane pump, reservoir, hydraulic pipes</b>	<b>185</b>
6.1	Checking vane pump delivery pressure	185
6.2	Assembly overview - vane pump, hydraulic lines and reservoir to model year 2000	186
6.3	Assembly overview - vane pump with hydraulic lines from model year 2001	188
6.4	Dismantling and assembling reservoir	190
6.5	Checking hydraulic fluid level of power-assisted steering	191
6.6	Assembly overview - power assisted steering vane pump, vehicles fitted with 4-cyl. engines	192
6.7	Installing vane pump	194
6.8	Tensioning V-belt	195
6.9	Assembly overview - power assisted steering vane pump, vehicles fitted with VR6 engine	196
6.10	Removing and installing vane pump for vehicles with VR6 engines	197