



Contents

27 - Starter, current supply, CCS	1
1 Battery A	1
1.1 Fundamentals for batteries	1
1.2 Types of battery	1
1.3 Warning notices and safety regulations	1
1.4 Battery terminal connection	1
2 Checking battery	2
3 Charging battery	3
4 Disconnecting and reconnecting batteries	4
4.1 Disconnecting and reconnecting battery, vehicles with one-battery concept	4
4.2 Disconnecting and reconnecting second battery on vehicles with two-battery concept	6
4.3 Steps after connecting battery	7
5 Removing and installing battery	9
5.1 Removing and installing battery in engine compartment	9
5.2 Removing and installing second battery under front right seat	11
6 Specified torques: battery	14
7 Starter	15
7.1 Checking starter B	15
7.2 Removing and installing starter, vehicles ▶ 05.00	16
7.3 Removing and installing starter, vehicles 06.00 ▶	21
8 Specified torques: starter	25
8.1 General specified torques for all vehicles	25
8.2 Vehicles ▶ 05.00	25
8.3 Vehicles 06.00 ▶	25
9 Alternator C	27
9.1 Securing B+ (battery positive) wire to alternator	27
9.2 Checking poly V-belt	27
9.3 Checking alternator C	28
9.4 Characteristics of compact alternators with poly V-belt drive ▶ 05.00	29
9.5 Characteristics of compact alternators with poly V-belt drive 06.00 ▶	29
9.6 Alternator for 4-cylinder petrol injection engine ▶ 05.00	29
9.7 Alternator for 6-cylinder petrol injection engine ▶ 05.00	33
9.8 Alternator for 4-cylinder diesel engine ▶ 05.00	35
9.9 Alternator for 1.8 l, 2.0 l 4-cylinder petrol injection engines and 1.9 l 4-cylinder diesel engines 06.00 ▶	38
9.10 Alternator for 2.0 l 4-cylinder diesel engine	42
9.11 Alternator for 6-cylinder petrol injection engine 06.00 ▶	46
9.12 Removing and installing poly V-belt pulley on alternator	50
9.13 Voltage regulator for alternator	54
10 Specified torques: alternator	57
10.1 General specified torques for all vehicles	57
10.2 4-cylinder fuel injection engine ▶ 05.00	57
10.3 6-cylinder fuel injection engine ▶ 05.00	57
10.4 4-cylinder diesel engine ▶ 05.00	57
10.5 1.8 l, 2.0 l, 4-cylinder fuel injection engines and 1.9 l, 4-cylinder diesel engines 06.00 ▶	57
10.6 2.0 l 4-cylinder diesel engine	58
10.7 6-cylinder fuel injection engine 06.00 ▶	58
11 Cruise control system (CCS)	59
11.1 Cruise control system (CCS) for vehicles with petrol engine ▶ 05.00	59
11.2 Cruise control system (CCS) for vehicles with a TDI diesel engine ▶ 05.00	61
11.3 Cruise control system (CCS) for vehicles 06.00 ▶	62



11.4	Activating and deactivating cruise control system (CCS)	62
90	Gauges, instruments	63
1	Dash panel insert	63
1.1	Dash panel insert, vehicles ► 05.00	63
1.2	Dash panel insert, vehicles 06.00 ►	67
2	Service interval display	77
2.1	Resetting service interval display	77
92	Windscreen wash/wipe system	78
1	Windscreen wiper system	78
1.1	Removing windscreen wiper system (vehicles ► 09.98)	78
1.2	Dismantling windscreen wiper system (vehicles ► 09.98)	80
1.3	Installing windscreen wiper system (vehicles ► 09.98)	82
1.4	Removing windscreen wiper system (vehicles 10.98 ► 05.00)	84
1.5	Dismantling windscreen wiper system (vehicles 10.98 ► 05.00)	87
1.6	Installing windscreen wiper system (vehicles 10.98 ► 05.00)	89
1.7	Removing windscreen wiper system (vehicles 06.00 ► 04.01)	92
1.8	Dismantling windscreen wiper system (vehicles 06.00 ► 04.01)	94
1.9	Installing windscreen wiper system (vehicles 06.00 ► 04.01)	96
1.10	Removing windscreen wiper system (vehicles 05.01 ► 10.03)	99
1.11	Dismantling windscreen wiper system (vehicles 05.01 ► 10.03)	102
1.12	Installing windscreen wiper system (vehicles 05.01 ► 10.03)	105
1.13	Removing windscreen wiper system (vehicles 11.03 ►)	108
1.14	Dismantling windscreen wiper system (vehicles 11.03 ►)	111
1.15	Installing windscreen wiper system (vehicles 11.03 ►)	115
1.16	Removing and installing wiper rubber blade	118
1.17	Removing and installing aerodynamic wipers	119
1.18	Checking intermittent wiper regulator E38	119
2	Windscreen washer system	120
2.1	Assembly overview - windscreen washer system	120
2.2	Removing and installing reservoir for windscreen and headlight washer system	121
2.3	Removing and installing windscreen and rear window washer pump V59	122
2.4	Removing and installing windscreen washer fluid level sender G33	122
2.5	Removing and installing windscreen washer jets	123
2.6	Checking and adjusting windscreen washer system spray jets	126
3	Rear window wiper system	129
3.1	Removing and installing rear window wiper	129
3.2	Installing wiper arm	130
3.3	Adjusting rear window wiper park position	131
4	Rear window washer system	132
4.1	Assembly overview - rear window washer system	132
4.2	Renewing washer jet	133
4.3	Adjusting washer jet	134
5	Headlight washer system	135
5.1	Assembly overview - headlight washer system	135
5.2	Removing and installing headlight washer system pump V11	136
5.3	Removing and installing pop-up washer jet cylinder	137
5.4	Removing and installing washer jet assembly	137
5.5	Adjusting headlight washer system jets	138
5.6	Bleeding headlight washer system	139
6	Washer fluid line hose couplings	140
6.1	Headlight washer system	140
7	Hose repair	141



8	Specified torques: window wash/wipe system	142
8.1	Specified torques for vehicles ▶ 09.98	142
8.2	Specified torques for vehicles 10.98 ▶ 05.00	142
8.3	Specified torques for vehicles 06.00 ▶ 04.01	142
8.4	Specified torques for vehicles 05.01 ▶ 10.03	143
8.5	Specified torques for vehicles 11.03 ▶	143
94	Lights, bulbs, switches - exterior	144
1	Headlight	144
1.1	Assembly overview - headlight, vehicles ▶ 05.00	144
1.2	Assembly overview - headlight, vehicles 06.00 ▶	145
1.3	Removing and installing headlight housing, vehicles ▶ 05.00	146
1.4	Removing and installing headlight housing, vehicles 06.00 ▶	146
1.5	Removing and installing headlight lens glass, vehicles ▶ 05.00	147
1.6	Removing and installing reflector, vehicles ▶ 05.00	148
1.7	Removing and installing front turn signals, vehicles ▶ 05.00	149
1.8	Replacing headlight bulbs, vehicles ▶ 05.00	149
1.9	Replacing headlight bulbs, vehicles 06.00 ▶	150
1.10	Removing and installing headlight range control motor, vehicles ▶ 05.00	152
1.11	Removing and installing headlight range control motor, vehicles 06.00 ▶	153
1.12	Converting headlights for use when driving on the left or right (vehicles 06.00 ▶)	154
1.13	Adjusting headlight	157
2	Headlights with gas discharge bulbs, vehicles 06.00 ▶	158
2.1	Components and senders of headlights with gas discharge bulbs	158
2.2	Removing and installing headlight with gas discharge bulb	160
2.3	Renewing bulbs for gas discharge headlights	162
2.4	Removing and installing control unit for gas discharge lamp bulb and headlight range control	165
2.5	Removing and installing front left vehicle level sender G78 on front axle	166
2.6	Removing and installing rear left vehicle level sender G76 on rear axle	167
2.7	Removing and installing headlight range control motor	167
2.8	Adapting components, headlights with gas discharge bulbs	168
2.9	Converting headlights for use when driving on the left or right	169
2.10	Adjusting headlights with gas discharge bulb	171
3	Fog light	172
3.1	Removing and installing front fog light, vehicles ▶ 05.00	172
3.2	Removing and installing front fog light, vehicles 06.00 ▶	172
3.3	Replacing front fog light bulb, vehicles ▶ 05.00	173
3.4	Replacing front fog light bulb, vehicles 06.00 ▶	173
4	Side mounted repeater turn signals	174
4.1	Removing and installing side mounted repeater turn signal	174
5	Removing and installing turn signal bulb in exterior mirror	175
6	Rear lights	176
6.1	Assembly overview - rear light in side panel, vehicles ▶ 05.00	176
6.2	Assembly overview - rear light in side panel, vehicles 06.00 ▶ 10.03	177
6.3	Assembly overview - rear light in side panel, vehicles 11.03 ▶	178
6.4	Removing and installing rear light, vehicles ▶ 05.00	178
6.5	Removing and installing rear light, vehicles 06.00 ▶ 10.03	179
6.6	Removing and installing rear light, vehicles 11.03 ▶	180
6.7	Removing and installing rear light bulb holder, vehicles ▶ 05.00	181
6.8	Removing and installing rear light bulb holder, vehicles 06.00 ▶ 10.03	181
6.9	Removing and installing rear light bulb holder, vehicles 11.03 ▶	182
6.10	Assembly overview - rear light in rear lid, vehicles ▶ 05.00	182
6.11	Assembly overview - rear light in rear lid, vehicles 11.03 ▶	183
6.12	Removing and installing rear light bulb holder in rear lid, vehicles ▶ 05.00	184



6.13	Removing and installing rear light bulb holder in rear lid, vehicles 06.00 ► 10.03	184
6.14	Removing and installing rear light bulb holder in rear lid, vehicles 11.03 ►	184
6.15	Removing and installing rear light in rear lid, vehicles ► 05.00	185
6.16	Removing and installing rear light in rear lid, vehicles 06.00 ► 10.03	185
6.17	Removing and installing rear light in rear lid, vehicles 11.03 ►	187
6.18	Dismantling rear light in rear lid, vehicles ► 10.03	188
6.19	Dismantling rear light in rear lid, vehicles 11.03 ►	188
7	Number plate light X	190
7.1	Removing and installing number plate light X, vehicles ► 05.00	190
7.2	Replacing number plate light X bulb, vehicles ► 05.00	190
7.3	Removing and installing number plate light X, vehicles ► 06.00	191
7.4	Removing and installing number plate light X, vehicles 11.03 ►	191
7.5	Replacing number plate light X bulb, vehicles 11.03 ►	192
8	Additional brake light	193
8.1	Removing and installing additional brake light bulb holder, vehicles ► 05.00	193
8.2	Removing and installing additional brake light housing, vehicles ► 05.00	194
8.3	Removing and installing additional brake light bulb holder, vehicles 06.00 ►	194
9	Steering column switch	196
9.1	Assembly overview - steering wheel, vehicles ► 05.00	196
9.2	Removing and installing steering wheel, vehicles ► 05.00	196
9.3	Removing and installing coil connector with slip ring, vehicles ► 05.00	197
9.4	Removing and installing steering column switch and steering lock housing with ignition switch, vehicles ► 05.00	197
9.5	Removing and installing steering column switch, vehicles 06.00 ►	199
9.6	Removing and installing signal horn activation, vehicles 06.00 ►	202
9.7	Pin assignment for steering column switch, vehicles 06.00 ►	203
10	Ignition/starter switch and lock cylinder	205
10.1	Removing and installing lock cylinder, vehicles ► 05.00	205
10.2	Removing and installing lock cylinder, vehicles 06.00 ►	206
10.3	Removing and installing ignition switch, vehicles 06.00 ►	208
10.4	Pin assignment for ignition/starter switch	208
11	Parking aid, vehicles 06.00 ►	209
11.1	General description	209
11.2	Assembly overview - parking aid	209
11.3	Removing and installing parking aid control unit	210
11.4	Removing and installing front parking aid sender	211
11.5	Removing and installing rear parking aid sender	211
11.6	Removing and installing rear parking aid warning buzzer	212
11.7	Removing and installing front parking aid warning buzzer	212
96 - Lights, bulbs, switches - interior		213
1	Immobilizer	213
1.1	Assembly overview - immobilizer	213
1.2	Removing and installing immobilizer control unit J362	214
1.3	Removing and installing immobilizer reader coil D2	215
1.4	Ignition key	215
2	Voltage converter	217
2.1	Removing and installing voltage converter	217
2.2	Pin assignment of voltage converter	217
3	Anti-theft alarm (ATA)	218
3.1	Removing and installing central locking and anti-theft alarm system control unit J379	219
3.2	Removing and installing immobilizer warning lamp K117	219
3.3	Removing and installing alarm horn H12 for anti-theft alarm system	220
3.4	Removing and installing left ultrasonic sensor for anti-theft alarm system G170 and right ultrasonic sensor for anti-theft alarm system G171	221



3.5	Removing and installing driver side central locking switch F59 and front passenger side central locking switch F114	221
3.6	Removing and installing central locking/anti-theft alarm system switch -F218- in rear lid	222
3.7	Removing and installing rear lid release switch E165	222
3.8	Removing and installing engine compartment light switch F214	223
3.9	Removing and installing door contact switch rear (rear lid) F160	223
4	Interior lights and switches	224
4.1	Removing and installing light switch	224
4.2	Removing and installing headlight range control adjuster E102	225
4.3	Removing and installing switches in centre of dash panel	226
4.4	Removing and installing interior light	227
4.5	Removing and installing sliding sunroof switch E8	228
4.6	Removing and installing glove compartment light W6	228
4.7	Removing and installing door contact switch	229
4.8	Removing and installing power window switch and mirror adjustment switch in doors	230
5	Horn and dual tone horn H1	232
5.1	Removing and installing treble horn H2 and bass horn H7	232
5.2	Removing and installing dual tone horn relay J4	233
6	Taxi equipment	234
7	Specified torques: lights, bulbs, switches - interior	235
7.1	Specified torque: dual tone horn	235
7.2	Specified torque: alarm horn H12	235
97 - Wiring		236
1	Vehicle diagnosis, test and information systems	236
1.1	Connecting vehicle diagnosis, testing and information system VAS 5051A and successor units	236
2	Relay carrier ▶ 08.97	237
2.1	Removing and installing relay carrier	237
2.2	Removing and installing multi-pin connector on back of relay carrier	238
3	Multifunction unit (electronic central electrics) 09.97 ▶	240
3.1	Removing and installing multifunction unit with relay carriers and fuse holder	240
3.2	Multifunction unit control unit J501	247
4	Wiring harness and connector repairs	249
5	Renewal of aerial wiring	250