



Contents

68 - Interior equipment	1
1 Interior mirror	1
1.1 Tools	1
1.2 Removing and installing interior mirror	1
1.3 Removing and installing automatic anti-dazzle interior mirror	2
1.4 Bonding on retaining plate for interior mirror without rain sensor	3
2 Compartments, covers and trims	5
2.1 Removing and installing centre console ▶ 05.00	5
2.2 Removing and installing centre console 06.00 ▶	6
2.3 Removing and installing handbrake lever handle and trim	7
2.4 Removing and installing centre dash panel ▶ 05.00	8
2.5 Removing and installing cover, driver side ▶ 05.00	8
2.6 Removing and installing storage compartment, front passenger side ▶ 05.00	9
2.7 Removing and installing cover, front passenger side ▶ 05.00	9
2.8 Removing and installing dash panel insert trim ▶ 05.00	10
2.9 Removing and installing sun visor	11
2.10 Removing and installing spectacles holder (in moulded headliner)	12
2.11 Removing and installing cup holder in side panel trim	12
2.12 Removing and installing storage compartment in side panel trim	13
3 Luggage compartment cover	15
3.1 Removing and installing luggage compartment cover	15
4 Grab handles	18
4.1 Removing and installing grab handle (roof) ▶ 05.00	18
4.2 Removing and installing grab handle (roof) 06.00 ▶	18
5 Sill panel trims	20
5.1 Assembly overview - sill panel trim	20
5.2 Removing and installing front sill panel moulding	20
5.3 Removing and installing rear sill panel moulding	22
69 - Passenger protection	24
1 Seat belts	24
1.1 Safety regulations for belt tensioners	24
1.2 Disposal of belt tensioner units	24
1.3 Assembly overview - front seat belt with belt tensioner	24
1.4 Assembly overview - belt inertia reel with tensioner unit	26
1.5 Removing and installing belt reel with tensioner unit	26
1.6 Assembly overview - outer seat belt, second seat row	28
1.7 Assembly overview - lap belt on single seat	29
1.8 Assembly overview - middle three-point seat belt, second seat row	29
1.9 Assembly overview - seat belt, third seat row	31
1.10 Seat belt of integrated child seat	32
2 Inspecting seat belts	33
2.1 Points to check	33
3 Airbag	37
3.1 Overview of locations ▶ 05.00	37
3.2 Overview of locations 06.00 ▶	37
3.3 Safety precautions when working on airbag	38
3.4 Deactivating the airbag	39
3.5 Renewing airbag units following an accident	40
3.6 Assembly overview - driver airbag unit ▶ 05.00	40
3.7 Removing and installing driver airbag unit ▶ 05.00	41
3.8 Assembly overview - driver airbag unit 06.00 ▶	43



3.9	Removing and installing driver airbag unit 06.00 ▶	43
3.10	Removing and installing steering wheel ▶ 05.00	46
3.11	Assembly overview - steering wheel 06.00 ▶	47
3.12	Removing and installing steering wheel 06.00 ▶	47
3.13	Removing and installing coil connector with slip ring ▶ 05.00	49
3.14	Removing and installing coil connector with slip ring 06.00 ▶	49
3.15	Assembly overview - front passenger airbag unit ▶ 05.00	51
3.16	Removing and installing front passenger airbag unit ▶ 05.00	52
3.17	Assembly overview - front passenger airbag unit 06.00 ▶	54
3.18	Removing and installing front passenger airbag unit 06.00 ▶	54
3.19	Assembly overview - driver/front passenger side airbag	56
3.20	Removing and installing driver and front passenger side airbag	56
3.21	Assembly overview - driver/front passenger side airbag sensor	60
3.22	Removing and installing sensor for driver's/front passenger's side airbag	60
3.23	Removing and installing sensor for driver's/front passenger's curtain airbag	62
3.24	Assembly overview - driver/front passenger curtain airbag	64
3.25	Removing and installing curtain airbag on driver and passenger side	64
3.26	Removing and installing airbag control unit J234 ▶ 05.00	67
3.27	Removing and installing airbag control unit J234 06.00 ▶	68
3.28	Adapting components	69
70	- Trim, insulation	70
1	Dash panel	70
1.1	Tools	70
1.2	Removing and installing dash panel ▶ 05.00	70
1.3	Removing and installing dash panel 06.00 ▶	78
1.4	Removing and installing assembly carrier 06.00 ▶	96
2	Door trims	103
2.1	Tools	103
2.2	Removing and installing front door trim ▶ 05.00	103
2.3	Removing and installing front door trim 06.00 ▶	105
2.4	Removing and installing rear door trim ▶ 05.00	108
2.5	Removing and installing rear door trim 06.00 ▶	110
2.6	Removing and installing door insulation film	112
3	Pillar and side trims	115
3.1	Tools	115
3.2	Removing and installing A-pillar trim ▶ 05.00	115
3.3	Removing and installing A-pillar trim 06.00 ▶	116
3.4	Removing and installing upper B-pillar trim	118
3.5	Removing and installing lower B-pillar trim	121
3.6	Removing and installing upper C-pillar trim	121
3.7	Removing and installing upper D-pillar trim	123
3.8	Removing and installing side panel trim	126
4	Luggage/load compartment trim	131
4.1	Tools	131
4.2	Removing and installing load edge cover	131
5	Rear lid trim	132
5.1	Removing and installing rear lid trim ▶ 05.00	132
5.2	Removing and installing rear lid trim 06.00 ▶	133
5.3	Removing and installing rear lid trim frame ▶ 05.00	134
5.4	Removing and installing rear lid trim frame 06.00 ▶	135
6	Roof trims	136
6.1	Removing and installing moulded headlining	136
72	- Seat frames	140



1	Front seats	140
1.1	Tools	140
1.2	Removing and installing front seat	140
1.3	Assembly overview - front backrest	143
1.4	Removing and installing front backrest	144
1.5	Assembly overview - seat frame	146
1.6	Dismantling and assembling seat frame	146
1.7	Assembly overview - swivel seat frame	148
1.8	Dismantling and assembling swivel seat frame	149
1.9	Assembly overview - backrest frame	151
2	Rear seats	153
2.1	Assembly overview - rear seats	153
2.2	Removing and installing rear seat	153
2.3	Assembly overview - rear backrest	157
2.4	Removing and installing rear backrest	157
2.5	Removing and installing integrated child seat	158
74 - Seat - padding, covers		159
1	Front seat covers and padding	159
1.1	Tools	159
1.2	Assembly overview - cover and padding for front seat	159
1.3	Removing and installing front seat cover and padding	160
1.4	Assembly overview - cover and padding for front backrest	161
1.5	Removing and installing front backrest cover and padding	162
2	Upholstery and padding of rear seats	165
2.1	Tools	165
2.2	Assembly overview - cover and padding for rear seat	165
2.3	Removing and installing cover and padding for rear seat	166
2.4	Assembly overview - cover and padding for rear backrest	167
2.5	Removing and installing cover and padding for rear backrest	168
3	Upholstery and padding for seat with integrated child seat	171
3.1	Tools	171
3.2	Assembly overview - cover and padding for seat with integrated child seat	171
3.3	Removing and installing cover and padding for seat with integrated child seat	172
3.4	Assembly overview - seat base with integrated child seat	173
3.5	Dismantling and assembling seat base of integrated child seat	174
3.6	Assembly overview - cover and padding for backrest with integrated child seat ▶ 12.02	175
3.7	Removing and installing cover and padding for backrest with integrated child seat ▶ 12.02	176
3.8	Assembly overview - cover and padding for backrest with integrated child seat 01.03 ▶	180
3.9	Removing and installing cover and padding for backrest with integrated child seat 01.03 ▶	181