



Contents

01 - Self-diagnosis	1
1 Self-diagnosis	1
1.1 Connecting fault reader	2
2 Self-diagnosis of airbag systems ► 05.00	5
2.1 Function	5
2.2 Coding airbag control unit using fault reader V.A.G 1551	7
2.3 Adaption	13
2.4 Reading measured value block	18
2.5 Test box VAS 5056	22
2.6 Final control diagnosis	23
3 Self-diagnosis of airbag systems 06.00 ►	25
3.1 Function	25
3.2 Coding airbag control unit	27
3.3 Adaption	34
3.4 Reading measured value block	39
3.5 Test box VAS 5056	44
3.6 Final control diagnosis	46
4 Self-diagnosis of central locking ► 07.97	48
4.1 Functional description	48
4.2 System active indicator	48
4.3 Initiating self-diagnosis of central locking	48
4.4 Overview of the selectable functions	50
4.5 Reading control unit version	50
4.6 Coding central locking control unit using fault reader V.A.G 1551	50
4.7 Additional functions	52
4.8 Checking infrared remote control and synchronising vehicle keys	53
4.9 Reading fault memory	53
4.10 Erasing fault memory	54
4.11 Functional check of CL system	55
4.12 Ending output	56
4.13 Fault table	56
4.14 Reading measured value block	60
4.15 Display group overview	61
4.16 Test table	63
5 Self-diagnosis for multifunction unit (electronic central electrics) 08.97 ►	66
5.1 Functional description	66
5.2 System active indicator	67
5.3 Initiating self-diagnosis for multifunction unit	67
5.4 Overview of the selectable functions	68
5.5 Reading control unit version	69
5.6 Coding multifunction unit using fault reader V.A.G 1551	70
5.7 Additional functions	71
5.8 Reading fault memory	73
5.9 Erasing fault memory	74
5.10 Ending output	75
5.11 Fault table	75
5.12 Final control diagnosis	84
5.13 Reading measured value block	85
5.14 Display group overview	86
6 Self-diagnosis for multifunction unit (electronic central electrics) 06.00 ►	101
6.1 Functional description	101
6.2 System active indicator	102



6.3	Initiating self-diagnosis for multifunction unit	103
6.4	Overview of the selectable functions	103
6.5	Reading control unit version	104
6.6	Coding multifunction unit using fault reader V.A.G 1551	105
6.7	Additional functions	106
6.8	Reading fault memory	108
6.9	Erasing fault memory	109
6.10	Ending output	110
6.11	Fault table	110
6.12	Final control diagnosis	119
6.13	Reading measured value block	120
6.14	Display group overview	121
6.15	Adaption for functional variants	137