



Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Gearbox identification	1
1.2 Code letters, gearbox allocation, ratios, capacities	2
2 Transmission layout	4
2.1 Transmission layout	4
3 Calculating overall ratio "i"	6
3.1 Calculating overall ratio "i"	6
4 General repair instructions	6
4.1 General repair instructions	6
30 - Clutch	9
1 Servicing clutch control	9
1.1 Servicing clutch control	9
1.2 Assembly overview - Pedal cluster	10
1.3 Removing and installing clutch pedal	12
1.4 Assembly overview - Hydraulics and clutch release mechanism	15
1.5 Removing and installing master cylinder	20
1.6 Removing and installing pipe/hose assembly	22
1.7 Bleeding clutch system	24
2 Servicing clutch	25
2.1 Servicing clutch	25
34 - Controls, Housing	30
1 Servicing gear selector mechanism	30
1.1 Servicing gear selector mechanism	30
1.2 Servicing gear stick and gear stick housing	31
1.3 Removing and installing gear stick and gear stick housing	35
1.4 Installing gear stick cover	39
1.5 Assembly overview: Removing and installing operating cables	40
1.6 Removing and installing operating cables	42
1.7 Adjusting gear selector mechanism	48
2 Removing and installing gearbox	50
2.1 Removing and installing gearbox	50
2.2 Removing and installing gearbox - Vehicles with 4 cylinder engine -	50
2.3 Removing and installing gearbox - Vehicles with 6 cylinder fuel injection engine -	68
3 Checking gearbox oil	87
3.1 Checking gearbox oil	87
4 Dismantling and assembling gearbox	88
4.1 Dismantling and assembling gearbox	88
4.2 Modifying gearbox holder 2004	92
4.3 Dismantling and assembling sequence	92
5 Servicing gearbox housing and clutch housing	99
5.1 Servicing gearbox housing and clutch housing	99
6 Dismantling and assembling gearbox selector mechanism	107
6.1 Dismantling and assembling gearbox selector mechanism	107
7 Dismantling and assembling internal selectors	111
7.1 Dismantling and assembling internal selectors	111
35 - Gears, Shafts	112
1 Dismantling and assembling input shaft	112
1.1 Dismantling and assembling input shaft	112



2	Adjusting input shaft	121
2.1	Adjusting input shaft	121
3	Dismantling and assembling output shaft (pinion shaft)	124
3.1	Dismantling and assembling output shaft (pinion shaft)	124
4	Adjusting output shaft	137
4.1	Adjusting output shaft	137
39	- Final drive, Differential rear	140
1	Removing and installing oil seals for drive shafts	140
1.1	Removing and installing oil seals for drive shafts	140
2	Dismantling and assembling differential	145
2.1	Dismantling and assembling differential	145
3	Adjustment overview	154
3.1	Adjustment overview	154
4	Adjusting differential	154
4.1	Adjusting differential	154