



Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Location on gearbox	1
1.2 Identification code, assembly allocation, ratios, capacities	2
2 Identifying rear final drive	5
2.1 Location on rear final drive	5
2.2 Identification code, assembly allocation, ratios, capacities	5
3 Overview - power transmission	7
4 Calculation of gear ratios	9
4.1 Notes on performance test	9
5 General repair notes	10
5.1 Contact corrosion!	10
30 - Clutch	14
1 Repairing clutch mechanism	14
1.1 Overview	14
1.2 Assembly overview - pedal cluster	15
1.3 Removing and installing mounting bracket	16
1.4 Removing and installing clutch pedal	20
1.5 Distinguishing between clutch pedal switches F36	24
1.6 Removing and installing clutch pedal switch F36 with rectangular housing	24
1.7 Removing and installing clutch pedal switch F36 with round housing	25
1.8 Adjusting clutch pedal travel	25
1.9 Removing and installing over-centre spring	26
1.10 Assembly overview - hydraulics (LHD)	29
1.11 Assembly overview - hydraulics (RHD)	32
1.12 Removing and installing master cylinder	34
1.13 Removing and installing pipe/hose line	38
1.14 Bleeding clutch system	41
2 Repairing clutch release mechanism	43
3 Repairing clutch	44
3.1 Checking and resetting adjuster ring of self-adjusting pressure plate in LUK clutches (vehicles with 6-cylinder engines)	46
34 - Controls, housing	49
1 Vehicle diagnosis testing and information system VAS 5051	49
1.1 Vehicle diagnosis testing and information system VAS 5051 : Connecting and selecting function	49
2 Electrical and electronic components and their locations	51
2.1 Removing and installing electrical and electronic components	53
2.2 Removing and installing Haldex coupling pump V181	54
3 Repairing selector mechanism	57
3.1 Installation position of selector mechanism	57
3.2 Removing and installing gear knob and cover	59
3.3 Repairing gear lever and selector housing	61
3.4 Assembly overview - removing and installing selector cables	63
3.5 Removing and installing selector housing and gear lever	66
3.6 Removing and installing selector cables	68
3.7 Adjusting selector mechanism, gearbox with retaining pin (through gearbox date 12 01 3)	74
3.8 Adjusting selector mechanism, gearboxes with angled rod (from gearbox date 13 01 3) ..	77
3.9 Functional check	80



4	Removing and installing gearbox	81
4.1	Identifying gearbox for removal and installation	81
4.2	Removing and installing gearbox (vehicles with 4-cylinder engine)	81
4.3	Removing and installing gearbox (vehicles with 6-cylinder engine)	102
5	Removing and installing bevel box	122
5.1	Removing	122
5.2	Specified torque	125
6	Checking oil level in manual gearbox with bevel box	127
7	Dismantling and assembling gearbox	129
7.1	Overview - gearbox	129
7.2	Assembly overview	130
7.3	Removing and installing gearbox housing and selector mechanism through gearbox date 12 01 3	131
7.4	Removing and installing gearbox housing and selector mechanism from gearbox date 13 01 3	133
7.5	Removing and installing input shaft, output shafts, differential, bevel box and selector rods	135
7.6	Installing to engine and gearbox support	138
7.7	Dismantling and assembling procedure through gearbox date 12 01 3	139
7.8	Dismantling and assembling procedure from gearbox date 13 01 3 through gearbox date 13 01 8	146
7.9	Dismantling and assembling procedure from gearbox date 14 01 8 (Gearbox »with« retaining ring A for input shaft sealing cover)	159
8	Repairing gearbox housing	173
8.1	Repairing gearbox housing, through gearbox date 12 01 3	173
8.2	Repairing gearbox housing, from gearbox date 13 01 3 onwards	177
9	Repairing clutch housing	188
9.1	Repairing clutch housing, through gearbox date 12 01 3	188
9.2	Repairing clutch housing, from gearbox date 13 01 3 onwards	192
10	Dismantling and assembling selector mechanism on gearbox side	198
10.1	Dismantling and assembling selector mechanism on gearbox side, through gearbox date 12 01 3	198
10.2	Dismantling and assembling selector mechanism on gearbox side, from gearbox date 13 01 3	200
11	Repairing selector forks	204
11.1	Repairing selector forks, through gearbox date 12 01 3	204
11.2	Repairing selector forks, from gearbox date 13 01 3 onwards	206
35 - Gears, shafts		209
1	Input shaft	209
1.1	Dismantling and assembling input shaft, through gearbox date 12 01 3	209
1.2	Adjusting input shaft, through gearbox date 12 01 3	216
1.3	Dismantling and assembling input shaft from gearbox date 13 01 3	220
2	Output shaft for 1st through 4th gears	228
2.1	Assembly overview - output shaft for 1st through 4th gears	228
2.2	Dismantling and assembling output shaft for 1st through 4th gears	230
2.3	Adjusting output shaft for 1st through 4th gears	248
3	Output shaft for 5th, 6th and reverse gears	254
3.1	Assembly overview - output shaft for 5th, 6th and reverse gears	254
3.2	Dismantling and assembling output shaft for 5th, 6th and reverse gears	256
3.3	Adjusting output shaft for 5th, 6th and reverse gears	265
39 - Final drive - rear differential		270
1	Propshaft	270
1.1	Removing and installing propshaft	270



1.2	Removing and installing rear flexible coupling	273
1.3	Repairing propshaft	276
2	Checking function of Haldex coupling	284
3	Oil seals	285
3.1	Renewing seal for propshaft flange on removed rear final drive	285
3.2	Renewing oil seals for flange shafts on installed rear final drive	287
4	Renew O-rings	290
4.1	Renewing O-ring between Haldex coupling and pinion housing (final drive removed)	290
4.2	Renewing O-rings for rear final drive housing cover with final drive installed	292
5	Removing and installing rear final drive	294
5.1	Removing	294
5.2	Installing	296
5.3	Specified torque	297
6	Check gear oil in rear final drive	298
7	Checking oil level or changing oil in Haldex coupling	299
7.1	Checking oil level in Haldex coupling	299
7.2	Changing oil in Haldex coupling	300
7.3	Changing oil filter for Haldex coupling	301
8	Dismantling and assembling rear final drive	303
8.1	Assembly overview	303
8.2	Removing and installing cover for Haldex coupling and plates	304
8.3	Removing and installing pinion housing	305
8.4	Removing and installing differential and bevel gear with stub shaft	307
8.5	Removing and installing cover for Haldex coupling from plate housing	310
8.6	Dismantling and assembling procedure	313
9	Differential for rear final drive	325
9.1	Dismantling and assembling differential	325
10	Repair shaft bevel gear mounting	330
10.1	Assembly overview	330
11	Repairing bearings for bevel gear with stub shaft	341
11.1	Assembly overview	341
12	Adjusting shaft bevel gear and bevel gear with stub shaft (final drive gear set)	349
12.1	General notes	349
12.2	Adjustment and marking of final drive gear sets	349
12.3	Position of shims	352
12.4	Adjustment overview - rear final drive	352
12.5	Recommended sequence for new adjustment of final drive gear set	353
12.6	Adjusting shaft bevel gear	353
12.7	Adjusting bevel gear (with stub shaft)	359
39 - Final drive - front differential		364
1	Renewing flange shaft oil seals with gearbox and bevel box installed	364
1.1	Renewing oil seal for left flange shaft	364
1.2	Renewing seal for right flange shaft	366
2	Renewing bevel box output flange oil seal (bevel box removed)	369
2.1	Removing	370
2.2	Installing	371
3	Differential for manual gearbox	372
3.1	Dismantling and assembling differential	372
3.2	Adjusting differential	380
4	Adjustment overview - manual gearbox	385
5	Bevel box	386
5.1	Dismantling and assembling bevel box	386



6	Adjusting shaft bevel gear and bevel gear with stub shaft (final drive gear set)	403
6.1	General notes	403
6.2	Adjustment and marking of final drive gear sets	403
6.3	Position of shims	404
6.4	Adjustment overview - bevel box	404
6.5	Recommended sequence for new adjustment of final drive gear set	405
6.6	Determining shim "S4" thickness when renewing output flange	405
6.7	Adjusting shaft bevel gear	406
6.8	Adjusting bevel gear (with stub shaft)	412