



Contents

01 - Self-diagnosis, Electrical check	1
1 Self-diagnosis function	1
1.1 Self-diagnosis function	1
1.2 Technical data of self-diagnosis	3
1.3 Self-diagnosis - Guide	3
2 Locations of electrical/electronic components	5
2.1 Locations of electrical/electronic components	5
3 Performing self-diagnosis	18
3.1 Performing self-diagnosis	18
3.2 Safety precautions	18
3.3 Connecting vehicle diagnosis, testing and information system VAS 5051	18
3.4 Connecting fault reader V.A.G 1551 and selecting functions	19
3.5 Automatic test sequence	20
3.6 List of selectable functions	22
3.7 Interrogating fault memory	22
4 Fault table	23
4.1 Fault table	23
5 Erasing fault memory	28
5.1 Erasing fault memory	28
6 Initiating basic setting	29
6.1 Initiating basic setting	29
7 Read measured value block	29
7.1 Read measured value block	29
7.2 Test table	31
7.3 Checking solenoid valves whilst driving	34
8 End output	43
8.1 End output	43
9 Gearbox: Electrical check	44
9.1 Gearbox: Electrical check	44
9.2 Electrical check	45
9.3 Test table	47
10 Definitions	51
10.1 Definitions	51