



Contents

01 - Self-diagnosis, Electrical check	1
1 Self-diagnosis function	1
1.1 Self-diagnosis function	1
1.2 Technical data of self-diagnosis	2
1.3 Self-diagnosis - Guide	3
2 Locations of electrical/electronic components	4
2.1 Locations of electrical/electronic components	4
3 Performing self-diagnosis	16
3.1 Performing self-diagnosis	16
3.2 Connecting fault reader V.A.G 1551 and selecting functions	16
3.3 List of selectable functions	18
3.4 Interrogating fault memory	18
3.5 Fault table	19
3.6 Erasing fault memory	24
3.7 Initiating basic setting	25
3.8 Read measured value block	26
3.9 Test table	27
4 Gearbox: Electrical test	35
4.1 Gearbox: Electrical test	35
4.2 Electrical check	36
4.3 Test table	38