



## Contents

<b>01 - Self-diagnosis, Electrical check</b> .....	<b>1</b>
<b>1 Self-diagnosis function</b> .....	<b>1</b>
1.1 Self-diagnosis function .....	1
1.2 Data bus .....	1
1.3 Technical data of self-diagnosis .....	3
1.4 Self-diagnosis - Guide .....	4
<b>2 Performing self-diagnosis</b> .....	<b>5</b>
2.1 Performing self-diagnosis .....	5
<b>3 Fault table</b> .....	<b>8</b>
3.1 Fault table .....	8
<b>4 Erasing fault memory</b> .....	<b>13</b>
4.1 Erasing fault memory .....	13
<b>5 Initiating basic setting</b> .....	<b>14</b>
5.1 Initiating basic setting .....	14
<b>6 Read measured value block</b> .....	<b>15</b>
6.1 Read measured value block .....	15
6.2 Test table .....	16
<b>7 End output</b> .....	<b>25</b>
7.1 End output .....	25
<b>8 Gearbox: Electrical check</b> .....	<b>26</b>
8.1 Gearbox: Electrical check .....	26
8.2 Electrical test for vehicles with 5-speed automatic gearbox 09B .....	28
8.3 Test table .....	29
<b>9 Definitions</b> .....	<b>32</b>
9.1 Definitions .....	32