



## Contents

<b>01 - Self-diagnosis</b> .....	<b>1</b>
<b>1 Self-diagnosis</b> .....	<b>1</b>
1.1 Self-diagnosis .....	1
1.2 Features of self-diagnosis .....	1
1.3 Technical data of self-diagnosis .....	1
1.4 Connecting fault reader .....	2
<b>2 Fault memory</b> .....	<b>5</b>
2.1 Fault memory .....	5
2.2 Automatic test sequence for interrogating all fault memories .....	5
2.3 Interrogating fault memory .....	6
2.4 Erasing fault memory .....	7
<b>3 Fault table: Fault codes 00515...01282</b> .....	<b>8</b>
3.1 Fault table: Fault codes 00515...01282 .....	8
<b>4 Fault table: Fault codes 16485...17849</b> .....	<b>9</b>
4.1 Fault table: Fault codes 16485...17849 .....	9
<b>5 Fault table: Fault codes 17910...19561</b> .....	<b>16</b>
5.1 Fault table: Fault codes 17910...19561 .....	16
<b>6 Final control diagnosis</b> .....	<b>23</b>
6.1 Final control diagnosis .....	23
6.2 Performing final control diagnosis .....	23
<b>7 Measured value blocks</b> .....	<b>26</b>
7.1 Measured value blocks .....	26
7.2 Safety precautions .....	26
7.3 Reading measured value block .....	26
7.4 Evaluating measured value blocks at idling speed and ignition on .....	27
7.5 Reading measured value blocks at full load/throttle .....	34
<b>23 - Mixture preparation, Injection</b> .....	<b>39</b>
<b>1 Servicing Diesel direct injection system</b> .....	<b>39</b>
1.1 Servicing Diesel direct injection system .....	39
1.2 Safety precautions .....	39
1.3 Rules for cleanliness .....	39
1.4 Fitting locations overview .....	40
1.5 Servicing intake manifold flap .....	43
1.6 Servicing unit injector .....	45
1.7 Removing and installing O rings for unit injector .....	48
1.8 Removing and installing unit injector .....	50
<b>2 Checking components and functions</b> .....	<b>54</b>
2.1 Checking components and functions .....	54
2.2 Checking Diesel direct injection system voltage supply .....	54
2.3 Checking engine speed sender .....	55
2.4 Checking intake manifold pressure sender and elevation sender .....	57
2.5 Checking coolant temperature sender .....	59
2.6 Checking brake light switch and brake pedal switch .....	62
2.7 Checking clutch pedal switch .....	63
2.8 Checking intake manifold temperature sender .....	65
2.9 Checking fuel temperature sender .....	67
2.10 Checking air mass meter .....	69
2.11 Checking intake manifold flap change-over .....	71
2.12 Checking unit injector valves .....	75
2.13 Checking camshaft position Hall sender .....	78
<b>3 Checking additional signals</b> .....	<b>79</b>



3.1	Checking additional signals . . . . .	79
3.2	Checking speed signal . . . . .	79
3.3	Checking signals from/to air conditioning system . . . . .	80
3.4	Checking engine speed signal . . . . .	83
3.5	Checking cruise control system (CCS) . . . . .	84
<b>4</b>	<b>Engine control unit . . . . .</b>	<b>85</b>
4.1	Engine control unit . . . . .	85
4.2	Replacing engine control unit . . . . .	85
4.3	Coding engine control unit . . . . .	86
4.4	Checking matching resistor of data bus . . . . .	87
<b>28</b>	<b>Glow plug system . . . . .</b>	<b>89</b>
<b>1</b>	<b>Checking glow plug system . . . . .</b>	<b>89</b>
1.1	Checking glow plug system . . . . .	89
1.2	Checking glow plugs . . . . .	89