



Contents

| | |
|--|-----------|
| 01 - Self diagnosis | 1 |
| 1 Self diagnosis | 1 |
| 1.1 Self diagnosis | 1 |
| 1.2 Function | 1 |
| 1.3 Technical data of self diagnosis | 1 |
| 1.4 Connecting fault reader V.A.G 1551 and selecting engine electronics control unit | 2 |
| 1.5 Coding Simos control unit | 3 |
| 1.6 Interrogating and erasing fault memory | 4 |
| 1.7 Fault table | 6 |
| 1.8 Final control diagnosis | 12 |
| 1.9 Read measured value block and basic settings | 16 |
| 1.10 Display group overview | 16 |
| 24 - Mixture preparation, Injection | 19 |
| 1 Simos injection and ignition system | 19 |
| 1.1 Simos injection and ignition system | 19 |
| 1.2 Fitting locations overview | 19 |
| 1.3 Servicing injection part | 22 |
| 1.4 Dismantling and assembling intake manifold - Upper part | 29 |
| 1.5 Dismantling and assembling intake manifold - Lower part | 31 |
| 1.6 Dismantling and assembling air cleaner | 32 |
| 1.7 Safety precautions | 34 |
| 1.8 Rules for cleanliness | 34 |
| 1.9 Technical data | 34 |
| 1.10 Idling check | 35 |
| 1.11 Performing basic setting | 36 |
| 1.12 Checking Lambda probe and Lambda control | 37 |
| 1.13 Checking Lambda probe heating | 40 |
| 1.14 Checking engine operating mode | 42 |
| 1.15 Checking air mass meter | 43 |
| 1.16 Checking throttle valve control part | 46 |
| 1.17 Checking coolant temperature sender | 52 |
| 1.18 Checking intake air temperature sender | 55 |
| 1.19 Checking engine speed sender | 57 |
| 1.20 Checking speed signal | 58 |
| 1.21 Checking control unit voltage supply | 61 |
| 1.22 Matching engine electronic control unit to electronic immobilizer | 62 |
| 1.23 Checking signal from air conditioner compressor | 63 |
| 1.24 Checking starter signal | 64 |
| 1.25 Checking injectors | 65 |
| 1.26 Checking fuel pressure regulator and holding pressure | 68 |
| 1.27 Checking intake air system for leaks (unmetered air) | 70 |
| 28 - Ignition system | 71 |
| 1 Simos injection and ignition system | 71 |
| 1.1 Simos injection and ignition system | 71 |
| 1.2 Servicing ignition part | 71 |
| 1.3 Safety precautions | 75 |
| 1.4 Test data, spark plugs | 75 |
| 1.5 Checking position of distributor | 75 |
| 1.6 Removing and installing distributor | 76 |
| 1.7 Checking Hall sender | 79 |
| 1.8 Checking knock sensor | 81 |
| 1.9 Checking ignition transformer | 82 |



1.10 Checking ignition transformer output stage83