



## Contents

<b>01 - Self-diagnosis</b> .....	<b>1</b>
<b>1 Self-diagnosis</b> .....	<b>1</b>
1.1 Self-diagnosis .....	1
1.2 Function .....	1
1.3 Technical data of self-diagnosis .....	1
1.4 Connecting fault reader V.A.G 1551 and selecting engine electronics control unit .....	2
1.5 Coding control unit .....	4
1.6 Interrogating and erasing fault memory .....	5
1.7 Fault table .....	6
1.8 Final control diagnosis .....	16
<b>2 Measured value blocks</b> .....	<b>23</b>
2.1 Measured value blocks .....	23
2.2 Safety precautions .....	23
2.3 Read measured value block .....	23
2.4 Display group overview .....	24
<b>24 - Mixture preparation, Injection</b> .....	<b>31</b>
<b>1 Motronic injection and ignition system</b> .....	<b>31</b>
1.1 Motronic injection and ignition system .....	31
1.2 Fitting locations overview .....	31
1.3 Servicing injection part .....	34
1.4 Removing and installing control unit, Lambda probe, coolant temperature sender and engine speed sender .....	36
1.5 Dismantling and assembling fuel manifold and intake manifold upper and lower parts .....	40
1.6 Removing and installing throttle valve control part .....	45
1.7 Removing and installing air cleaner, air mass meter and crankcase breather heater element .....	49
1.8 Safety precautions .....	53
1.9 Rules for cleanliness .....	53
1.10 Technical data .....	53
1.11 Idling check .....	54
1.12 Performing basic setting .....	55
1.13 Checking Lambda probe and Lambda control .....	56
1.14 Checking Lambda probe heating .....	59
1.15 Checking engine operating mode .....	61
1.16 Checking air mass meter .....	63
1.17 Checking throttle valve control part .....	66
1.18 Checking coolant temperature sender .....	74
1.19 Checking intake manifold temperature sender .....	76
1.20 Checking engine speed sender .....	79
1.21 Checking speed signal .....	81
1.22 Checking control unit voltage supply .....	83
1.23 Matching engine electronic control unit to electronic immobilizer .....	84
1.24 Checking signal from air conditioner compressor .....	85
1.25 Removing and installing injectors .....	87
1.26 Checking injectors .....	88
1.27 Checking fuel pressure regulator and holding pressure .....	91
1.28 Checking intake air system for leaks (unmetered air) .....	93
<b>28 - Ignition system</b> .....	<b>95</b>
<b>1 Motronic injection and ignition system</b> .....	<b>95</b>
1.1 Motronic injection and ignition system .....	95
1.2 Servicing ignition part .....	95
1.3 Safety precautions .....	100



1.4	Test data, spark plugs . . . . .	101
1.5	Checking Hall sender . . . . .	101
1.6	Checking knock sensors . . . . .	103
1.7	Checking ignition transformer . . . . .	105