



Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Engine number	1
1.3 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing and installing engine	3
1.2 Notes on removing	4
1.3 Securing engine to assembly stand	9
1.4 Notes on installing	10
1.5 Tightening torques	14
1.6 Assembly mountings	14
1.7 Additional information and removal instructions for vehicles with air conditioner	16
13 - Crankshaft group	17
1 Dismantling and assembling engine	17
1.1 Dismantling and assembling engine	17
1.2 Removing and installing ribbed belt	28
2 Removing and installing sealing flanges and flywheel/drive plate	30
2.1 Removing and installing sealing flanges and flywheel/drive plate	30
2.2 Renewing crankshaft oil seal -belt pulley end-	34
2.3 Removing and installing sealing flange -belt pulley end-	38
2.4 Removing and installing drive plate	40
3 Removing and installing crankshaft	43
3.1 Removing and installing crankshaft	43
3.2 Colour markings	47
3.3 Crankshaft dimensions	47
4 Dismantling and assembling pistons and conrods	48
4.1 Dismantling and assembling pistons and conrods	48
4.2 Piston and cylinder dimensions	55
15 - Cylinder head, Valve gear	56
1 Removing and installing cylinder head	56
1.1 Removing and installing cylinder head	56
1.2 Removing, installing and tensioning toothed belts	60
1.3 Removing and installing cylinder head	68
1.4 Checking compression pressures	75
2 Servicing valve gear	77
2.1 Servicing valve gear	77
2.2 Reworking valve seats	87
2.3 Renewing camshaft oil seal	89
2.4 Checking hydraulic bucket tappets	95
2.5 Removing and installing camshaft	96
2.6 Checking valve guides	102
2.7 Replacing valve stem seals	103
17 - Lubrication	106
1 Removing and installing parts of the lubrication system	106
1.1 Removing and installing parts of the lubrication system	106
1.2 Dismantling and assembling oil filter bracket: engine code AJH	113
1.3 Dismantling and assembling oil filter bracket: engine code AWC	118



1.4	Removing and installing sump	123
1.5	Checking oil pressure and oil pressure switch: engine code AJH	126
1.6	Checking oil pressure and oil pressure switch: engine code AWC	128
19	- Cooling system	130
1	Removing and installing parts of cooling system	130
1.1	Removing and installing parts of cooling system	130
1.2	Parts of cooling system body side: engine code AJH	131
1.3	Parts of cooling system body side: engine code AWC	134
1.4	Parts of cooling system engine side: engine code AJH	138
1.5	Parts of cooling system engine side: engine code AWC	142
1.6	Coolant hose connection diagram: engine code AJH	148
1.7	Coolant hose connection diagram: engine code AWC	150
1.8	Draining and filling cooling system	152
1.9	Removing and installing radiator	156
1.10	Removing and installing coolant pump	159
1.11	Removing and installing thermostat	161
1.12	Checking coolant circulation pump	162
20	- Fuel supply system	166
1	Removing and installing parts of fuel supply system	166
1.1	Removing and installing parts of fuel supply system	166
1.2	Removing and installing fuel tank with attachments and fuel filter: engine code AJH	167
1.3	Removing and installing fuel tank with attachments and fuel filter: engine code AWC	175
1.4	Safety precautions when working on the fuel supply system	182
1.5	Rules for cleanliness	183
1.6	Removing and installing fuel delivery unit	183
1.7	Removing and installing fuel gauge sender: engine code AWC	185
1.8	Crash fuel shut-off: engine code AWC	186
1.9	Checking fuel pump	187
2	Accelerator mechanism: engine code AJH	195
2.1	Accelerator mechanism: engine code AJH	195
2.2	Servicing accelerator mechanism	195
2.3	Adjusting throttle cable	197
3	Electronic power control (EPC): engine code AWC	199
3.1	Electronic power control (EPC): engine code AWC	199
3.2	Function of EPC system	199
3.3	Servicing parts of electronic power control (EPC)	200
3.4	Checking accelerator pedal position sender	201
4	Activated charcoal filter system	204
4.1	Activated charcoal filter system	204
4.2	Function	204
4.3	Servicing parts of the activated charcoal filter system: engine code AJH	206
4.4	Servicing parts of the activated charcoal filter system: engine code AWC	209
4.5	Checking activated charcoal filter solenoid valve 1: engine code AWC	212
4.6	Checking fuel tank breather: engine code AJH	214
4.7	Checking fuel tank breather: engine code AWC	215
21	- Charging	218
1	Charge air system with turbocharger	218
1.1	Charge air system with turbocharger	218
1.2	Removing and installing turbocharger and attachments	219
1.3	Removing and installing parts of charge air cooling: Engine code AJH	225
1.4	Removing and installing parts of charge air cooling: engine code AWC	228
1.5	Overview of turbocharging: engine code AJH	233
1.6	Overview of turbocharging: engine code AWC	236
1.7	Rules for cleanliness	240



1.8	Safety precautions	240
1.9	Removing and installing charge air cooler: engine code AWC	240
2	Checking charge air system: engine code AJH	242
2.1	Checking charge air system: engine code AJH	242
2.2	Checking charge pressure regulation	242
2.3	Checking charge pressure control solenoid valve	243
2.4	Checking pressure unit for charge pressure regulating valve	244
2.5	Checking overrun shut-off valve	245
3	Checking charge pressure system: engine code AWC	246
3.1	Checking charge pressure system: engine code AWC	246
3.2	Checking charge pressure regulation	246
3.3	Checking charge pressure control solenoid valve	248
3.4	Checking charge pressure sender	250
3.5	Checking pressure unit for charge pressure regulating valve	253
3.6	Checking overrun shut-off valve	254
26	- Exhaust system	256
1	Removing and installing parts of exhaust system	256
1.1	Removing and installing parts of exhaust system	256
1.2	Front exhaust pipe and catalyst with attachments	257
1.3	Silencer with mountings	262
2	Secondary air system: engine code AJH	263
2.1	Secondary air system: engine code AJH	263
2.2	Function	264
2.3	Removing and installing parts of the secondary air system	264
2.4	Checking combi-valve	268
3	Secondary air system: engine code AWC	269
3.1	Secondary air system: engine code AWC	269
3.2	Function	269
3.3	Removing and installing parts of the secondary air system	270
3.4	Checking secondary air pump motor	274
3.5	Checking combi-valve	276
4	Exhaust gas recirculation system: engine code AWC	277
4.1	Exhaust gas recirculation system: engine code AWC	277
4.2	Servicing parts of exhaust gas recirculation system	278
4.3	Checking potentiometer for exhaust gas recirculation	281