



Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Engine number	1
1.3 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing and installing engine	3
1.2 Notes on removing	4
1.3 Securing engine to assembly stand	7
1.4 Notes on installing	8
1.5 Tightening torques	10
1.6 Assembly mountings	11
1.7 Additional information and removal instructions for vehicles with air conditioner	12
13 - Crankshaft group	13
1 Dismantling and assembling engine	13
1.1 Dismantling and assembling engine	13
1.2 Removing and installing ribbed belt	23
2 Removing and installing sealing flange and pressure plate/drive plate	25
2.1 Removing and installing sealing flange and pressure plate/drive plate	25
2.2 Renewing crankshaft oil seal -belt pulley end	28
2.3 Removing and installing front sealing flange	31
2.4 Removing and installing drive plate	33
3 Removing and installing crankshaft	36
3.1 Removing and installing crankshaft	36
3.2 Crankshaft dimensions	39
4 Dismantling and assembling pistons and conrods	40
4.1 Dismantling and assembling pistons and conrods	40
4.2 Piston and cylinder dimensions	45
15 - Cylinder head, Valve gear	46
1 Removing and installing cylinder head	46
1.1 Removing and installing cylinder head	46
1.2 Removing, installing and tensioning toothed belt	49
1.3 Checking semi-automatic toothed belt tensioning roller	54
1.4 Removing and installing cylinder head	55
1.5 Checking compression pressures	59
2 Servicing valve gear	61
2.1 Servicing valve gear	61
2.2 Reworking valve seats	66
2.3 Replacing camshaft oil seal	68
2.4 Removing and installing camshaft	71
2.5 Checking hydraulic bucket tappets	74
2.6 Checking valve guides	75
2.7 Renewing valve guides	76
2.8 Renewing valve stem seals	77
17 - Lubrication	80
1 Removing and installing parts of the lubrication system	80
1.1 Removing and installing parts of the lubrication system	80
1.2 Removing and installing sump	88



1.3	Checking oil pressure and oil pressure switch	91
19	- Cooling system	93
1	Removing and installing parts of cooling system	93
1.1	Removing and installing parts of cooling system	93
1.2	Parts of cooling system body side	94
1.3	Parts of cooling system engine side	97
1.4	Coolant hose connection diagram	102
1.5	Draining and filling cooling system	104
1.6	Removing and installing radiator	107
1.7	Removing and installing coolant pump	108
1.8	Removing and installing thermostat	110
1.9	Checking coolant circulation pump (V50)	111
20	- Fuel supply system	114
1	Removing and installing parts of fuel supply system	114
1.1	Removing and installing parts of fuel supply system	114
1.2	Removing and installing fuel tank with its attachments and fuel filter	115
1.3	Safety precautions when working on the fuel supply system	121
1.4	Rules for cleanliness	122
1.5	Removing and installing fuel delivery unit	122
1.6	Removing and installing fuel gauge sender	124
1.7	Crash fuel shut-off	124
1.8	Checking fuel pump	125
2	Electronic power control (EPC)	132
2.1	Electronic power control (EPC)	132
2.2	Function of EPC system	132
2.3	Servicing parts of electronic power control (EPC)	133
2.4	Checking accelerator pedal position sender	134
3	Activated charcoal filter system	137
3.1	Activated charcoal filter system	137
3.2	Function	137
3.3	Servicing parts of the activated charcoal filter system	138
3.4	Checking activated charcoal filter solenoid valve 1	140
3.5	Checking fuel tank breather	141
26	- Exhaust system	144
1	Removing and installing parts of exhaust system	144
1.1	Removing and installing parts of exhaust system	144
1.2	Exhaust manifold, front exhaust pipe and catalyst with attachments	145
1.3	Silencer with mountings	149
2	Secondary air system	151
2.1	Secondary air system	151
2.2	Function	151
2.3	Removing and installing parts of the secondary air system	152
2.4	Checking secondary air pump motor	155
2.5	Checking combi-valve	157
3	Exhaust gas recirculation system	157
3.1	Exhaust gas recirculation system	157
3.2	Servicing parts of exhaust gas recirculation system	158
3.3	Checking potentiometer for exhaust gas recirculation	160