



Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Engine number	1
1.3 Engine data	2
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing and installing engine	3
1.2 Notes on removing	3
1.3 Securing engine to engine stand	6
1.4 Notes on installing	8
1.5 Tightening torques	10
1.6 Assembly mountings	10
1.7 Additional information and removal instructions for vehicles with air conditioner	11
13 - Crankshaft group	13
1 Dismantling and assembling engine	13
1.1 Dismantling and assembling engine	13
1.2 Removing and installing ribbed belt	33
1.3 Checking valve timing	34
1.4 Adjusting valve timing	35
2 Removing and installing sealing flanges and flywheel/drive plate	41
2.1 Removing and installing sealing flanges and flywheel/drive plate	41
2.2 Renewing crankshaft oil seal - vibration damper end -	44
2.3 Removing and installing drive plate	46
3 Removing and installing crankshaft	48
3.1 Removing and installing crankshaft	48
4 Dismantling and assembling pistons and conrods	51
4.1 Dismantling and assembling pistons and conrods	51
4.2 Piston and cylinder dimensions	57
15 - Cylinder head, Valve gear	58
1 Removing and installing cylinder head	58
1.1 Removing and installing cylinder head	58
1.2 Removing and installing cylinder head cover	66
1.3 Installing cylinder head	67
1.4 Checking compressions	68
2 Servicing valve gear	70
2.1 Servicing valve gear	70
2.2 Reworking valve seats	76
2.3 Removing and installing camshafts	77
2.4 Checking hydraulic bucket tappets	80
2.5 Checking valve guides	81
2.6 Renewing valve guides	82
2.7 Renewing valve stem seals	82
17 - Lubrication	84
1 Removing and installing parts of the lubrication system	84
1.1 Removing and installing parts of the lubrication system	84
1.2 Dismantling and assembling oil filter housing	90
1.3 Dismantling and assembling oil pump	93
1.4 Checking oil pressure and oil pressure switch	96



19 - Cooling system	97
1 Removing and installing parts of cooling system	97
1.1 Removing and installing parts of cooling system	97
1.2 Parts of cooling system body side	98
1.3 Parts of cooling system engine side	102
1.4 Dismantling and assembling coolant thermostat housing	106
1.5 Draining and filling cooling system	109
1.6 Removing and installing radiator and radiator fan	110
1.7 Removing and installing coolant pump	111
1.8 Checking coolant continued circulation pump and radiator fan run-on	114
20 - Fuel supply system	116
1 Removing and installing parts of fuel supply system	116
1.1 Removing and installing parts of fuel supply system	116
1.2 Removing and installing fuel tank with its attachments and fuel filter, front wheel drive	117
1.3 Removing and installing fuel tank with its attachments and fuel filter, four wheel drive	123
1.4 Safety precautions when working on the fuel supply system	130
1.5 Rules for cleanliness	131
1.6 Adjusting throttle cable	131
1.7 Removing and installing fuel delivery unit	133
1.8 Checking fuel pump	134
1.9 Servicing parts of the activated charcoal filter system	139
26 - Exhaust system	142
1 Removing and installing parts of exhaust system, front wheel drive	142
1.1 Removing and installing parts of exhaust system, front wheel drive	142
1.2 Exhaust manifold, front exhaust pipe and catalyst with attachments	142
1.3 Silencer with mountings	145
1.4 Removing and installing parts of exhaust system, four wheel drive	146
1.5 Exhaust manifold, front exhaust pipe and catalyst with attachments	147
1.6 Silencer with mountings	150
1.7 Removing and installing front exhaust pipe and catalyst with attachments	151
2 Exhaust gas recirculation system	152
2.1 Exhaust gas recirculation system	152
2.2 Checking exhaust gas recirculation valve with temperature sensor	154
3 Secondary air system	157
3.1 Secondary air system	157
3.2 Function	157
3.3 Removing and installing parts of the secondary air system	158
3.4 Checking combi-valve	162
3.5 Removing and installing combi-valve	163