



Contents

00 - Technical data	1
1 Engine number	1
2 Engine data	2
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Notes on removing	4
1.2 Securing engine to assembly stand	8
1.3 Notes on installing	8
1.4 Specified torques	10
1.5 Assembly mountings	10
1.6 Additional information and assembly work for vehicles with air conditioner	11
13 - Crankshaft group	12
1 Dismantling and assembling engine	12
1.1 Part I	13
1.2 Part II	16
1.3 Removing and installing poly-V belt	18
2 Removing and installing sealing flanges and dual-mass flywheel	20
2.1 Renewing crankshaft oil seal, vibration damper end	22
2.2 Removing and installing drive plate	24
3 Dismantling and assembling pistons and conrods	26
3.1 Piston and cylinder dimensions	30
4 Removing and installing crankshaft	31
15 - Cylinder head, valve gear	33
1 Assembly overview - cylinder head	33
1.1 Removing and installing cylinder head cover	38
1.2 Removing and installing cylinder head	41
1.3 Checking valve timing	47
1.4 Removing and installing camshaft adjuster	50
1.5 Removing and installing camshaft timing chain and intermediate shaft drive chain	57
1.6 Checking compression	68
2 Repairing valve gear	71
2.1 Reworking valve seats	75
2.2 Removing and installing camshafts	77
2.3 Checking variable valve timing	83
2.4 Checking valve guides	88
2.5 Renewing valve stem seals	88
17 - Lubrication	91
1 Removing and installing parts of lubrication system	91
1.1 Engine oil:	91
1.2 Assembly overview - sump	91
1.3 Dismantling and assembling oil filter housing	94
1.4 Dismantling and assembling oil pump	96
1.5 Removing and installing sump	97
1.6 Checking oil pressure and oil pressure switch	98
19 - Cooling	101
1 Removing and installing parts of cooling system	101
1.1 Parts of cooling system, body side	101



1.2	Parts of cooling system - engine side	103
1.3	Coolant hose schematic diagram	105
1.4	Dismantling and assembling thermostat housing	105
1.5	Draining and adding coolant	107
1.6	Removing and installing radiator and fan	110
1.7	Checking radiator fan	112
1.8	Checking continued coolant circulation pump	113
1.9	Removing and installing coolant pump	114
20	- Fuel supply system	119
1	Removing and installing parts of fuel supply system	119
1.1	Removing and installing fuel tank with attachments and fuel filter	119
1.2	Safety measures when working on fuel supply	123
1.3	Rules for cleanliness	123
1.4	Removing and installing fuel delivery unit	124
1.5	Removing and installing fuel gauge sender	125
1.6	Crash fuel shut-off	125
1.7	Checking fuel pump	126
2	Activated charcoal filter system	132
2.1	Function	132
2.2	Repairing parts of activated charcoal filter system	132
2.3	Checking activated charcoal filter system	134
2.4	Checking fuel tank breather	138
3	Electronic power control (EPC)	140
3.1	Function of EPC system	140
3.2	Repairing parts of electronic power control (EPC)	140
3.3	Checking accelerator position sender	142
26	- Exhaust system	146
1	Removing and installing parts of exhaust system	146
1.1	Exhaust manifold, front exhaust pipe and catalytic converter with attachments	146
1.2	Silencer with mountings	148
1.3	Checking catalytic converter	148
2	Secondary air system	155
2.1	Removing and installing parts of secondary air system	155
2.2	Checking secondary air system	158
2.3	Checking secondary air pump motor	162
2.4	Checking combination valve	163