



Contents

01 - Self-diagnosis	1
1 Self-diagnosis	1
1.1 Self-diagnosis	1
1.2 Features of self-diagnosis	1
1.3 Technical data of self-diagnosis	1
1.4 Connecting fault reader V.A.G 1551 and selecting engine control unit	2
1.5 Interrogating fault memory	3
1.6 Fault table	4
1.7 Erasing fault memory	16
1.8 Final control diagnosis	17
1.9 Reading measured value block	20
1.10 Evaluating measured value blocks, engine codes AHU, 1Z	21
1.11 Evaluating measured value blocks, engine codes AFN, AVG	30
23 - Mixture preparation, Injection	40
1 Servicing Diesel direct injection system	40
1.1 Servicing Diesel direct injection system	40
1.2 Safety precautions	40
1.3 Rules for cleanliness	40
1.4 Fitting locations overview	41
1.5 Servicing injection pump	45
1.6 Servicing fuel filter	49
1.7 Servicing accelerator linkage	52
1.8 Checking sender adjustment	54
1.9 Removing and installing injection pump	55
1.10 Dynamically checking and adjusting commencement of injection	58
1.11 Checking valve timing	59
1.12 Removing and installing injectors	61
1.13 Servicing injectors	62
1.14 Renewing injection timing device cover O-ring	63
1.15 Checking engine speed sender	63
1.16 Checking intake manifold pressure sender	65
1.17 Checking coolant temperature sender	66
1.18 Checking brake light switch and brake pedal switch	68
1.19 Checking clutch pedal switch	70
1.20 Checking intake manifold temperature sender	72
1.21 Checking Diesel direct injection system voltage supply	74
1.22 Checking fuel temperature sender	75
1.23 Checking modulating piston movement sender and quantity adjuster	78
1.24 Checking needle lift sender	83
1.25 Checking injection timing control range	85
1.26 Checking charge pressure control	89
1.27 Hose connection diagram for charge pressure control, engine codes AFN, AVG	94
1.28 Checking exhaust gas recirculation and air mass meter function	95
1.29 Checking speedometer sender	99
1.30 Checking accelerator position sender	101
1.31 Checking gearbox intervention signal when selecting gear	103
2 Replacing, coding and matching engine control unit	104
2.1 Replacing, coding and matching engine control unit	104
2.2 Replacing engine control unit	104
2.3 Coding engine control unit	105
2.4 Matching engine control unit to electronic immobilizer	107
28 - Glow plug system	109



1	Checking glow plug system	109
1.1	Checking glow plug system	109
1.2	Checking glow plugs	109