



Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Engine number	1
1.3 Engine data	1
10 - Removing and installing engine	2
1 Removing and installing engine	2
1.1 Removing and installing engine	2
1.2 Notes on removing	2
1.3 Securing engine to support clamp	4
1.4 Notes on installing	5
1.5 Tightening torques	6
1.6 Assembly mountings	7
1.7 Additional information and removal instructions for vehicles with air conditioner	8
13 - Crankshaft group	9
1 Dismantling and assembling engine	9
1.1 Dismantling and assembling engine	9
1.2 Removing and installing ribbed belt	23
1.3 Removing and installing toothed belt	25
1.4 Checking semi-automatic toothed belt tensioning roller	30
1.5 Removing injection pump sprocket	30
2 Removing and installing sealing flanges and flywheel/drive plate	31
2.1 Removing and installing sealing flanges and flywheel/drive plate	31
2.2 Renewing crankshaft oil seal - pulley end -	33
2.3 Removing and installing drive plate	35
3 Removing and installing crankshaft	38
3.1 Removing and installing crankshaft	38
3.2 Crankshaft dimensions	41
4 Dismantling and assembling pistons and conrods	42
4.1 Dismantling and assembling pistons and conrods	42
4.2 Checking piston projection at TDC	49
4.3 Piston and cylinder dimensions	50
15 - Cylinder head, Valve gear	51
1 Removing and installing cylinder head	51
1.1 Removing and installing cylinder head	51
1.2 Removing and installing cylinder head	56
1.3 Checking compressions	58
2 Servicing valve gear	59
2.1 Servicing valve gear	59
2.2 Reworking valve seats	64
2.3 Checking valve guides	66
2.4 Renewing valve guides	67
2.5 Renewing valve stem seals	67
2.6 Removing and installing camshaft	69
2.7 Checking hydraulic bucket tappets	70
17 - Lubrication	72
1 Removing and installing parts of the lubrication system	72
1.1 Removing and installing parts of the lubrication system	72
1.2 Checking oil pressure and oil pressure switch	83



19 - Cooling system	85
1 Removing and installing parts of cooling system	85
1.1 Removing and installing parts of cooling system	85
1.2 Parts of cooling system body side	86
1.3 Parts of cooling system - engine side	89
1.4 Dismantling and assembling coolant pump	92
1.5 Draining and filling cooling system	93
1.6 Removing and installing radiator and radiator fan	95
20 - Fuel supply system	97
1 Removing and installing parts of fuel supply system	97
1.1 Removing and installing parts of fuel supply system	97
1.2 Removing and installing fuel tank with its attachments	98
1.3 Safety precautions when working on the fuel supply system	102
1.4 Rules for cleanliness	102
21 - Charging	104
1 Charge air system with turbocharger	104
1.1 Charge air system with turbocharger	104
1.2 Safety precautions	104
1.3 Rules for cleanliness	104
1.4 Removing and installing turbocharger with attachments	104
1.5 Removing and installing parts of charge air cooling system	114
1.6 Turbocharger hose/pipe connections	116
1.7 Removing and installing turbocharger	118
1.8 Checking turbocharger	121
1.9 Checking pressure unit for charge pressure regulating valve	123
1.10 Removing and installing pressure unit for charge pressure regulating valve	123
26 - Exhaust system	125
1 Removing and installing parts of exhaust system	125
1.1 Removing and installing parts of exhaust system	125
2 Exhaust gas recirculation system	128
2.1 Exhaust gas recirculation system	128
2.2 Removing and installing parts of exhaust gas recirculation system	128
2.3 Checking exhaust gas recirculation valve (mechanical)	132