



## Contents

|  |           |
|--|-----------|
| <b>00 - Technical data</b> .....   | <b>1</b>  |
| <b>1 Technical data</b> .....  | <b>1</b>  |
| 1.1 Engine number .....  | 1         |
| 1.2 Engine data .....  | 1         |
| <b>10 - Removing and installing engine</b> .....                                     | <b>2</b>  |
| <b>1 Removing and installing engine</b> .....  | <b>2</b>  |
| 1.1 Notes on removing .....  | 3         |
| 1.2 Securing engine to assembly stand .....  | 6         |
| 1.3 Notes on installing .....  | 7         |
| 1.4 Assembly mountings .....   | 9         |
| 1.5 Additional information and assembly work for vehicles with air conditioner ..... | 10        |
| <b>13 - Crankshaft group</b> .....   | <b>12</b> |
| <b>1 Dismantling and assembling engine</b> .....                                     | <b>12</b> |
| 1.1 Assembly overview - poly V-belt drive .....                                      | 12        |
| 1.2 Removing and installing poly V-belt .....  | 14        |
| 1.3 Assembly overview - toothed belt drive .....                                     | 15        |
| 1.4 Assembly overview - crankcase .....  | 17        |
| <b>2 Sealing flange and flywheel</b> .....   | <b>19</b> |
| 2.1 Assembly overview - sealing flanges and flywheel .....                           | 19        |
| 2.2 Renewing crankshaft oil seal - pulley end .....                                  | 21        |
| 2.3 Removing and installing sealing flange - pulley end .....                        | 23        |
| 2.4 Removing and installing drive plate .....  | 27        |
| <b>3 Crankshaft</b> .....  | <b>29</b> |
| 3.1 Assembly overview - crankshaft .....   | 29        |
| 3.2 Crankshaft dimensions .....  | 30        |
| 3.3 Checking dowel pin projection out of crankshaft .....                            | 30        |
| <b>4 Pistons and conrods</b> .....   | <b>32</b> |
| 4.1 Assembly overview - pistons and conrods .....                                    | 32        |
| 4.2 Piston and cylinder dimensions .....   | 35        |
| 4.3 Checking piston projection at TDC .....  | 35        |
| <b>15 - Cylinder head, valve gear</b> .....  | <b>37</b> |
| <b>1 Cylinder head</b> .....   | <b>37</b> |
| 1.1 Assembly overview - cylinder head .....  | 37        |
| 1.2 Removing and installing cylinder head cover .....                                | 40        |
| 1.3 Removing, installing and tensioning toothed belt .....                           | 42        |
| 1.4 Removing and installing cylinder head .....                                      | 55        |
| 1.5 Compression test .....   | 59        |
| <b>2 Valve gear</b> .....  | <b>62</b> |
| 2.1 Assembly overview - valve gear .....   | 62        |
| 2.2 Checking valve guides .....  | 65        |
| 2.3 Renewing valve stem seals .....  | 65        |
| 2.4 Removing and installing camshaft .....   | 67        |
| 2.5 Removing and installing camshaft oil seal .....                                  | 71        |
| <b>17 - Lubrication</b> .....  | <b>74</b> |
| <b>1 Engine oil</b> .....  | <b>74</b> |
| 1.1 Oil capacities .....   | 74        |
| 1.2 Checking engine oil level .....  | 74        |
| <b>2 Parts of lubrication system</b> .....   | <b>75</b> |



|           |  |            |
|-----------|--|------------|
| 2.1       | Assembly overview - oil pump, sump   | 75         |
| 2.2       | Removing and installing oil sump   | 77         |
| <b>3</b>  | <b>Oil filter bracket, oil pressure, engine oil cooler and oil supply line</b>           | <b>80</b>  |
| 3.1       | Assembly overview - oil filter bracket and engine oil cooler: Engine codes ANU, AUY, BVK | 80         |
| 3.2       | Assembly overview - oil filter bracket and engine oil cooler: Engine codes ASZ, BTB      | 82         |
| 3.3       | Assembly overview - oil supply line to turbocharger                                      | 83         |
| 3.4       | Removing and installing oil supply line to turbocharger                                  | 83         |
| 3.5       | Checking oil pressure and oil pressure switch  | 86         |
| <b>19</b> | <b>- Cooling</b>   | <b>88</b>  |
| <b>1</b>  | <b>Removing and installing parts of cooling system</b>                                   | <b>88</b>  |
| 1.1       | Assembly overview - cooling system, body side: Engine codes ANU, AUY, BVK                | 89         |
| 1.2       | Assembly overview - cooling system, body side: Engine codes ASZ, BTB                     | 91         |
| 1.3       | Assembly overview - cooling system, engine side: Engine codes ANU, AUY, BVK              | 92         |
| 1.4       | Assembly overview - cooling system, engine side: Engine codes ASZ, BTB                   | 94         |
| 1.5       | Assembly overview - additional cooler  | 95         |
| 1.6       | Coolant hose schematic diagram: Engine code ANU  | 97         |
| 1.7       | Coolant hose schematic diagram: Engine codes AUY, BVK                                    | 98         |
| 1.8       | Coolant hose schematic diagram: Engine codes ASZ, BTB                                    | 99         |
| 1.9       | Draining and filling coolant   | 100        |
| 1.10      | Removing and installing radiator and fan   | 103        |
| 1.11      | Removing and installing coolant pump   | 105        |
| 1.12      | Removing and installing thermostat   | 107        |
| 1.13      | Checking cooling system for leaks  | 109        |
| 1.14      | Checking engine oil cooler for leaks   | 111        |
| <b>20</b> | <b>- Fuel supply system</b>  | <b>114</b> |
| <b>1</b>  | <b>Removing and installing parts of fuel supply system</b>                               | <b>114</b> |
| 1.1       | Safety precautions when working on fuel supply system                                    | 115        |
| 1.2       | Rules for cleanliness  | 115        |
| 1.3       | Assembly overview - fuel tank  | 115        |
| 1.4       | Assembly overview - fuel filter: Engine codes ANU, AUY, BVK                              | 117        |
| 1.5       | Assembly overview - fuel filter: Engine codes ANU, ASZ, AUY, BTB, BVK                    | 119        |
| 1.6       | Assembly overview - heat exchanger for fuel cooler                                       | 120        |
| 1.7       | Removing and installing fuel cooler: Engine codes ANU, AUY, BVK                          | 122        |
| 1.8       | Emptying fuel tank   | 123        |
| 1.9       | Removing and installing fuel tank  | 125        |
| 1.10      | Removing and installing fuel delivery unit   | 128        |
| 1.11      | Removing and installing fuel gauge sender  | 130        |
| 1.12      | Checking fuel pump   | 130        |
| 1.13      | Checking tandem pump   | 132        |
| 1.14      | Removing and installing tandem pump  | 136        |
| 1.15      | Assembly overview - accelerator mechanism  | 138        |
| <b>21</b> | <b>- Turbocharging/supercharging</b>   | <b>140</b> |
| <b>1</b>  | <b>Charge air system with turbocharger</b>   | <b>140</b> |
| 1.1       | Safety precautions   | 141        |
| 1.2       | Rules for cleanliness  | 141        |
| 1.3       | Hose connections with push-on connectors   | 141        |
| 1.4       | Assembly overview - turbocharger: Engine code ANU  | 142        |
| 1.5       | Assembly overview - turbocharger: Engine codes ASZ, BTB                                  | 145        |
| 1.6       | Assembly overview - turbocharger: Engine codes AUY, BVK                                  | 147        |
| 1.7       | Assembly overview - charge air cooling: Engine codes ANU, AUY, BVK                       | 149        |
| 1.8       | Assembly overview - charge air cooler: Engine codes ASZ, BTB                             | 151        |
| 1.9       | Checking charge air system for leaks   | 152        |



|           |  |            |
|-----------|--|------------|
| 1.10      | Charge pressure control hose routing diagram: Engine code ANU                  | 153        |
| 1.11      | Charge pressure control hose routing diagram: Engine codes ASZ, AUY, BTB, BVK  | 155        |
| <b>23</b> | <b>Mixture preparation - injection</b>   | <b>156</b> |
| <b>1</b>  | <b>Repairing diesel direct injection system</b>                                | <b>156</b> |
| 1.1       | Safety precautions   | 156        |
| 1.2       | Rules for cleanliness  | 157        |
| 1.3       | General notes on injection   | 157        |
| 1.4       | Overview of fitting locations  | 157        |
| 1.5       | Assembly overview - intake manifold flap                                       | 158        |
| 1.6       | Assembly overview - air filter   | 160        |
| 1.7       | Assembly overview - unit injector  | 160        |
| 1.8       | Removing and installing O-rings for unit injector                              | 161        |
| 1.9       | Removing and installing unit injector  | 163        |
| <b>2</b>  | <b>Engine control unit</b>   | <b>168</b> |
| 2.1       | Reading and erasing engine control unit fault memory                           | 168        |
| 2.2       | Removing and installing engine control unit                                    | 169        |
| <b>26</b> | <b>Exhaust system</b>  | <b>170</b> |
| <b>1</b>  | <b>Removing and installing parts of exhaust system</b>                         | <b>170</b> |
| 1.1       | Assembly overview - front exhaust pipe with catalytic converter                | 170        |
| 1.2       | Assembly overview - silencers  | 171        |
| <b>2</b>  | <b>Exhaust gas recirculation system</b>  | <b>173</b> |
| 2.1       | Assembly overview - exhaust gas recirculation: Engine code ANU                 | 173        |
| 2.2       | Assembly overview - exhaust gas recirculation: Engine codes ASZ, AUY, BTB, BVK | 175        |
| 2.3       | Checking mechanical exhaust gas recirculation valve                            | 176        |
| <b>28</b> | <b>Glow plug system</b>  | <b>177</b> |
| <b>1</b>  | <b>Checking glow plug system</b>   | <b>177</b> |
| 1.1       | Checking glow plugs  | 178        |