

001 - Sharan - basic equipment	1-21
1. Sharan - basic equipment	1-2
2. Battery, ignition/starter switch	3
3. Immobilizer	4
4. Fresh air blower, fresh air blower switch	5
5. Dash panel insert, fuel gauge, coolant shortage and coolant temperature warning/gauge, speedometer sender, optical and acoustic oil pressure warning	6
6. Dash panel insert, alternator warning lamp, turn signal warning lamps, odometer display	7
7. Dash panel insert, rev. counter, dual circuit brakes and handbrake system warning lamp, glove box light	8
8. Door contact switch, digital clock, interior lights	9
9. Luggage compartment lights, dual tone horn, 12 V socket	10
10. Self diagnosis junction box, cigarette lighter, radio connection	11
11. Headlight range control	12
12. Headlights, side light, fog lights	13
13. Headlight dipper/flasher switch, dipped/main beam relay, front turn signal	14
14. Turn signal switch, parking light switch	15
15. Rear turn signals, brake light, tail light	16
16. Lighting switch	17
17. Rear fog light, reversing light, number plate light	18
18. Heated windscreen and rear window	19
19. Windscreen wash/wipe system	20
20. Rear window wipe/wash system	21
002 - 2.8 ltr./128 kW Motronic, engine code AAA	22-32
1. 2.8 ltr./128 kW Motronic, engine code AAA	22
2. Alternator, starter, fuel pump, fuel gauge	23
3. Motronic control unit, ignition system, throttle valve control unit	24
4. Motronic control unit, injector, EGR valve	25
5. Motronic control unit, Lambda probe, Hall sender	26
6. Motronic control unit, knock sensor, engine speed sender	27
7. Motronic control unit, air mass meter, activated charcoal filter system, secondary air inlet valve, secondary air pump motor	28
8. Motronic control unit, coolant temperature sender, intake manifold temperature sender, exhaust gas recirculation temperature sensor, engine compartment light	29
9. Oil pressure switch, speedometer sender, fan run-on thermo switch	30
10. Dash panel insert, optical and acoustic oil pressure warning, coolant shortage indicator sender, ambient temperature sensor, oil temperature sender	31
11. Dash panel insert, speedometer, multi-function indicator, fuel gauge, coolant shortage and coolant temperature warning/gauge	32
003 - 2.0 ltr./85 kW Simos, engine code ADY	33-42
1. 2.0 ltr./85 kW Simos, engine code ADY	33-34
2. Alternator, starter, fuel pump, fuel gauge	35
3. Simos control unit, ignition system, Hall sender, coolant temperature sender	36
4. Simos control unit, engine speed sender, intake manifold temperature sender, injectors	37
5. Simos control unit, Lambda probe, throttle valve control unit	38
6. Simos control unit, knock sensor, air mass meter, activated charcoal filter system, EGR valve	39
7. Oil pressure switch, speedometer sender, engine compartment light	40
8. Dash panel insert, optical and acoustic oil pressure warning, coolant shortage indicator sender, ambient temperature sensor, oil temperature sender	41
9. Dash panel insert, speedometer, multi-function indicator, fuel gauge, coolant shortage and coolant temperature warning/gauge	42
004 - Radiator fan, 2 speed, with fan run-on	43-45
1. Radiator fan, 2 speed, with fan run-on	43
2. Radiator fan run-on control unit, thermo switch, continued coolant circulation pump	44
3. Radiator fan, fan relay	45
005 - Anti-locking brake system (ABS), Anti-locking brake system (ABS) with electronic differential lock (EDL)	46-48
1. Anti-locking brake system (ABS), Anti-locking brake system (ABS) with electronic differential lock (EDL)	46
2. ABS with EDL control unit, ABS hydraulic pump, ABS valve, ABS warning lamp	47
3. ABS with EDL control unit, ABS valves, differential lock valves, speed sensor	48
006 - Airbag	49-50
1. Airbag	49
2. Airbag control unit, airbag warning lamp, airbag igniter, coil spring	50
007 - Automatic gearbox	51-57
1. Automatic gearbox	51

2. Automatic gearbox control unit, starter inhibitor and reversing light relay, starter inhibitor switch	52
3. Automatic gearbox control unit, solenoid valves	53
4. Automatic gearbox control unit, road speed sender	54
5. Automatic gearbox control unit, selector lever lock solenoid, kick-down switch	55
6. Automatic gearbox control unit, multi-function switch	56
7. Automatic gearbox control unit, selector lever illumination	57
008 - Automatic gearbox	58-64
1. Automatic gearbox	58
2. Starter inhibitor and reversing light relay, starter inhibitor switch	59
3. Automatic gearbox control unit, road speed sender	60
4. Automatic gearbox control unit, solenoid valves	61
5. Automatic gearbox control unit, selector lever lock solenoid, kick-down switch	62
6. Automatic gearbox control unit, multi-function switch	63
7. Automatic gearbox control unit, selector lever illumination	64
009 - Passenger compartment heating and ventilation	65-67
1. Passenger compartment heating and ventilation	65
2. Passenger compartment heating and ventilation,	66
3. Heated windscreen cut-off	67
010 - 1.9 ltr./66 kW Turbo diesel engine, engine code 1Z	68-78
1. 1.9 ltr./66 kW Turbo diesel engine, engine code 1Z	68
2. Starter, alternator, engine compartment light	69
3. Diesel direct injection system control unit, commencement of injection valve, EGR valve, charge pressure control solenoid valve, fuel shut-off valve	70
4. Diesel direct injection system control unit, engine speed sender, air mass meter, intake manifold temperature sender	71
5. Diesel direct injection system control unit, pedal switch, modulating piston movement sender, fuel temperature sender, quantity adjuster	72
6. Diesel direct injection system control unit, needle lift sender, accelerator position sender, idling switch, kick-down switch	73
7. Diesel direct injection system control unit, cruise control system switch (CCS)	74
8. Coolant heater element, glow plugs	75
9. Oil pressure switch, speedometer sender, fuel level sender, coolant temperature sender	76
10. Dash panel insert, optical and acoustic oil pressure warning, coolant shortage indicator sender, ambient temperature sensor, oil temperature sender	77
11. Dash panel insert, speedometer, multi-function indicator, fuel gauge, coolant shortage and coolant temperature warning/gauge, glow period warning lamp	78
011 - Air conditioning system	79-83
1. Air conditioning system	79
2. Air conditioner switch, fresh air blower switch, fresh air blower, fresh air and air recirculation switch	80
3. Air conditioner pressure switch, radiator fan control unit, ambient temperature switch, air conditioner thermo switch - cut-off	81
4. Magnetic coupling, coolant fan thermo switch, radiator fan	82
5. Air conditioner cut-out	83
012 - Central locking system	84-90
1. Central locking system	84
2. Central locking control unit, tailgate central locking relay, tailgate lock motor	85
3. Central locking control unit, front central locking switch, tailgate central locking switch (tailgate)	86
4. Central locking system control unit, front left central locking positioning unit, immobilizer warning lamp	87
5. Central locking control unit, front right central locking actuator	88
6. Central locking system control unit, rear left central locking actuator	89
7. Central locking control unit, rear right central locking actuator, fuel tank flap central locking actuator	90
013 - Interior light with door warning system and bulb failure warning	91-99
1. Interior light with door warning system and bulb failure warning	91
2. Front and rear door warning lamps	92
3. Rear interior light, centre and rear reading light, illuminated make-up mirror (passenger's side)	93
4. Front interior light, front and rear entry lights	94
5. Digital clock, illuminated make-up mirror (driver's side)	95
6. Front and rear door contact switch	96
7. Bulb monitoring device, luggage compartment lights, rear door contact switch (tailgate)	97
8. Bulb monitoring device, headlights, brake and tail lights	98
9. Dash panel insert. door open warning lamp. bulb failure warning lamps	99

014 - Radio system "sound 1" with 8 loudspeakers	100-103
1. Radio system "sound 1" with 8 loudspeakers	100
2. Radio, cigarette lighter	101
3. Radio, front loudspeaker	102
4. Radio, rear loudspeaker, electronically amplified windscreen aerial	103
015 - Radio system "sound 2" with 10 loudspeakers	104-109
1. Radio system "sound 2" with 10 loudspeakers	104
2. Radio, cigarette lighter	105
3. Radio, amplifier, front left loudspeaker	106
4. Radio, amplifier, front right loudspeaker	107
5. Radio, amplifier, rear left loudspeaker	108
6. Radio, amplifier, rear right loudspeaker, electronically amplified window aerial	109
016 - Cruise control system (CCS)	110-111
1. Cruise control system (CCS)	110
2. Cruise control system	111
017 - Radiator fan, 2 speed	112-113
1. Radiator fan, 2 speed	112
2. Radiator fan	113
018 - Window lifter, front and rear	114-121
1. Window lifter, front and rear	114
2. Electric window switch in driver's door, front left electric window control unit with motor	115
3. Front left electric window control unit with motor	116
4. Rear left electric window switch (in door), rear left electric window control unit with motor	117
5. Rear electric window isolation switch	118
6. Front right electric window control unit with motor	119
7. Electric window switch in passenger's door, front right electric window control unit with motor	120
8. Rear right electric window switch (in door), rear right electric window control unit with motor	121
019 - Vent wing, rear	122-124
1. Vent wing, rear	122
2. Rear vent wing switch and motor	123
3. Vent wing relay, rear	124
020 - Central locking system with infrared remote control and anti- theft warning system	125-135
1. Central locking system with infrared remote control and anti- theft warning system	125
2. Central locking system and anti-theft warning system control unit, central locking system fuse	126
3. Central locking and anti-theft warning system control unit, tailgate central locking relay, tailgate lock motor	127
4. Central locking and anti-theft warning system control unit, front central locking switch, tailgate central locking switch	128
5. Central locking and anti-theft warning system control unit, front left central locking positioning element, immobilizer warning lamp	129
6. Central locking system and anti-theft warning system control unit, front right central locking positioning unit	130
7. Central locking and anti-theft warning system control unit, central locking actuator, rear left	131
8. Central locking system and anti-theft warning system control unit, central locking actuator, rear right, central locking actuator (tailgate)	132
9. Central locking system and anti-theft warning system control unit, remote control infrared sensors	133
10. Central locking and anti-theft warning system control unit, interior monitoring ultra-sonic sensors	134
11. Central locking and anti-theft warning system control unit, engine compartment light switch, alarm horn	135
021 - Sliding/tilting roof, front	136-137
1. Sliding/tilting roof, front	136
2. Sliding roof adjustment control unit with motor, sliding roof switch	137
022 - Front and rear sliding/tilting roof	138-139
1. Front and rear sliding/tilting roof	138
2. Front and rear sliding roof adjustment motor control unit, front and rear sliding roof switch	139
023 - Daylight driving light, from June 1995	140-146
1. Daylight driving light, from June 1995	140
2. Headlights, side light, fog lights	141
3. Headlight dip/flasher switch, dipped and main beam relay	142
4. Turn signal switch, parking light switch, hazard warning light switch	143
5. Front turn signal, daylight driving light switch on relay	144
6. Lighting switch	145
7. Rear fog light, reversing light, number plate light	146
024 - Exterior mirror. adjustable and heated	147-149

1. Exterior mirror, adjustable and heated	147
2. Exterior mirror adjustment and heater	148
3. Exterior mirror adjustment and heater	149
025 - Seat heater	150-152
1. Seat heater	150
2. Heating driver's seat	151
3. Heating passenger's seat	152
026 - Headlight washer system, from June 1995	153-154
1. Headlight washer system, from June 1995	153
2. Headlight washer system	154
027 - Trailer towing	155-158
1. Trailer towing	155
2. Left tail light, rear left brake light, rear left turn signal high level brake light	156
3. Trailer towing socket, rear fog light cut-off	157
4. Right tail light, right brake light, rear right turn signal, trailer towing warning lamp	158
028 - Air conditioning system	159-164
1. Air conditioning system	159
2. Air conditioner switch, fresh air blower switch, fresh air blower, fresh air and air recirculation switch	160
3. Radiator fan control unit, air conditioner pressure switch, air conditioner de-coupling relay	161
4. Ambient temperature switch, air conditioner system cut-off thermo switch, magnetic coupling relay, air conditioner system magnetic coupling	162
5. Coolant run-on blocking diodes, coolant circulation pump	163
6. Radiator fan relay, radiator fan series resistance, radiator fan separate fuse	164
029 - Additional water heater D3W	165-167
1. Additional water heater D3W	165
2. Heater control unit, glow plug, ambient temperature switch, combustion blower, fuel pump	166
3. Heater control unit, temperature sensor, flame monitor, overheating sensor	167
030 - Climatronic	168-178
1. Climatronic	168
2. Climatronic control unit, temperature flap positioning motor	169
3. Climatronic control unit, centre vent positioning motor, front air distribution positioner motor	170
4. Climatronic control unit, ambient temperature sensor, sun penetration photo sensor, coolant temperature sender, vent temperature sender	171
5. Climatronic control unit, fresh and recirculation air flap two-way valve, coolant circulation pump	172
6. Climatronic control unit, rear air distribution positioning motor, rear temperature flap positioning motor	173
7. Climatronic control unit rear vent temperature sender, additional fresh air blower	174
8. Climatronic control unit, blower control unit, blower relay	175
9. Radiator fan control unit, air conditioner pressure switch, air conditioner cut-off thermo switch	176
10. Radiator fan control unit, radiator fan thermo-switch, magnetic coupling, radiator fan	177
11. Radiator fan relay, radiator fan series resistance	178
031 - Climatronic	179-188
1. Climatronic	179
2. Climatronic control unit, temperature flap positioning motor	180
3. Climatronic control unit, centre vent positioning motor, front air distribution positioner motor	181
4. Climatronic control unit, ambient temperature sensor, sun penetration photo sensor, coolant temperature sender, vent temperature sender	182
5. Climatronic control unit, two-way valve for fresh and recirculating air flap, coolant circulation pump	183
6. Climatronic control unit, rear air distribution positioning motor, rear temperature flap positioning motor	184
7. Climatronic control unit rear vent temperature sender, additional fresh air blower	185
8. Climatronic control unit, blower control unit, blower relay	186
9. Radiator fan control unit, air conditioner pressure switch, air conditioner cut-off thermo switch	187
10. Radiator fan control unit, radiator fan thermo-switch, magnetic coupling, radiator fan	188
032 - Syncro	189-190
1. Syncro	189
2. Syncro for automatic gearbox	190
033 - Second battery	191-192
1. Second battery	191
2. Driver battery	192
034 - Electric window front, without convenience wiring	193-194
1. Electric window front, without convenience wiring	193
2. Electric window front (without convenience wiring)	194

035 - Windscreen washer fluid shortage indicator	195-196
1. Windscreen washer fluid shortage indicator	195
2. Windscreen washer fluid shortage indicator	196
036 - Ambient temperature warning	197-198
1. Ambient temperature warning	197
2. 4°C und 0°C ambient temperature warning	198
037 - Radio system 'sound 2' with remote control and CD-changer, from January 1996	199-204
1. Radio system 'sound 2' with remote control and CD-changer, from January 1996	199
2. Radio, cigarette lighter	200
3. Radio, amplifier, CD changer, front left loudspeaker	201
4. Radio, amplifier, CD changer, front right loudspeaker	202
5. Radio, amplifier, CD changer, rear left loudspeaker	203
6. Radio, amplifier, rear right loudspeaker, electronically amplified window aerial	204
038 - Radiator fan, 3 speed	205-206
1. Radiator fan, 3 speed	205
2. Radiator fan control unit, radiator fan	206
039 - Radiator fan, 3 speed, with radiator fan run-on	207-209
1. Radiator fan, 3 speed, with radiator fan run-on	207
2. Radiator fan relay, radiator fan, radiator fan series resistance	208
3. Radiator fan run-on control unit, thermo switch, continued coolant circulation pump	209
040 - Automatic gearbox	210-216
1. Automatic gearbox	210
2. Automatic gearbox control unit, starter inhibitor and reversing light relay, starter inhibitor switch	211
3. Automatic gearbox control unit, solenoid valves	212
4. Automatic gearbox control unit, road speed sender	213
5. Automatic gearbox control unit, selector lever lock solenoid	214
6. Automatic gearbox control unit, multi-function switch	215
7. Automatic gearbox control unit, selector lever illumination	216
041 - Heated rear window	217-218
1. Heated rear window	217
2. Heated rear window	218
042 - Sharan - basic equipment	219-240
1. Sharan - basic equipment	219-220
2. Battery, ignition/starter switch	221
3. Immobilizer	222
4. Fresh air blower, fresh air blower switch	223
5. Dash panel insert, fuel gauge, coolant shortage and coolant temperature warning/gauge, speedometer sender, optical and acoustic oil pressure warning	224
6. Dash panel insert, alternator warning lamp, turn signal warning lamps, odometer display	225
7. Dash panel insert, rev. counter, dual circuit brakes and handbrake system warning lamp, glove box light	226
8. Door contact switch, digital clock, interior lights	227
9. Door contact switch, luggage compartment light, dual tone horn	228
10. Self diagnosis junction box, cigarette lighter, radio connection	229
11. Headlight range control	230
12. Headlights, side lights, fog lights	231
13. Headlight dipper/flasher switch, dipped/main beam relay, front turn signal	232
14. Turn signal switch, parking light switch	233
15. Rear turn signals, brake light, tail light	234
16. Lighting switch	235
17. Rear fog light, reversing light, number plate light	236
18. Heated windscreen, heated windscreen and rear window switch	237
19. Heated rear window, heated washer jets	238
20. Windscreen wash/wipe system	239
21. Rear window wipe/wash system	240
043 - Central locking system	241-247
1. Central locking system	241
2. Central locking control unit, tailgate central locking relay, tailgate lock motor	242
3. Central locking control unit, front central locking switch, tailgate central locking switch	243
4. Central locking system control unit, front left central locking positioning unit, immobilizer warning lamp	244
5. Central locking control unit, front right central locking actuator	245
6. Central locking system control unit, rear left central locking actuator	246
7. Central locking control unit, rear right central locking actuator, fuel tank flap central locking actuator	247

044 - Electric window front, with convenience wiring	248-252
1. Electric window front, with convenience wiring	248
2. Electric window switch in driver's door, front left electric window control unit with motor	249
3. Front left electric window control unit with motor	250
4. Front right electric window control unit with motor, electric window thermo fuse	251
5. Electric window switch in passenger's door, front right electric window control unit with motor	252
045 - Central locking system with infrared remote control and anti-theft warning system	253-263
1. Central locking system with infrared remote control and anti-theft warning system	253
2. Central locking system and anti-theft warning system control unit, central locking system fuse	254
3. Central locking and anti-theft warning system control unit, tailgate central locking relay, tailgate lock motor	255
4. Central locking and anti-theft warning system control unit, front central locking switch, tailgate central locking switch	256
5. Central locking and anti-theft warning system control unit, central locking actuator, front left, immobilizer warning lamp	257
6. Central locking and anti-theft warning system control unit, central locking actuator, front right	258
7. Central locking and anti-theft warning system control unit, central locking actuator, rear left	259
8. Central locking and anti-theft warning system control unit, central locking actuator, rear right, central locking actuator (tank flap)	260
9. Central locking system and anti-theft warning system control unit, remote control infrared sensors	261
10. Central locking and anti-theft warning system control unit, interior monitoring ultra-sonic sensors	262
11. Central locking and anti-theft warning system control unit, engine compartment light switch, alarm horn	263
046 - 1.9 ltr./81 kW Turbo diesel engine, engine code AFN	264-274
1. 1.9 ltr./81 kW Turbo diesel engine, engine code AFN	264
2. Starter, alternator, heater element (crankcase breather)	265
3. Diesel direct injection system control unit, commencement of injection valve, EGR valve, charge pressure control solenoid valve, fuel shut-off valve	266
4. Diesel direct injection system control unit, engine speed sender, air mass meter, intake manifold temperature sender	267
5. Diesel direct injection system control unit, pedal switch, modulating piston movement sender, fuel temperature sender, quantity adjuster	268
6. Diesel direct injection system control unit, needle lift sender, accelerator position sender, idling switch, kick-down switch	269
7. Diesel direct injection system control unit, cruise control system switch (CCS)	270
8. Coolant heater element, glow plugs	271
9. Oil pressure switch, speedometer sender, fuel level sender, coolant temperature sender	272
10. Dash panel insert, optical and acoustic oil pressure warning, coolant shortage indicator sender, ambient temperature sensor, oil temperature sender	273
11. Dash panel insert, speedometer, multi-function indicator, fuel gauge, coolant shortage and coolant temperature warning/gauge, glow period warning lamp	274
047 - Air conditioning system	275-280
1. Air conditioning system	275
2. Air conditioner switch, fresh air blower switch, fresh air blower, fresh air and air recirculation switch	276
3. Radiator fan control unit, air conditioner pressure switch, air conditioner de-coupling relay	277
4. Ambient temperature switch, air conditioner system shut-off thermo switch, air conditioner system magnetic coupling cut-off relay	278
5. Air conditioner magnetic coupling, radiator fan run-on relay	279
6. Radiator fan relay, radiator fan series resistance, radiator fan separate fuse	280
048 - Climatronic	281-291
1. Climatronic	281
2. Climatronic control unit, temperature flap positioning motor	282
3. Climatronic control unit, centre vent positioning motor, front air distribution positioner motor	283
4. Climatronic control unit, ambient temperature sensor, sunlight penetration photo sensor, coolant temperature sender, vent temperature sender	284
5. Climatronic control unit, two-way valve for fresh and recirculating air flap, coolant circulation pump	285
6. Climatronic control unit, rear air distribution positioning motor, rear temperature flap positioning motor	286
7. Climatronic control unit rear vent temperature sender, additional fresh air blower	287
8. Climatronic control unit, blower control unit, blower relay, radiator fan thermo switch	288
9. Magnetic coupling, air conditioner shut-off thermo-switch	289
10. Air conditioner pressure switch. radiator fan run-on relay	290

11. Radiator fan relay, radiator fan series resistance	291
049 - Radio system "sound 2" with preparation for telephone	292-299
1. Radio system "sound 2" with preparation for telephone	292
2. Radio, cigarette lighter	293
3. Radio, amplifier	294
4. Radio, amplifier, front right loudspeaker	295
5. Radio, amplifier, rear left loudspeaker	296
6. Radio, amplifier, radio windscreen aerial, rear right loudspeaker	297
7. Amplifier, radio/telephone loudspeaker change-over relay	298
8. Controls electronics control unit, telephone, telephone microphone	299
050 - Second battery	300-301
1. Second battery	300
2. Second battery, battery cut-out relay, 12 V socket	301
051 - Additional water heater B4W/D4W	302-308
1. Additional water heater B4W/D4W	302
2. Fresh air blower	303
3. Relay for auxiliary heater operation, coolant circuit valve, recirculating pump	304
4. Fresh air blower 2nd speed relay, fresh air and recirculation air blower relay	305
5. Heater control unit, combustion air blower, metering pump	306
6. Heater control unit, flame monitor, overheating sensor, coolant temperature sender, heater glow plug	307
7. Pre-selection clock	308
052 - Additional water heater B4W/D4W	309-314
1. Additional water heater B4W/D4W	309
2. Climatronic control unit, blower control unit, blower relay	310
3. Relay for auxiliary operation, fresh air blower stage 2 relay, coolant circulation valve, circulation pump	311
4. Heating control unit, ambient temperature switch, metering pump, combustion air blower	312
5. Heater control unit, flame monitor, overheating sensor, coolant temperature sender, heater glow plug	313
6. Pre-selection clock	314
053 - Additional water heater B4W/D4W	315-321
1. Additional water heater B4W/D4W	315
2. Fresh air blower, fresh air and recirculating air switch	316
3. Relay for auxiliary operation, fresh air blower stage 2 relay, two-way coolant circulation, circulation pump	317
4. Fresh air blower isolation relay, fresh air blower and air recirculation relay, air conditioner switch	318
5. Heater control unit B4W/D4W, combustion air blower, metering pump	319
6. Heater control unit B4W/D4W, flame monitor, overheating sensor, coolant temperature sender, heater glow plug	320
7. Digital clock, pre-selection clock	321
201 - -Fitting locations:Relay plate with fuse box and additional relay plate	322-332
1. Relay plate with fuse box and additional relay plate	322
2. Fuse locations	323
3. -Fitting locations:Relay plate with fuse box and additional relay plate	324
4. -Fitting locations:Relay plate with fuse box and additional relay plate	325
5. Relay locations	326
6. Additional relay plate and fuse holder above relay plate	327
7. -Fitting locations:Relay plate with fuse box and additional relay plate	328
8. Additional relay plate and junctions behind dash panel, left	329
9. Additional relay plate and fuse holder, left in engine compartment	330
10. Multi-pin connector locations	331
11. -Fitting locations:Relay plate with fuse box and additional relay plate	332
202 - -Fitting locations:Multi-pin connectors	333-336
1. Multi-pin connectors	333
2. On engine	334
3. On engine	335
4. On body	336
203 - -Fitting locations:Control units and relays	337-339
1. Contents	337
2. Climatronic control unit	338
3. Electric windows control unit	339
401 - -Fault finding programme:Battery discharges (Leakage current suspected)	340
1. Battery discharges (Leakage current suspected)	340
402 - -Fault finding programme:Starter motor does not turn	341

1. Starter does not turn	341
403 - -Fault finding programme:Starter turns too slowly to start engine	342
1. Starter turns too slowly to start engine	342
404 - -Fault finding programme:Alternator warning lamp does not go out as speed increases	343
1. Alternator warning lamp does not go out as speed increases	343
405 - -Fault finding programme:Alternator warning lamp does not light up with ignition switched on	344
1. Alternator warning lamp does not light up with ignition switched on	344
406 - -Fault finding programme:Checking alternator and voltage regulator with V.A.G 1715	345
1. Checking alternator and voltage regulator with V.A.G 1715	345
407 - -Fault finding programme:Checking rear window wipe and wash system	346-348
1. Test prerequisites	346
2. -Fault finding programme:Checking rear window wipe and wash system	347
3. -Fault finding programme:Checking rear window wipe and wash system	348
408 - -Fault finding programme:Checking windscreen window wipe and wash system	349-351
1. Test prerequisites	349
2. -Fault finding programme:Checking windscreen window wipe and wash system	350
3. -Fault finding programme:Checking windscreen window wipe and wash system	351
409 - -Fault finding programme:Checking fog lights	352-353
1. Test prerequisites	352
2. -Fault finding programme:Checking fog lights	353
410 - -Fault finding programme:Checking hazard warning and turn signal system	354-356
1. Test prerequisites	354
2. -Fault finding programme:Checking hazard warning and turn signal system	355
3. -Fault finding programme:Checking hazard warning and turn signal system	356
411 - -Fault finding programme:Checking cruise control system	357-362
1. Contents	357
2. Self-diagnosis	358
3. -Fault finding programme:Checking cruise control system	359
4. Checking CCS switch	360
5. Cruise control system malfunctioning when driving	361
6. Activating cruise control system	362
412 - -Fault finding programme:Checking front sliding/tilting roof	363-366
1. Contents, Test prerequisites	363
2. Checking front sliding/tilting roof	364
3. -Fault finding programme:Checking front sliding/tilting roof	365
4. Checking convenience locking of sliding/tilting roof	366
413 - -Fault finding programme:Checking headlight washer system	367-369
1. Test prerequisites	367
2. -Fault finding programme:Checking headlight washer system	368
3. -Fault finding programme:Checking headlight washer system	369
414 - -Fault finding programme:Checking heated windscreen	370-373
1. Test prerequisites	370
2. -Fault finding programme:Checking heated windscreen	371
3. -Fault finding programme:Checking heated windscreen	372
4. -Fault finding programme:Checking heated windscreen	373
415 - -Fault finding programme:Checking heated rear window	374-379
1. Contents, Test prerequisites	374
2. Check heated rear window with automatic cut-off	375
3. -Fault finding programme:Checking heated rear window	376
4. Heated rear window with manual cut-off	377
5. -Fault finding programme:Checking heated rear window	378
6. -Fault finding programme:Checking heated rear window	379
416 - -Fault finding programme:Checking cruise control system	380-382
1. Test prerequisites, Preparation for fault finding, Notes for test sequence	380
2. -Fault finding programme:Checking cruise control system	381
3. -Fault finding programme:Checking cruise control system	382
417 - -Fault finding programme:Checking rear vent wing	383-386
1. Test prerequisites	383
2. -Fault finding programme:Checking rear vent wing	384
3. -Fault finding programme:Checking rear vent wing	385
4. -Fault finding programme:Checking rear vent wing	386
418 - -Fault finding programme:Checking electric windows (LHD)	387-402
1. Contents, Test prerequisites	387
2. Front left electric window (driver's) not working	388
3. -Fault finding programme:Checking electric windows (LHD)	389
4. Front right electric window (front passenger's) not working	390

5. -Fault finding programme:Checking electric windows (LHD)	391
6. -Fault finding programme:Checking electric windows (LHD)	392
7. Rear left electric window (on driver's side) not working	393
8. -Fault finding programme:Checking electric windows (LHD)	394
9. -Fault finding programme:Checking electric windows (LHD)	395
10. Rear right electric window (on front passenger's side) not working	396
11. -Fault finding programme:Checking electric windows (LHD)	397
12. -Fault finding programme:Checking electric windows (LHD)	398
13. Checking electric window convenience closing feature	399
14. -Fault finding programme:Checking electric windows (LHD)	400
15. Checking sliding/tilting sunroof convenience closing feature	401
16. -Fault finding programme:Checking electric windows (LHD)	402
419 - -Fault finding programme:Checking exterior mirror	403-409
1. Contents, Test prerequisites	403
2. Checking left adjustable exterior mirror	404
3. -Fault finding programme:Checking exterior mirror	405
4. Checking left exterior heating	406
5. Checking right adjustable exterior mirror	407
6. -Fault finding programme:Checking exterior mirror	408
7. Checking right exterior heating	409
420 - -Fault finding programme:Checking heated seats	410-418
1. Contents, Test prerequisites	410
2. -Fault finding programme:Checking heated seats	411
3. -Fault finding programme:Checking heated seats	412
4. -Fault finding programme:Checking heated seats	413
5. -Fault finding programme:Checking heated seats	414
6. -Fault finding programme:Checking heated seats	415
7. -Fault finding programme:Checking heated seats	416
8. -Fault finding programme:Checking heated seats	417
9. -Fault finding programme:Checking heated seats	418