

001 - Current supply	1-3
1. Current supply	1
2. Battery, starter, alternator, X contact relief relay	2
3. Ignition/starter switch	3
002 - Self-diagnosis connection	4-6
1. Self-diagnosis connection	4
2. self-diagnosis connection	5
3. Self-diagnosis	6
003 - Dash panel insert	7-14
1. Dash panel insert	7-8
2. Dash panel insert, fuel gauge, coolant shortage and coolant temperature indicator, speedometer sender, optical and acoustical oil pressure warning	9
3. Dash panel insert, Alternator warning lamp, turn signal warning lamps, dash panel insert light bulb	10
4. Dash panel insert, rev. counter, speedometer, multi-function display, reserve fuel warning lamp, ambient temperature sensor	11
5. Dash panel insert, odometer display, door open warning lamps, coolant shortage indicator sender	12
6. Handbrake warning, brake fluid level warning contact, front door contact switch	13
7. Rear door contact switch, windscreen washer fluid level sender	14
004 - Vehicle lighting	15-23
1. Vehicle lighting	15
2. Lighting switch	16
3. Fog light, headlight range control	17
4. Headlights, side lights	18
5. Front turn signals, headlight dipper/flasher switch, parking light switch	19
6. Turn signal switch, parking light switch	20
7. Turn signal bulb rear, brake light, tail lights	21
8. High level brake light, brake light switch, brake pedal switch	22
9. Rear fog lights, reversing light, number plate light	23
005 - Interior light, digital clock, 12V sockets, cigarette lighter	24-30
1. Interior light, digital clock, 12V sockets, cigarette lighter	24
2. Battery, cigarette lighter	25
3. Front and rear door warning lamps, glove box light, consumer switch-off	26
4. Front interior light, front and rear entry lights, luggage compartment lights	27
5. Rear interior light, centre and rear reading lights	28
6. Illuminated make-up mirror, front and rear door contact switch	29
7. Digital clock, 12V sockets, rear left door contact switch (rear)	30
006 - Dual tone horn	31-32
1. Dual tone horn	31
2. Dual tone horn	32
007 - Heated rear window, heated windscreen	33-37
1. Heated rear window, heated windscreen	33-34
2. Heated rear window, X contact relief relay	35
3. Switch for heated rear window and heated windscreen, heated washer jets	36
4. Heated windscreen	37
008 - Front and rear wash/wipe system	38-41
1. Front and rear wash/wipe system	38
2. Battery, X contact relief relay	39
3. Front and rear wash/wipe system	40
4. Rear wash/wipe system	41
009 - Immobilizer	42-44
1. Immobilizer	42
2. Battery, ignition/starter switch	43
3. Immobilizer, immobilizer/ central locking warning lamp	44
010 - Fresh air blower	45-46
1. Fresh air blower	45
2. Fresh air blower, fresh air blower switch	46
011 - 2.0 ltr./85 kW Simos, engine codes ADY	47-57
1. 2.0 ltr./85 kW Simos, engine codes ADY	47-48
2. Battery, starter, alternator, X contact relief relay	49
3. Ignition/starter switch, fuel pump relay, fuel gauge sender	50
4. Simos control unit, ignition system, hall sender	51
5. Simos control unit, injectors, coolant temperature sender	52
6. Simos control unit, lambda probes, throttle valve control unit	53
7. Simos control unit, knock sensor, engine speed sender, intake manifold temperature sender, immobilizer control unit. self-diagnosis connection	54

8. Simos control unit, oil pressure switch, air mass meter, exhaust gas recirculation valve	55
9. Dash panel insert, speedometer sender, optical and acoustical oil pressure warning, ambient temperature sensor, oil temperature sender	56
10. Dash panel insert, speedometer, rev. counter, odometer display, fuel gauge, coolant shortage and coolant temperature indicator	57
012 - 2,8 ltr./128 kW Motronic, engine codes AAA	58-71
1. 2,8 ltr./128 kW Motronic, engine codes AAA	58-59
2. Battery, starter, alternator, X contact relief relay	60
3. Ignition/starter switch, fuel pump relay	61
4. Motronic control unit, ignition system, fuel pump, fuel gauge sender	62
5. Motronic control unit, throttle valve control unit	63
6. Motronic control unit, injectors, exhaust gas recirculation valve	64
7. Motronic control unit, lambda probes, hall sender	65
8. Motronic control unit, knock sensor, engine speed sender, immobilizer control unit, self-diagnosis connection	66
9. Motronic control unit, air mass meter, activated charcoal filter system, secondary air inlet valve, secondary air pump motor	67
10. Motronic control unit, coolant temperature sender, intake manifold temperature sender, exhaust gas recirculation temperature sensor	68
11. Oil pressure switch, speedometer sender, fan run-on thermo-switch	69
12. Dash panel insert, optical and acoustical oil pressure warning, fuel gauge, coolant shortage and coolant temperature indicator, ambient temperature sensor, oil temperature sender	70
13. Dash panel insert, speedometer, rev. counter, odometer display, coolant shortage indicator sender, alternator warning lamp	71
013 - 1.9 ltr./81 kW direct injection turbo diesel, engine codes AFN	72-83
1. 1.9 ltr./81 kW direct injection turbo diesel, engine codes AFN	72-73
2. Battery, starter, alternator, X contact relief relay	74
3. Ignition/starter switch, terminal 30 voltage supply relay, heater element (crankcase breather)	75
4. Diesel direct injection system control unit, commencement of injection valve, exhaust gas recirculation valve, charge pressure control solenoid valve, fuel shut-off valve	76
5. Diesel direct injection system control unit, engine speed sender, air mass meter, intake manifold temperature sender, immobilizer control unit, self-diagnosis connection	77
6. Diesel direct injection system control unit, pedal switch, modulating piston movement sender, fuel temperature sender, metering adjuster, brake light switch	78
7. Diesel direct injection system control unit, needle lift sender, accelerator pedal position sender, idling switch, Kick-down switch	79
8. Diesel direct injection system control unit, cruise control system switch, glow plugs, glow plug relay	80
9. Oil pressure switch, speedometer sender, coolant temperature sender	81
10. Dash panel insert, speedometer sender, optical and acoustical oil pressure warning, ambient temperature sensor, oil temperature sender, speedometer, glow period warning lamp	82
11. Dash panel insert, rev. counter, coolant shortage and coolant temperature indicator, fuel gauge	83
014 - 1.9 ltr./66 kW direct injection turbo diesel, engine codes AHU	84-96
1. 1.9 ltr./66 kW direct injection turbo diesel, engine codes AHU	84-85
2. Battery, starter, alternator, X contact relief relay	86
3. Ignition/starter switch, terminal 30 voltage supply relay, heater element (crankcase breather)	87
4. Diesel direct injection system control unit, commencement of injection valve, exhaust gas recirculation valve, charge pressure control solenoid valve, fuel shut-off valve	88
5. Diesel direct injection system control unit, engine speed sender, air mass meter, intake manifold temperature sender, immobilizer control unit, self-diagnosis connection	89
6. Diesel direct injection system control unit, pedal switch, modulating piston movement sender, fuel temperature sender, metering adjuster, brake light switch	90
7. Diesel direct injection system control unit, needle lift sender, accelerator pedal position sender, idling switch, Kick-down switch	91
8. Diesel direct injection system control unit, cruise control system switch, glow plugs, glow plug relay	92
9. Oil pressure switch, speedometer sender, coolant temperature sender	93
10. Dash panel insert, speedometer sender, optical and acoustical oil pressure warning, ambient temperature sensor, oil temperature sender, speedometer, glow period warning lamp	94
11. Dash panel insert, rev. counter, coolant shortage and coolant temperature indicator, fuel gauge	95
12. Coolant heater element	96
015 - Automatic gearbox	97-105
1. Automatic gearbox	97-98
2. Ignition/starter switch, starter inhibitor and reversing lights switch, immobilizer relay	99
3. Automatic gearbox control unit, starter inhibitor and reversing light relay	100
4. Automatic gearbox control unit, solenoid valve, vehicle speed sender	101

5. Automatic gearbox control unit, gearbox speed sender	102
6. Automatic gearbox control unit, selector lever lock solenoid, kick-down switch	103
7. Automatic gearbox control unit, multi-function switch	104
8. Automatic gearbox control unit, selector lever illumination	105
016 - Automatic gearbox	106-114
1. Automatic gearbox	106-107
2. Ignition/starter switch, starter inhibitor and reversing lights switch, immobilizer relay	108
3. Automatic gearbox control unit, starter inhibitor and reversing light relay	109
4. Automatic gearbox control unit, solenoid valve, vehicle speed sender	110
5. Automatic gearbox control unit, gearbox speed sender	111
6. Automatic gearbox control unit, selector lever lock solenoid, kick-down switch	112
7. Automatic gearbox control unit, multi-function switch	113
8. Automatic gearbox control unit, selector lever illumination	114
017 - Automatic gearbox	115-123
1. Automatic gearbox	115-116
2. Ignition/starter switch, starter inhibitor and reversing lights switch, immobilizer relay	117
3. Automatic gearbox control unit, starter inhibitor and reversing light relay	118
4. Automatic gearbox control unit, solenoid valve, vehicle speed sender	119
5. Automatic gearbox control unit, gearbox speed sender	120
6. Automatic gearbox control unit, selector lever lock solenoid	121
7. Automatic gearbox control unit, multi-function switch	122
8. Automatic gearbox control unit, selector lever illumination	123
018 - 2nd heat exchanger for passenger compartment	124-128
1. 2nd heat exchanger for passenger compartment	124-125
2. Passenger compartment heating and ventilation	126
3. X contact relief relay, coolant circulation switch-off relay, coolant cut-off valve two-way valve	127
4. Switch-off via heated windscreen	128
019 - Airbag	129-130
1. Airbag	129
2. Airbag control unit, airbag disabled warning lamp, airbag igniter, coil connector	130
020 - Anti-lock brake system (ABS), Anti-lock brake system (ABS), with electronic differential lock (EDL)	131-134
1. Anti-lock brake system (ABS), Anti-lock brake system (ABS), with electronic differential lock (EDL)	131
2. ABS/ABS with EDL control unit, ABS valves	132
3. ABS/ABS with EDL control unit, ABS valves, Differential lock valve, speed sensor	133
4. ABS/ABS with EDL/TCS control unit, ABS hydraulic pump, ABS warning lamp	134
021 - Rear vent wing window	135-137
1. Rear vent wing window	135
2. Switches and engines rear vent wing window	136
3. Rear vent wing window relay	137
022 - Electrically adjustable and heated exterior mirrors	138-140
1. Electrically adjustable and heated exterior mirrors	138
2. Exterior mirror adjustment and heating	139
3. Exterior mirror adjustment and heating	140
023 - Front and rear window lifters	141-147
1. Front and rear window lifters	141
2. Window lifter switch in driver's door, window lifter control unit, FL	142
3. Control unit with window lifter motor front left	143
4. Window lifter switch in rear left door, control unit with window lifter motor rear left	144
5. Switch and rear window lifter isolation switch in the console	145
6. Window lifter switch in front passenger's door, window lifter control unit, FL	146
7. Window lifter switch in rear right door, control unit with window lifter motor rear right	147
024 - Radiator fan, 2-speed	148-149
1. Radiator fan, 2-speed	148
2. Radiator fan	149
025 - Radiator fan, 3-speed	150-151
1. Radiator fan, 3-speed	150
2. Radiator fan control unit, radiator fan	151
026 - Radiator fan, 3 speed, with radiator fan run-on	152-155
1. Radiator fan, 3 speed, with radiator fan run-on	152-153
2. Radiator fan relay, radiator fan, radiator fan series resistor	154
3. Radiator fan run-on relay, thermo-switch	155
027 - Radiator fan, 2 speed, with radiator fan run-on	156-159
1. Radiator fan, 2 speed, with radiator fan run-on	156-157
2. Radiator fan run-on control unit. thermo-switch. continued circulation of coolant pump	158

3. Radiator fan relay, radiator fan, fan run-on thermo-switch	159
028 - Radiator fan, 3 speed, with radiator fan run-on	160-163
1. Radiator fan, 3 speed, with radiator fan run-on	160-161
2. Radiator fan relay, radiator fan, radiator fan series resistor	162
3. Radiator fan run-on control unit, thermo-switch, continued circulation of coolant pump	163
029 - Air conditioner	164-169
1. Air conditioner	164-165
2. Fresh air blower, fresh air and recirculating air switch, air conditioner switch	166
3. Radiator fan control unit, ambient temperature switch, air conditioning system switch-off relay, thermo-switch,	167
4. Radiator fan thermo-switch, air conditioner pressure switch	168
5. Radiator fan control unit, magnetic coupling, radiator fan	169
030 - Air conditioner	170-176
1. Air conditioner	170-171
2. Fresh air blower, fresh air and recirculating air switch, air conditioner switch	172
3. Air conditioner pressure switch, magnetic coupling relay, air conditioning system magnetic coupling	173
4. Radiator fan thermo-switch, air conditioner uncoupling relay, radiator fan run-on control unit	174
5. Ambient temperature switch, thermo-switch, air conditioning system switch-off relay, diode for continued circulation of coolant, coolant circulation pump	175
6. Radiator fan relay, radiator fan, radiator fan series resistor	176
031 - Air conditioner	177-182
1. Air conditioner	177-178
2. Fresh air blower, fresh air and recirculating air switch, air conditioner switch	179
3. Magnetic coupling relay, air conditioning system magnetic coupling, ambient temperature switch, thermo-switch, magnetic coupling cut - out relay, air conditioning system	180
4. Radiator fan thermo-switch, air conditioner uncoupling relay, air conditioner pressure switch, radiator fan run-on relay	181
5. Radiator fan relay, radiator fan, radiator fan series resistor	182
032 - Air conditioner	183-188
1. Air conditioner	183-184
2. Fresh air blower, fresh air and recirculating air switch, air conditioner switch	185
3. Radiator fan control unit, ambient temperature switch, magnetic coupling cut - out relay, air conditioning system, thermo-switch	186
4. Radiator fan thermo-switch, air conditioner pressure switch	187
5. Radiator fan control unit, magnetic coupling, radiator fan	188
033 - Climatronic	189-199
1. Climatronic	189-190
2. Climatronic control unit, temperature flap control motor	191
3. Climatronic control unit, central vents control motor, front air distribution control motor	192
4. Climatronic control unit, ambient temperature sensor, sunlight penetration photosensor, coolant temperature sender, vent temperature sender	193
5. Climatronic control unit, fresh and recirculating air flap two-way valve, additional heat exchanger valve	194
6. Climatronic control unit, rear air distribution control motor, rear temperature flap control motor	195
7. Climatronic control unit, rear vent temperature sender, rear fresh air blower	196
8. Climatronic control unit, blower control unit, blower relay, fresh air blower	197
9. Radiator fan control unit, air conditioner pressure switch, thermo-switch	198
10. Radiator fan control unit, radiator fan thermo-switch, radiator fan	199
034 - Climatronic	200-211
1. Climatronic	200-201
2. Climatronic control unit, temperature flap control motor	202
3. Climatronic control unit, central vents control motor, front air distribution control motor	203
4. Climatronic control unit, ambient temperature sensor, sunlight penetration photosensor, coolant temperature sender, vent temperature sender	204
5. Climatronic control unit, fresh and recirculating air flap two-way valve, additional heat exchanger valve	205
6. Climatronic control unit, rear air distribution control motor, rear temperature flap control motor	206
7. Climatronic control unit, rear vent temperature sender, rear fresh air blower	207
8. Climatronic control unit, blower control unit, blower relay, fresh air blower	208
9. Magnetic coupling, magnetic coupling relay, thermo-switch	209
10. Air conditioner pressure switch, diode	210
11. Radiator fan relay, radiator fan, radiator fan series resistor	211
035 - Climatronic	212-223

1. Climatronic	212-213
2. Climatronic control unit, temperature flap control motor	214
3. Climatronic control unit, central vents control motor, front air distribution control motor	215
4. Climatronic control unit, ambient temperature sensor, sunlight penetration photosensor, coolant temperature sender, vent temperature sender	216
5. Climatronic control unit, fresh and recirculating air flap two-way valve	217
6. Climatronic control unit, rear air distribution control motor, rear temperature flap control motor	218
7. Climatronic control unit, rear vent temperature sender, rear fresh air blower	219
8. Climatronic control unit, blower control unit, blower relay, fresh air blower, coolant thermo-switch	220
9. Magnetic coupling, magnetic coupling relay, radiator fan run-on relay, thermo-switch	221
10. Air conditioner pressure switch, diode	222
11. Radiator fan relay, radiator fan, radiator fan series resistor	223
036 - Climatronic	224-235
1. Climatronic	224-225
2. Climatronic control unit, temperature flap control motor	226
3. Climatronic control unit, central vents control motor, front air distribution control motor	227
4. Climatronic control unit, ambient temperature sensor, front vent temperature sender, sunlight penetration photosensor, coolant temperature sender - air conditioner	228
5. Climatronic control unit, fresh and recirculating air flap two-way valve, additional heat exchanger valve	229
6. Climatronic control unit, rear air distribution control motor, rear temperature flap control motor	230
7. Climatronic control unit, rear vent temperature sender, rear fresh air blower	231
8. Climatronic control unit, blower control unit, blower relay, fresh air blower	232
9. Magnetic coupling, magnetic coupling relay, radiator fan run-on control unit, radiator fan thermo-switch, Fan run-on thermo-switch	233
10. Air conditioner pressure switch, diode, thermo-switch, continued circulation of coolant pump	234
11. Radiator fan relay, radiator fan, radiator fan series resistor	235
037 - Central locking with remote control and anti-theft alarm system aerial	236-246
1. Central locking with remote control and anti-theft alarm system aerial	236
2. Central locking fuses	237
3. Door contact switch, luggage compartment light switch, engine compartment lighting switch	238
4. Tailgate/boot lid central locking switch (driver's side), tailgate/boot lid central locking switch (front passenger's side), tailgate/boot lid central locking switch (tailgate/boot lid), tailgate/bootlid lock motor	239
5. Central locking actuator, front left, immobilizer/ central locking warning lamp	240
6. Central locking actuator, front right	241
7. Central locking actuator, rear left	242
8. Central locking actuator, rear right, fuel tank filler flap central locking actuator	243
9. Interior monitor ultra-sonic sensor	244
10. Alarm horn, heated rear window	245
11. Front and rear turn signals, left and right side turn signals	246
038 - Cruise control system (GRA)	247-249
1. Cruise control system (GRA)	247
2. Cruise control system switch, cruise control system switch	248
3. Cruise control system switch, clutch pedal switch, cruise control system brake pedal switch, vacuum pump for speed control	249
039 - Sliding / tilting sunroof	250-251
1. Sliding / tilting sunroof	250
2. Sliding sunroof adjustment control unit with motor, sliding sunroof switch	251
040 - Seat heating	252-254
1. Seat heating	252
2. Heated driver's seat	253
3. Heated front passenger's side	254
041 - Daytime driving lights	255-263
1. Daytime driving lights	255
2. Lighting switch	256
3. Fog light, headlight range control	257
4. Headlights, side lights	258
5. Front turn signals, headlight dipper/flasher switch, parking light switch	259
6. Turn signal switch, parking light switch	260
7. Turn signal bulb rear, brake light ,high level brake light, tail lights	261
8. Day driving lights switch-on relay, brake light switch, brake pedal switch	262
9. Rear fog lights. reversing light. number plate light	263

042 - Radio systems "sound 1" with preperation for telephone	264-268
1. Radio systems "sound 1" with preperation for telephone	264
2. Radio, radio/telephone loudspeaker switch-over relay, front loudspeakers	265
3. Radio, rear loudspeakers	266
4. Radio	267
5. Mobile phone operating electronics control unit, telephone microphone, telephone aerial, mobile telephone	268
043 - Radio systems "sound 2"	269-275
1. Radio systems "sound 2"	269-270
2. Radio	271
3. Radio, amplifier, loudspeaker front left	272
4. Radio, amplifier, loudspeaker front right	273
5. Radio, amplifier, loudspeaker rear left	274
6. Radio, amplifier, loudspeaker, rear right, electronic amplified window aerial	275
044 - Radio systems "sound 2" with radio remote control and CD changer	276-281
1. Radio systems "sound 2" with radio remote control and CD changer	276
2. Radio	277
3. Radio, amplifier, loudspeaker front left	278
4. Radio, amplifier, CD changer, radio remote control, loudspeaker front right	279
5. Radio, amplifier, CD changer, loudspeaker rear left	280
6. Radio, amplifier, loudspeaker, rear right, electronic amplified window aerial	281
045 - Radio navigation system with preperation for telephone	282-288
1. Radio navigation system with preperation for telephone	282
2. Control unit with display for radio and navigation	283
3. Control unit with display for radio and navigation, front loudspeakers	284
4. Control unit with display for radio and navigation, rear left loudspeakers	285
5. Control unit with display for radio and navigation, loudspeaker rear right, navigation aerial (GPS), telephone aerial, electronic amplified window aerial for radio	286
6. Control unit with display for radio and navigation, CD changer	287
7. Mobile phone operating electronics control unit, microphone for telephone, mobile telephone	288
046 - Blub failure monitor	289-293
1. Blub failure monitor	289
2. Headlights, side lights	290
3. Rear turn signals, brake lights, tail light, headlight dipper/flasher switch	291
4. High level brake ligh, brake light switch, brake pedal switch	292
5. Dash panel insert, blub failure warning lamps	293
047 - Trailer	294-297
1. Trailer	294
2. Tail light left, signal bulb rear left, brake light left, high level brake ligh	295
3. Trailer socket, rear fog light switch-off	296
4. Tail light right, rear right turn signal, brake light right, trailer operation warning lamp	297
048 - Second battery	298-299
1. Second battery	298
2. Second battery, battery cut-out relay, 12 V socket	299
049 - Ambient temperature warning	300-301
1. Ambient temperature warning	300
2. Ambient temperature warning 4°C and 5°C	301
050 - Radio systems "sound 2" with preperation for telephone	302-308
1. Radio systems "sound 2" with preperation for telephone	302
2. Radio	303
3. Radio, amplifier, loudspeaker front right	304
4. Radio, amplifier, loudspeaker rear left	305
5. Radio, amplifier, loudspeaker, rear right, electronic amplified window aerial	306
6. Amplifier, loudspeaker, front left, radio/telephone loudspeaker switch-over relay	307
7. Mobile phone operating electronics control unit, telephone microphone, telephone aerial, mobile telephone	308
051 - Additional water heater B4W/D4W	309-316
1. Additional water heater B4W/D4W	309-310
2. Fresh air blower and air recirculation relay, fresh air and recirculating air switch, fresh air blower	311
3. Digital clock, pre-selection clock	312
4. Heater control unit B4W/D4W, battery cut-out relay, second battery, 12 V socket	313
5. Heater control unit B4W/D4W, glow plug for heater, metering pump, combustion air blower, flame monitor, coolant temperature sender	314
6. Heater control unit B4W/D4W, overheating sensor, ambient temperature switch, auxiliary heater operation relav	315

7. Fresh air blower Relay, 2nd speed, coolant circuit valve, recirculating pump	316
052 - Additional water heater B4W/D4W	317-325
1. Additional water heater B4W/D4W	317-318
2. Fresh air blower and air recirculation relay, fresh air and recirculating air switch, fresh air blower	319
3. Digital clock, pre-selection clock	320
4. Heater control unit B4W/D4W, battery cut-out relay, second battery, 12 V socket	321
5. Heater control unit B4W/D4W, glow plug for heater, metering pump, combustion air blower, flame monitor, coolant temperature sender	322
6. Heater control unit B4W/D4W, overheating sensor, ambient temperature switch, auxiliary heater operation relay	323
7. Fresh air blower Relay, 2nd speed, fresh air blower isolation relay	324
8. Coolant circuit valve, recirculating pump, air conditioner switch	325
053 - Additional water heater B4W/D4W	326-334
1. Additional water heater B4W/D4W	326-327
2. Digital clock, pre-selection clock	328
3. Control and display unit for Climatronic, climatronic control unit, rear fresh air blower control unit, rear fresh air blower	329
4. Climatronic control unit, blower control unit, blower relay, fresh air blower	330
5. Heater control unit B4W/D4W, battery cut-out relay, second battery, 12 V socket	331
6. Heater control unit B4W/D4W, glow plug for heater, metering pump, combustion air blower, flame monitor, coolant temperature sender	332
7. Heater control unit B4W/D4W, overheating sensor, ambient temperature switch, auxiliary heateroperation relay	333
8. Fresh air blower Relay, 2nd speed, coolant circuit valve, recirculating pump	334
054 - 1.8 ltr./110 kW Motronic, engine codes AJH	335-347
1. 1.8 ltr./110 kW Motronic, engine codes AJH	335-336
2. Battery, starter, alternator, X contact relief relay	337
3. Ignition/starter switch, fuel pump relay, fuel gauge sender, fuel pump	338
4. Ignition system	339
5. Motronic control unit, throttle valve control unit	340
6. Motronic control unit, injectors, altitude sender	341
7. Motronic control unit, lambda probe, Hall sender, intake air temperature sender	342
8. Motronic control unit, knock sensor, engine speed sender, immobilizer control unit, self-diagnosis connection	343
9. Motronic control unit, air mass meter, activated charcoal filter system, charge pressure control solenoid valve, secondary air inlet valve, secondary air pump	344
10. Motronic control unit, coolant temperature sender, fan run-on thermo-switch, oil pressure switch, speedometer sender	345
11. Dash panel insert, optical and acoustical oil pressure warning, fuel gauge, coolant shortage and coolant temperature indicator, ambient temperature sensor, oil temperature sende	346
12. Dash panel insert, speedometer, rev. counter, odometer display, coolant shortage indicator sender, alternator warning lamp	347
055 - Additional water heater D3W	348-350
1. Additional water heater D3W	348
2. Heater control unit D3W, temperature sensor, flame monitor, ambient temperature switch, overheating sensor	349
3. Heater control unit D3W, glow plug for heater, combustion air blower, metering pump	350
056 - Headlight washer system	351-352
1. Headlight washer system	351
2. Headlight washer system	352
057 - Automatic gearbox	353-360
1. Automatic gearbox	353-354
2. Ignition/starter switch, starter inhibitor and reversing lights switch, immobilizer relay	355
3. Automatic gearbox control unit, starter inhibitor and reversing light relay	356
4. Automatic gearbox control unit, solenoid valve, vehicle speed sender	357
5. Automatic gearbox control unit, selector lever lock solenoid, kick-down switch, gearbox speed sender	358
6. Automatic gearbox control unit, multi-function switch	359
7. Automatic gearbox control unit, selector lever illumination	360
058 - Air conditioner	361-367
1. Air conditioner	361-362
2. Fresh air blower, fresh air and recirculating air switch, air conditioner switch	363
3. Air conditioner pressure switch, magnetic coupling relay, air conditioning system magnetic coupling	364
4. Radiator fan thermo-switch. air conditioner uncouplina relav. radiator fan run-on control unit	365

5. Ambient temperature switch, radiator fan thermo-switch, air conditioning system switch-off relay, radiator fan run-on relay, coolant circulation pump	366
6. Radiator fan relay, radiator fan, radiator fan series resistor	367
059 - Climatronic	368-379
1. Climatronic	368-369
2. Climatronic control unit, temperature flap control motor	370
3. Climatronic control unit, central vents control motor, front air distribution control motor	371
4. Climatronic control unit, ambient temperature sensor, sunlight penetration photosensor, coolant temperature sender, vent temperature sender	372
5. Climatronic control unit, fresh and recirculating air flap two-way valve	373
6. Climatronic control unit, rear air distribution control motor, rear temperature flap control motor	374
7. Climatronic control unit, rear vent temperature sender, rear fresh air blower	375
8. Climatronic control unit, blower control unit, blower relay, fresh air blower	376
9. Radiator fan run-on control unit, fan run-on thermo-switch, radiator fan thermo-switch, air conditioner shut-off thermo-switch	377
10. Air conditioner pressure switch, diode, coolant circulation pump, radiator fan run-on relay, air conditioning system magnetic coupling, magnetic coupling relay	378
11. Radiator fan relay, radiator fan, radiator fan series resistor	379
060 - Radiator fan, 3 speed, with radiator fan run-on	380-383
1. Radiator fan, 3 speed, with radiator fan run-on	380-381
2. Radiator fan relay, radiator fan, radiator fan series resistor, radiator fan series resistor, radiator fan thermo-switch, third speed	382
3. Radiator fan thermo-switch, radiator fan run-on control unit, radiator fan run-on relay, coolant circulation pump, fan run-on thermo-switch	383
061 - Syncro	384-385
1. Syncro	384
2. Syncro with automatic gearbox	385
062 - Dual tone horn	386-387
1. Dual tone horn	386
2. Dual tone horn	387
063 - Immobilizer	388-390
1. Immobilizer	388
2. Battery, ignition/starter switch	389
3. Immobilizer, immobilizer/ central locking warning lamp	390
064 - Automatic gearbox	391-399
1. Automatic gearbox	391-392
2. Ignition/starter switch, starter inhibitor and reversing lights switch, immobilizer relay	393
3. Automatic gearbox control unit, starter inhibitor and reversing light relay	394
4. Automatic gearbox control unit, solenoid valve, vehicle speed sender	395
5. Automatic gearbox control unit, gearbox speed sender	396
6. Automatic gearbox control unit, selector lever lock solenoid, kick-down switch	397
7. Automatic gearbox control unit, multi-function switch	398
8. Automatic gearbox control unit, selector lever illumination	399
065 - Automatic gearbox	400-408
1. Automatic gearbox	400-401
2. Ignition/starter switch, starter inhibitor and reversing lights switch, immobilizer relay	402
3. Automatic gearbox control unit, starter inhibitor and reversing light relay	403
4. Automatic gearbox control unit, solenoid valve, vehicle speed sender	404
5. Automatic gearbox control unit, gearbox speed sender	405
6. Automatic gearbox control unit, selector lever lock solenoid, kick-down switch	406
7. Automatic gearbox control unit, multi-function switch	407
8. Automatic gearbox control unit, selector lever illumination	408
066 - Automatic gearbox	409-417
1. Automatic gearbox	409-410
2. Ignition/starter switch, starter inhibitor and reversing lights switch, immobilizer relay	411
3. Automatic gearbox control unit, starter inhibitor and reversing light relay	412
4. Automatic gearbox control unit, solenoid valve, vehicle speed sender	413
5. Automatic gearbox control unit, gearbox speed sender	414
6. Automatic gearbox control unit, selector lever lock solenoid	415
7. Automatic gearbox control unit, multi-function switch	416
8. Automatic gearbox control unit, selector lever illumination	417
067 - Automatic gearbox	418-425
1. Automatic gearbox	418-419
2. Ignition/starter switch, starter inhibitor and reversing lights switch, immobilizer relay	420
3. Automatic gearbox control unit, starter inhibitor and reversing light relay	421

4. Automatic gearbox control unit, solenoid valve, vehicle speed sender	422
5. Automatic gearbox control unit, selector lever lock solenoid, kick-down switch, gearbox speed sender	423
6. Automatic gearbox control unit, multi-function switch	424
7. Automatic gearbox control unit, selector lever illumination	425
068 - Radiator fan, 3 speed, with radiator fan run-on	426-429
1. Radiator fan, 3 speed, with radiator fan run-on	426-427
2. Radiator fan relay, radiator fan, radiator fan series resistor	428
3. Radiator fan run-on relay, thermo-switch	429
069 - Radiator fan, 3 speed, with radiator fan run-on	430-433
1. Radiator fan, 3 speed, with radiator fan run-on	430-431
2. Radiator fan relay, radiator fan, radiator fan series resistor, radiator fan series resistor, radiator fan thermo-switch, third speed	432
3. Radiator fan thermo-switch, radiator fan run-on control unit, radiator fan run-on relay, coolant circulation pump, fan run-on thermo-switch	433
070 - Air conditioner	434-440
1. Air conditioner	434-435
2. Fresh air blower, fresh air and recirculating air switch, air conditioner switch	436
3. Air conditioner pressure switch, magnetic coupling relay, air conditioning system magnetic coupling	437
4. Radiator fan thermo-switch, air conditioner uncoupling relay, radiator fan run-on control unit	438
5. Ambient temperature switch, thermo-switch, air conditioning system switch-off relay, diode for continued circulation of coolant, coolant circulation pump	439
6. Radiator fan relay, radiator fan, radiator fan series resistor	440
071 - Air conditioner	441-447
1. Air conditioner	441-442
2. Fresh air blower, fresh air and recirculating air switch, air conditioner switch	443
3. Air conditioner pressure switch, magnetic coupling relay, air conditioning system magnetic coupling	444
4. Radiator fan thermo-switch, air conditioner uncoupling relay, radiator fan run-on control unit	445
5. Ambient temperature switch, radiator fan thermo-switch, air conditioning system switch-off relay, radiator fan run-on relay, coolant circulation pump	446
6. Radiator fan relay, radiator fan, radiator fan series resistor	447
072 - Air conditioner	448-453
1. Air conditioner	448-449
2. Fresh air blower, fresh air and recirculating air switch, air conditioner switch	450
3. Radiator fan control unit, ambient temperature switch, air conditioning system switch-off relay, thermo-switch,	451
4. Radiator fan thermo-switch, air conditioner pressure switch	452
5. Radiator fan control unit, magnetic coupling, radiator fan	453
073 - Air conditioner	454-459
1. Air conditioner	454-455
2. Fresh air blower, fresh air and recirculating air switch, air conditioner switch	456
3. Magnetic coupling relay, air conditioning system magnetic coupling, ambient temperature switch, thermo-switch, magnetic coupling cut - out relay, air conditioning system	457
4. Radiator fan thermo-switch, air conditioner uncoupling relay, air conditioner pressure switch, radiator fan run-on relay	458
5. Radiator fan relay, radiator fan, radiator fan series resistor	459
074 - Air conditioner	460-465
1. Air conditioner	460-461
2. Fresh air blower, fresh air and recirculating air switch, air conditioner switch	462
3. Radiator fan control unit, ambient temperature switch, magnetic coupling cut - out relay, air conditioning system, thermo-switch	463
4. Radiator fan thermo-switch, air conditioner pressure switch	464
5. Radiator fan control unit, magnetic coupling, radiator fan	465
075 - Additional water heater B4W/D4W	466-473
1. Additional water heater B4W/D4W	466-467
2. Fresh air blower and air recirculation relay, fresh air and recirculating air switch, fresh air blower	468
3. Digital clock, pre-selection clock	469
4. Heater control unit B4W/D4W, battery cut-out relay, second battery	470
5. Heater control unit B4W/D4W, glow plug for heater, metering pump, combustion air blower, flame monitor, coolant temperature sender	471
6. Heater control unit B4W/D4W, overheating sensor, ambient temperature switch, auxiliary heater operation relay	472
7. Fresh air blower Relav. 2nd speed. coolant circuit valve. recirculating pump	473

076 - Additional water heater B4W/D4W	474-482
1. Additional water heater B4W/D4W	474-475
2. Fresh air blower and air recirculation relay, fresh air and recirculating air switch, fresh air blower	476
3. Digital clock, pre-selection clock	477
4. Heater control unit B4W/D4W, battery cut-out relay, second battery	478
5. Heater control unit B4W/D4W, glow plug for heater, metering pump, combustion air blower, flame monitor, coolant temperature sender	479
6. Heater control unit B4W/D4W, overheating sensor, ambient temperature switch, auxiliary heater operation relay	480
7. Fresh air blower Relay, 2nd speed, fresh air blower isolation relay	481
8. Coolant circuit valve, recirculating pump, air conditioner switch	482
077 - Additional water heater B4W/D4W	483-491
1. Additional water heater B4W/D4W	483-484
2. Digital clock, pre-selection clock	485
3. Control and display unit for Climatronic, climatronic control unit, rear fresh air blower control unit, rear fresh air blower	486
4. Climatronic control unit, blower control unit, blower relay, fresh air blower	487
5. Heater control unit B4W/D4W, battery cut-out relay, second battery	488
6. Heater control unit B4W/D4W, glow plug for heater, metering pump, combustion air blower, flame monitor, coolant temperature sender	489
7. Heater control unit B4W/D4W, overheating sensor, ambient temperature switch, auxiliary heater operation relay	490
8. Fresh air blower Relay, 2nd speed, coolant circuit valve, recirculating pump	491
078 - Climatronic	492-503
1. Climatronic	492-493
2. Climatronic control unit, temperature flap control motor	494
3. Climatronic control unit, central vents control motor, front air distribution control motor	495
4. Climatronic control unit, ambient temperature sensor, sunlight penetration photosensor, coolant temperature sender, front vent temperature sender	496
5. Climatronic control unit, fresh and recirculating air flap two-way valve, additional heat exchanger valve	497
6. Climatronic control unit, rear air distribution control motor, rear temperature flap control motor	498
7. Climatronic control unit, rear vent temperature sender, rear fresh air blower	499
8. Climatronic control unit, blower control unit, blower relay, fresh air blower	500
9. Radiator fan run-on control unit, fan run-on thermo-switch, radiator fan thermo-switch, air conditioner shut-off thermo-switch	501
10. Air conditioner pressure switch, diode, coolant circulation pump, radiator fan run-on relay, air conditioning system magnetic coupling, magnetic coupling relay	502
11. Radiator fan relay, radiator fan, radiator fan series resistor	503
079 - Climatronic	504-515
1. Climatronic	504-505
2. Climatronic control unit, temperature flap control motor	506
3. Climatronic control unit, central vents control motor, front air distribution control motor	507
4. Climatronic control unit, ambient temperature sensor, front vent temperature sender, sunlight penetration photosensor, air conditioner system coolant temperature sender	508
5. Climatronic control unit, fresh and recirculating air flap two-way valve, additional heat exchanger valve	509
6. Climatronic control unit, rear air distribution control motor, rear temperature flap control motor	510
7. Climatronic control unit, rear vent temperature sender, rear fresh air blower	511
8. Climatronic control unit, blower control unit, blower relay	512
9. Magnetic coupling, magnetic coupling relay, radiator fan run-on relay, radiator fan thermo-switch	513
10. Air conditioner pressure switch, diode, thermo-switch	514
11. Radiator fan relay, radiator fan, radiator fan series resistor	515
080 - 2nd heat exchanger for passenger compartment	516-519
1. 2nd heat exchanger for passenger compartment	516-517
2. Passenger compartment heating and ventilation	518
3. X contact relief relay, coolant cut-off valve two-way valve, switch-off via heated windscreen	519
081 - 2,8 ltr./128 kW Motronic, engine codes AAA	520-533
1. 2,8 ltr./128 kW Motronic, engine codes AAA	520-521
2. Battery, starter, alternator, X contact relief relay	522
3. Ignition/starter switch, fuel pump relay	523
4. Motronic control unit, ignition system, fuel pump, fuel gauge sender, fuel shut-off control unit (Crash)	524

5. Motronic control unit, throttle valve control unit	525
6. Motronic control unit, injectors, exhaust gas recirculation valve	526
7. Motronic control unit, lambda probes, hall sender	527
8. Motronic control unit, knock sensor, engine speed sender, immobilizer control unit, self-diagnosis connection,	528
9. Motronic control unit, air mass meter, activated charcoal filter system, secondary air inlet valve, secondary air pump motor	529
10. Motronic control unit, coolant temperature sender, intake manifold temperature sender, exhaust gas recirculation temperature sensor, continued circulation of coolant	530
11. Oil pressure switch, speedometer sender, fan run-on thermo-switch	531
12. Dash panel insert, optical and acoustical oil pressure warning, fuel gauge, coolant shortage and coolant temperature indicator, ambient temperature sensor, oil temperature sender	532
13. Dash panel insert, speedometer, rev. counter, odometer display, coolant shortage indicator sender, alternator warning lamp	533
082 - 1.8 ltr./110 kW Motronic, engine codes AJH	534-547
1. 1.8 ltr./110 kW Motronic, engine codes AJH	534-535
2. Battery, starter, alternator, X contact relief relay	536
3. Ignition/starter switch, fuel pump relay, fuel gauge sender, fuel pump	537
4. Ignition system	538
5. Motronic control unit, throttle valve control unit	539
6. Motronic control unit, injectors, altitude sender	540
7. Motronic control unit, lambda probe, Hall sender, intake air temperature sender	541
8. Motronic control unit, knock sensor, engine speed sender, immobilizer control unit, self-diagnosis connection	542
9. Motronic control unit, air mass meter, activated charcoal filter system, charge pressure control solenoid valve, secondary air inlet valve, secondary air inlet valve	543
10. Motronic control unit, fuel shut-off control unit (Crash), coolant temperature sender	544
11. Fan run-on thermo-switch, oil pressure switch, speedometer sender	545
12. Dash panel insert, optical and acoustical oil pressure warning, fuel gauge, coolant shortage and coolant temperature indicator, ambient temperature sensor, oil temperature sender	546
13. Dash panel insert, speedometer, rev. counter, odometer display, coolant shortage indicator sender, alternator warning lamp	547
083 - 2.0 ltr./85 kW Simos, engine codes ADY	548-558
1. 2.0 ltr./85 kW Simos, engine codes ADY	548-549
2. Battery, starter, alternator, X contact relief relay	550
3. Ignition/starter switch, fuel pump relay, fuel gauge sender, fuel pump	551
4. Simos control unit, ignition system, Hall sender, fuel shut-off control unit (Crash), current supply relay for Simos-control unit	552
5. Simos control unit, injectors, coolant temperature sender	553
6. Simos control unit, lambda probes, throttle valve control unit	554
7. Simos control unit, knock sensor, engine speed sender, intake manifold temperature sender, immobilizer control unit, self-diagnosis connection	555
8. Simos control unit, oil pressure switch, air mass meter, exhaust gas recirculation valve	556
9. Dash panel insert, speedometer sender, optical and acoustical oil pressure warning, ambient temperature sensor, oil temperature sender	557
10. Dash panel insert, speedometer, rev. counter, odometer display, fuel gauge, coolant shortage and coolant temperature indicator	558
084 - 1.9 - 1.9 ltr./81 kW direct injection turbo diesel, engine codes AFN	559-570
1. 1.9 - 1.9 ltr./81 kW direct injection turbo diesel, engine codes AFN	559-560
2. Battery, starter, alternator	561
3. Ignition/starter switch, X contact relief relay	562
4. Diesel direct injection system control unit, commencement of injection valve, charge pressure control solenoid valve, terminal 30 voltage supply relay, exhaust gas recirculation, idling switch, accelerator pedal position sender	563
5. Diesel direct injection system control unit, engine speed sender, needle lift sender, intake manifold temperature sender, immobilizer control unit, self-diagnosis connection,	564
6. Diesel direct injection system control unit, modulating piston movement sender, fuel temperature sender, metering adjuster, coolant temperature sender, air mass meter	565
7. Diesel direct injection system control unit, pedal switch, brake light switch, cruise control system switch	566
8. Diesel direct injection system control unit, glow plug relay, glow plugs, fuel shut-off control unit (Crash), Fuel shut-off valve	567
9. Speedometer sender, oil pressure switch, heater element (crankcase breather)	568
10. Dash panel insert, optical and acoustical oil pressure warning, fuel gauge, coolant shortage and coolant temperature indicator, ambient temperature sensor, oil temperature sender	569
11. Dash panel insert, speedometer, rev. counter, odometer display, coolant shortage indicator	570

sender, glow period warning lamp, fuel gauge sender	
085 - 1.9 ltr./66 kW direct injection turbo diesel, engine codes AHU	571-582
1. 1.9 ltr./66 kW direct injection turbo diesel, engine codes AHU	571-572
2. Battery, starter, alternator	573
3. Ignition/starter switch, X contact relief relay	574
4. Diesel direct injection system control unit, commencement of injection valve, charge pressure control solenoid valve, terminal 30 voltage supply relay, exhaust gas recirculation, idling switch, accelerator pedal position sender	575
5. Diesel direct injection system control unit, engine speed sender, needle lift sender, intake manifold temperature sender, immobilizer control unit, self-diagnosis connection,	576
6. Diesel direct injection system control unit, modulating piston movement sender, fuel temperature sender, metering adjuster, coolant temperature sender, air mass meter	577
7. Diesel direct injection system control unit, pedal switch, brake light switch, cruise control system switch	578
8. Diesel direct injection system control unit, glow plug relay, glow plugs, fuel shut-off control unit (Crash), Fuel shut-off valve	579
9. Speedometer sender, oil pressure switch, heater element (crankcase breather)	580
10. Dash panel insert, optical and acoustical oil pressure warning, fuel gauge, coolant shortage and coolant temperature indicator, ambient temperature sensor, oil temperature sender	581
11. Dash panel insert, speedometer, rev. counter, odometer display, coolant shortage indicator sender, glow period warning lamp, fuel gauge sender	582
086 - Airbag	583-584
1. Airbag	583
2. Airbag control unit, airbag disabled warning lamp, airbag igniter, coil connector	584
087 - Electrically adjustable and heated exterior mirrors, with folding function	585-589
1. Electrically adjustable and heated exterior mirrors, with folding function	585-586
2. Electrically adjustable and heated exterior mirrors, with folding function on driver's side	587
3. Electrically adjustable and heated exterior mirrors, with folding function on passenger's side	588
4. Switch for heated rear window and heated windscreen	589
088 - Electrically adjustable and heated exterior mirrors	590-592
1. Electrically adjustable and heated exterior mirrors	590
2. Exterior mirror adjustment and heating	591
3. Exterior mirror adjustment and heating	592
089 - Air conditioner	593-596
1. Air conditioner	593-594
2. Fresh air blower switch, fresh air/air recirculating flap switch, fresh air blower,	595
3. Air conditioner switch, fresh air controls light bulb	596
090 - Front and rear wash/wipe system	597-599
1. Front and rear wash/wipe system	597
2. Battery, X contact relief relay, front and rear wash/wipe system	598
3. Intermittent wiper switch, rear wash/wipe system	599
091 - Second battery	600-601
1. Second battery	600
2. Second battery, battery cut-out relay, 12 V socket	601
092 - 1.8 ltr./110 kW Motronic, engine codes AJH	602-615
1. 1.8 ltr./110 kW Motronic, engine codes AJH	602-603
2. Battery, starter, alternator	604
3. Ignition/starter switch, X contact relief relay	605
4. Ignition system	606
5. Motronic control unit, throttle valve control unit	607
6. Motronic control unit, injectors, altitude sender	608
7. Motronic control unit, lambda probe, Hall sender, intake air temperature sender, coolant temperature sender	609
8. Motronic control unit, knock sensor, engine speed sender, immobilizer control unit, self-diagnosis connection	610
9. Motronic control unit, air mass meter, activated charcoal filter system, charge pressure control solenoid valve, secondary air inlet valve, secondary air inlet valve	611
10. Motronic control unit, fuel pump relay	612
11. Fan run-on thermo-switch, oil pressure switch, speedometer sender, fuel gauge sender, fuel pump	613
12. Dash panel insert, optical and acoustical oil pressure warning, fuel gauge, coolant shortage and coolant temperature indicator, ambient temperature sensor, oil temperature sender	614
13. Dash panel insert, speedometer, rev. counter, odometer display, coolant shortage indicator sender, alternator warning lamp	615
093 - 2.0 ltr./85 kW Simos, engine codes ADY	616-628
1. 2.0 ltr./85 kW Simos, engine codes ADY	616-617
2. Battery, starter, alternator	618

3. Ignition/starter switch, X contact relief relay	619
4. Simos control unit, gnition system, Hall sender, current supply relay for Simos control unit	620
5. Simos control unit, throttle valve control unit, coolant temperature sender	621
6. Simos control unit, injectors, intake manifold temperature sender	622
7. Simos control unit, knock sensor, engine speed sender, lambda probe, immobilizer control unit, self-diagnosis connection	623
8. Simos control unit, air mass meter, exhaust gas recirculation valve, active. charcoal filter system solenoid	624
9. Simos control unit, fuel pump relay	625
10. Oil pressure switch, speedometer sender, fuel gauge sender, fuel pump	626
11. Dash panel insert, optical and acoustical oil pressure warning, fuel gauge, coolant shortage and coolant temperature indicator, ambient temperature sensor, oil temperature sende	627
12. Dash panel insert, speedometer, rev. counter, odometer display, coolant shortage indicator sender, alternator warning lamp	628
094 - 2,8 ltr./128 kW Motronic, engine codes AAA	629-642
1. 2,8 ltr./128 kW Motronic, engine codes AAA	629-630
2. Battery, starter, alternator	631
3. Ignition/starter switch, X contact relief relay	632
4. Motronic control unit, ignition system, throttle valve control unit	633
5. Motronic control unit, injectors, exhaust gas recirculation valve	634
6. Motronic control unit, lambda probes, hall sender	635
7. Motronic control unit, knock sensor, engine speed sender, immobilizer control unit, self-diagnosis connection	636
8. Motronic control unit, air mass meter, activated charcoal filter system, secondary air inlet valve, secondary air pump motor	637
9. Motronic control unit, coolant temperature sender, intake manifold temperature sender, exhaust gas recirculation temperature sensor, continued circulation of coolant	638
10. Motronic control unit, fuel pump relay, heater element (crankcase breather)	639
11. Fan run-on thermo-switch, oil pressure switch, speedometer sender, fuel gauge sender, fuel pump, coolant temperature sender	640
12. Dash panel insert, optical and acoustical oil pressure warning, fuel gauge, coolant shortage and coolant temperature indicator, ambient temperature sensor, oil temperature sende	641
13. Dash panel insert, speedometer, rev. counter, odometer display, coolant shortage indicator sender, alternator warning lamp	642
095 - 1.9 ltr./66 kW Turbo diesel engine with unit injectors, engine codes ANU	643-654
1. 1.9 ltr./66 kW Turbo diesel engine with unit injectors, engine codes ANU	643-644
2. Battery, starter, alternator	645
3. Ignition/starter switch, X contact relief relay	646
4. Diesel direct injection system control unit, terminal 30 voltage supply relay, accelerator pedal position sender, kick-down switch, idling switch, heater element (crankcase breather)	647
5. Diesel direct injection system control unit, engine speed sender, coolant temperature sender, intake manifold pressure sender, intake manifold temperature sender, immobilizer control unit	648
6. Diesel direct injection system control unit, unit injector solenoid valves, hall sender (for camshaft position)	649
7. Diesel direct injection system control unit, air mass meter, exhaust gas recirculation valve, charge pressure control solenoid valve, intake manifold flap change-over valve	650
8. Diesel direct injection system control unit, pedal switsch, brake light switch, cruise control system switch	651
9. Diesel direct injection system control unit, glow plug relay, glow plug, oil pressure switch, fuel temperature sender, speedometer sender	652
10. Dash panel insert, optical and acoustical oil pressure warning, fuel gauge, coolant shortage and coolant temperature indicator, ambient temperature sensor, oil temperature sende	653
11. Dash panel insert, speedometer, rev. counter, odometer display, coolant shortage indicator sender, glow period warning lamp, fuel gauge sender	654
096 - 12 V socket	655-656
1. 12 V socket	655
2. 12 V socket	656
097 - Heated rear window, heated windscreen	657-659
1. Heated rear window, heated windscreen	657
2. Switch for heated rear window and heated windscreen, heated washer jets	658
3. Heated rear window, heated windscreen,	659
098 - Immobilizer	660-662
1. Immobilizer	660
2. Immobilizer	661
3. Immobilizer, immobilizer/ central locking warning lamp	662
099 - Air conditioner	663-668

1. Air conditioner	663-664
2. Fresh air blower, fresh air and recirculating air switch, air conditioner switch	665
3. Magnetic coupling relay, air conditioning system magnetic coupling, ambient temperature switch, thermo-switch, magnetic coupling cut - out relay, air conditioning system	666
4. Radiator fan run-on control unit, radiator fan run-on/continued coolant circulation thermo-switch, air conditioner pressure switch, radiator fan thermo-switch	667
5. Radiator fan relay, radiator fan, continued circulation of coolant pump	668
100 - Climatronic	669-680
1. Climatronic	669-670
2. Climatronic control unit, temperature flap control motor	671
3. Climatronic control unit, central vents control motor, front air distribution control motor	672
4. Climatronic control unit, ambient temperature sensor, front vent temperature sender, sunlight penetration photosensor, coolant temperature sender - air conditioner	673
5. Climatronic control unit, fresh and recirculating air flap two-way valve, additional heat exchanger valve	674
6. Climatronic control unit, rear air distribution control motor, rear temperature flap control motor	675
7. Climatronic control unit, rear vent temperature sender, rear fresh air blower	676
8. Climatronic control unit, blower control unit, blower relay	677
9. Magnetic coupling relay, air conditioning system magnetic coupling, thermo-switch	678
10. Radiator fan run-on control unit, radiator fan run-on/continued coolant circulation thermo-switch, air conditioner pressure switch, radiator fan thermo-switch	679
11. Radiator fan relay, radiator fan, radiator fan series resistor, continued circulation of coolant pump	680
101 - Radiator fan, 2 speed, with radiator fan run-on	681-684
1. Radiator fan, 2 speed, with radiator fan run-on	681-682
2. Radiator fan run-on control unit, radiator fan run-on/continued coolant circulation thermo-switch, radiator fan thermo-switch	683
3. Radiator fan relay, radiator fan, continued circulation of coolant pump	684
102 - Airbags system	685-687
1. Airbags system	685
2. Airbag control unit, coil connector, airbag igniter front, side airbag crash sensors	686
3. Airbag control unit, side airbag igniter, airbag warning lamp	687
103 - Cruise control system (GRA)	688-690
1. Cruise control system (GRA)	688
2. Cruise control system switch, cruise control system switch	689
3. Cruise control system switch, clutch pedal switch, cruise control system brake pedal switch, vacuum pump for speed control	690
201 - -Fitting locations:Multi-function unit (electronic central electrics) with relay plate and fuse holder	691-701
1. Contents	691
2. Fuse locations	692
3. Fuse locations	693
4. -Fitting locations:Multi-function unit (electronic central electrics) with relay plate and fuse holder	694
5. -Fitting locations:Multi-function unit (electronic central electrics) with relay plate and fuse holder	695
6. -Fitting locations:Multi-function unit (electronic central electrics) with relay plate and fuse holder	696
7. -Fitting locations:Multi-function unit (electronic central electrics) with relay plate and fuse holder	697
8. Fuse locations	698
9. Relay locations	699
10. -Fitting locations:Multi-function unit (electronic central electrics) with relay plate and fuse holder	700
11. Relay locations	701
202 - -Fitting locations:Multi-pin connectors	702-708
1. Contents	702
2. Engine connector (main separation point)	703
3. Engine connector (main separation point)	704
4. Door connector (main separation point)	705
5. Automatic gearbox	706
6. Lights, lamps, switches - interior, anti-theft alarm	707
7. Self-diagnosis, Lights, lamps, switches - exterior	708
203 - -Fitting locations:Control units and relays	709-716
1. Contents	709

2. Climatronic control unit	710
3. Electric window control unit, Sunroof adjustment control unit	711
4. ABS/ABS with EDL control unit (25-pin connector)	712
5. 3-speed radiator fan control unit, without radiator fan run-on	713
6. 3-speed radiator fan control unit, with radiator fan run-on (2 connectors, 4-pin and 10-pin)	714
7. 3-speed radiator fan control unit, with radiator fan run-on (3 connectors, 4-pin)	715
8. Cruise control system control unit, Immobilizer control unit	716
204 - -Fitting locations:Multi-function unit (electronic central electrics) with relay plate and fuse holder	717-728
1. Contents	717
2. Fuse locations	718
3. Fuse locations	719
4. -Fitting locations:Multi-function unit (electronic central electrics) with relay plate and fuse holder	720
5. -Fitting locations:Multi-function unit (electronic central electrics) with relay plate and fuse holder	721
6. -Fitting locations:Multi-function unit (electronic central electrics) with relay plate and fuse holder	722
7. -Fitting locations:Multi-function unit (electronic central electrics) with relay plate and fuse holder	723
8. Fuse locations	724
9. Relay locations	725
10. -Fitting locations:Multi-function unit (electronic central electrics) with relay plate and fuse holder	726
11. Relay locations	727
12. Multi-pin connectors	728
205 - -Fitting locations:Multi-function unit (electronic central electrics) with relay plate and fuse holder	729-740
1. Contents	729
2. Fuse locations	730
3. Fuse locations	731
4. -Fitting locations:Multi-function unit (electronic central electrics) with relay plate and fuse holder	732
5. -Fitting locations:Multi-function unit (electronic central electrics) with relay plate and fuse holder	733
6. -Fitting locations:Multi-function unit (electronic central electrics) with relay plate and fuse holder	734
7. -Fitting locations:Multi-function unit (electronic central electrics) with relay plate and fuse holder	735
8. Fuse locations	736
9. Relay locations	737
10. -Fitting locations:Multi-function unit (electronic central electrics) with relay plate and fuse holder	738
11. Relay locations	739
12. Multi-pin connectors	740
206 - -Fitting locations:Earth points	741-745
1. Contents	741
2. Earth points in the interior	742
3. Earth points in the interior	743
4. Earth points in the interior	744
5. Earth points in the engine compartment	745
401 - -Fault finding programme:Battery discharges (Current leakage suspected)	746
1. Battery discharges (Current leakage suspected)	746
402 - -Fault finding programme:Starter motor does not turn	747
1. Starter motor does not turn	747
403 - -Fault finding programme:Starter turns too slowly to start engine	748
1. Starter turns too slowly to start engine	748
404 - -Fault finding programme:Alternator warning lamp does not go out as speed increases	749
1. Alternator warning lamp does not go out as speed increases	749
405 - -Fault finding programme:Alternator warning lamp does not light up with ignition switched on	750
1. Alternator warning lamp does not light up with ignition switched on	750
406 - -Fault finding programme:Checking alternator and voltage regulator	751-752
1. Contents, Checking function of freewheel coupling in ribbed belt pulley (for engine codes AHU and AFN only)	751
2. Checking alternator and voltage regulator	752
407 - -Fault finding programme:Checking cruise control system	753-758

1. Contents	753
2. Self-diagnosis	754
3. -Fault finding programme:Checking cruise control system	755
4. Checking CCS switch	756
5. Malfunctions in cruise control system when driving	757
6. Activating or deactivating cruise control system	758
408 - -Fault finding programme:Checking cruise control system	759-761
1. Checking cruise control system not engine codes AHU, AFN	759
2. -Fault finding programme:Checking cruise control system	760
3. -Fault finding programme:Checking cruise control system	761
409 - -Fault finding programme:Checking rear vent wing windows	762-765
1. Prerequisites	762
2. -Fault finding programme:Checking rear vent wing windows	763
3. -Fault finding programme:Checking rear vent wing windows	764
4. -Fault finding programme:Checking rear vent wing windows	765
410 - -Fault finding programme:Checking heated seats	766-774
1. Contents, Prerequisites	766
2. Checking driver's seat heating	767
3. -Fault finding programme:Checking heated seats	768
4. -Fault finding programme:Checking heated seats	769
5. -Fault finding programme:Checking heated seats	770
6. Checking front passenger's heating	771
7. -Fault finding programme:Checking heated seats	772
8. -Fault finding programme:Checking heated seats	773
9. -Fault finding programme:Checking heated seats	774
411 - -Fault finding programme:Checking exterior mirror	775-781
1. Contents, Test prerequisites	775
2. Checking adjustment function for left exterior mirror	776
3. -Fault finding programme:Checking exterior mirror	777
4. Checking heating for left exterior mirror	778
5. Checking adjustment function for right exterior mirror	779
6. -Fault finding programme:Checking exterior mirror	780
7. Checking heating for right exterior mirror	781
412 - -Fault finding programme:Checking electric windows	782-797
1. Contents	782
2. Front left electric window (driver's) not working	783
3. -Fault finding programme:Checking electric windows	784
4. Front right electric window (passenger's) not working	785
5. -Fault finding programme:Checking electric windows	786
6. -Fault finding programme:Checking electric windows	787
7. Rear left electric window (on driver's side) not working	788
8. -Fault finding programme:Checking electric windows	789
9. -Fault finding programme:Checking electric windows	790
10. Rear right electric window (on passenger's side) not working	791
11. -Fault finding programme:Checking electric windows	792
12. -Fault finding programme:Checking electric windows	793
13. Checking electric window convenience closing feature	794
14. -Fault finding programme:Checking electric windows	795
15. Checking sliding/tilting sunroof convenience closing feature	796
16. -Fault finding programme:Checking electric windows	797
413 - -Fault finding programme:Checking headlight washer system	798-800
1. Checking headlight washer system	798
2. -Fault finding programme:Checking headlight washer system	799
3. -Fault finding programme:Checking headlight washer system	800
414 - -Fault finding programme:Checking front sliding/tilting sun roof	801-804
1. Contents	801
2. Checking front sliding tilting sunroof	802
3. -Fault finding programme:Checking front sliding/tilting sun roof	803
4. Checkng sliding tilting sunroof convenience closing system	804