

001 - Basic equipment	1-24
1. Basic equipment	1-2
2. Battery, X-contact relief relay	3
3. Ignition/starter switch	4
4. Dash panel insert, self-diagnosis connection	5
5. Dash panel insert, rev. counter, odometer display, speedometer, alternator warning lamp, immobilizer warning lamp	6
6. Dash panel insert, multifunction display, brake wear indicator, door open warning lamp	7
7. Dash panel insert, main beam warning lamp, rear fog light warning lamp, bulb failure warning lamp, Bonnet contact switch, bonnet open warning lamp	8
8. Dash panel insert, turn signal warning lamp, windscreen washer fluid level sender, brake system warning lamp, handbrake warning switch, brake fluid level warning contact	9
9. Left headlight bulbs, left turn signal, hazard warning light switch	10
10. Front right headlight, front right turn signal, turn signal switch, headlight dipper/flasher switch, parking light switch	11
11. Headlight range control regulator, headlight range control motor, illumination regulators - switches and instruments	12
12. Light switch, rear fog light switch, fog light switch	13
13. Left tail light, right tail light, high level brake light bulb	14
14. Brake light switch, reversing lights, rear fog light, reversing lights switch	15
15. Heated rear window switch, heated rear window, door contact switch rear (rear lid), number plate light	16
16. Dash panel vent illumination bulb, driver door contact switch, rear left door contact switch	17
17. Glove compartment light, front passenger door contact switch, rear right door contact switch, door warning lamps	18
18. Luggage compartment lights, entry lights, front interior light	19
19. Illuminated vanity mirror, right centre reading light, left centre reading light, rear interior light, rear right reading light	20
20. Connection for radio, cigarette lighter, rear left reading light, rear centre reading light	21
21. Dual tone horn relay, horn plate, dual tone horn	22
22. Intermittent wiper switch, intermittent wipe regulator, windscreen wiper motor	23
23. Rear window wiper motor, windscreen and rear window washer pump, heated washer jets	24
002 - 1,8 - Motronic/110 kW, engine code AWC	25-42
1. 1,8 - Motronic/110 kW, engine code AWC	25-26
2. Starter, alternator	27
3. Ignition/starter switch	28
4. Motronic current supply relay	29
5. Motronic control unit, ignition system	30
6. Motronic control unit	31
7. Motronic control unit, immobilizer, hall sender, coolant temperature sender, charge air pressure sender, exhaust gas recirculation valve, exhaust gas recirculation potentiometer, diagnosis-connection	32
8. Motronic control unit, knock sensor, engine speed sender, intake air temperature sender	33
9. Motronic control unit, injectors, lambda probe after catalyst	34
10. Motronic control unit, throttle valve control unit, throttle valve drive angle sender (electric throttle operation), lambda probe	35
11. Motronic control unit, air mass meter, accelerator pedal position sender, charge pressure control solenoid valve, activated charcoal filter system solenoid valve	36
12. Motronic control unit, secondary air pump relay, secondary air pump motor, clutch pedal switch, brake pedal switch for cruise control system, brake light switch	37
13. Motronic control unit, radiator fan control unit, switch for CCS, fan run-on thermo-switch, continued circulation of coolant pump	38
14. Fuel pump relay, fuel gauge, fuel pump	39
15. Speedometer sender, coolant shortage indicator sender, oil pressure switch, oil level/oil temperature sender	40
16. Dash panel insert, coolant temperature/coolant shortage, fuel gauge, rev. counter, speedometer, alternator warning lamp, oil pressure warning	41
17. Dash panel insert, cruise control system warning lamp, multi-function display, ambient temperature indicator, electronic power control fault lamp, exhaust emissions warning lamp	42
003 - 2,0 - Motronic/85 kW, engine code ATM	43-59
1. 2,0 - Motronic/85 kW, engine code ATM	43-44
2. Starter, alternator	45
3. Ignition/starter switch	46
4. Motronic current supply relay	47
5. Motronic control unit, ignition system	48
6. Motronic control unit	49

7. Motronic control unit, immobilizer, hall sender, coolant temperature sender, exhaust gas recirculation potentiometer, engine speed sender, diagnosis-connection, exhaust gas recirculation valve	50
8. Motronic control unit, knock sensor, accelerator pedal position sender	51
9. Motronic control unit, injectors, air mass meter, lambda probe after catalyst	52
10. Motronic control unit, throttle valve control unit, throttle valve drive angle sender (electric throttle operation), lambda probe, activated charcoal filter system solenoid valve	53
11. Motronic control unit, secondary air pump relay, secondary air pump motor, clutch pedal switch, brake pedal switch for cruise control system, brake light switch	54
12. Motronic control unit, radiator fan control unit, switch for CCS, fan run-on thermo-switch, continued circulation of coolant pump	55
13. Fuel pump relay, fuel gauge sender, fuel pump	56
14. Speedometer sender, coolant shortage indicator sender, oil pressure switch, oil level/oil temperature sender	57
15. Dash panel insert, coolant temperature/coolant shortage, fuel gauge, rev. counter, speedometer, alternator warning lamp, oil pressure warning	58
16. Dash panel insert, cruise control system warning lamp, multi-function display, ambient temperature indicator, electronic power control fault lamp, exhaust emissions warning lamp	59
004 - 2,8 - Motronic/150 kW, engine code AYL	60-78
1. 2,8 - Motronic/150 kW, engine code AYL	60-61
2. Starter, alternator	62
3. Ignition/starter switch	63
4. Fuses in fuse box	64
5. Motronic control unit, ignition system	65
6. Motronic control unit, ignition system, intake manifold change-over valve	66
7. Motronic control unit, inlet camshaft timing adjustment valves	67
8. Motronic control unit, immobilizer control unit, hall sender, coolant temperature sender, engine speed sender, diagnosis-connection	68
9. Motronic control unit, accelerator pedal position sender, knock sensor	69
10. Motronic control unit, injectors	70
11. Motronic control unit, lambda probe after catalyst, air mass meter, activated charcoal filter system solenoid valve	71
12. Motronic control unit, throttle valve control unit, throttle valve drive angle sender (electric throttle operation), lambda probe	72
13. Motronic control unit, secondary air pump relay, secondary air pump motor, secondary air inlet valve, clutch pedal switch, brake pedal switch for cruise control system, brake light switch	73
14. Motronic control unit, radiator fan control unit, switch for CCS, fan run-on thermo-switch, continued circulation of coolant pump	74
15. Fuel pump relay, fuel gauge sender, fuel pump	75
16. Speedometer sender, coolant shortage indicator sender, oil pressure switch, oil level/oil temperature sender, heater element (crankcase breather)	76
17. Dash panel insert, coolant temperature/coolant shortage, fuel gauge, rev. counter, speedometer, alternator warning lamp, oil pressure warning	77
18. Dash panel insert, cruise control system warning lamp, multi-function display, ambient temperature indicator, electronic power control fault lamp, exhaust emissions warning lamp	78
005 - 1.9 ltr./66 kW Turbo diesel engine with unit injectors, engine codes AHU	79-93
1. 1.9 ltr./66 kW Turbo diesel engine with unit injectors, engine codes AHU	79-80
2. Starter, alternator	81
3. Ignition/starter switch	82
4. Terminal 30 voltage supply relay	83
5. Diesel direct injection system control unit, accelerator pedal position sender, kick-down switch, idling switch, heater element (crankcase breather)	84
6. Diesel direct injection system control unit	85
7. Diesel direct injection system control unit, engine speed sender, coolant temperature sender, intake manifold pressure sender, intake manifold temperature sender, immobilizer, self-diagnosis connection	86
8. Diesel direct injection system control unit, unit injector solenoid valve, hall sender (for camshaft position)	87
9. Diesel direct injection system control unit, air mass meter, exhaust gas recirculation valve, charge pressure control solenoid valve, intake manifold flap change-over valve	88
10. Diesel direct injection system control unit, cruise control system brake pedal switch/diesel direct injection system, clutch pedal switch, brake light switch, switch for CCS	89
11. Diesel direct injection system control unit, fuel gauge sender, fuel pump (pre-supply pump), fuel pump relay, fuel temperature sender	90
12. Glow plug relay, glow plugs - engine, speedometer sender, coolant shortage indicator sender, oil level/oil temperature sender	91

13. Dash panel insert, coolant temperature/coolant shortage, speedometer, alternator warning lamp, oil pressure switch, oil pressure warning	92
14. Dash panel insert, cruise control system warning lamp, multi-function display, coolant temperature gauge, ambient temperature indicator, fuel gauge, rev. counter, glow period warning lamp	93
006 - Anti-locking brake system (ABS)	94-98
1. Anti-locking brake system (ABS)	94
2. ABS for control unit, brake light switch	95
3. ABS for control unit, speed sensor	96
4. ABS control unit, ABS hydraulic pump, self-diagnosis connection	97
5. ABS control unit, dash panel insert, ABS warning lamp, brake system warning lamp	98
007 - Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (ASR/TCS), and electronic stability program (ESP)	99-107
1. Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (ASR/TCS), and electronic stability program (ESP)	99-100
2. ABS with EDL/ TCS/ ESP control unit, brake light suppression relay, brake light switch	101
3. ABS with EDL/ TCS/ ESP control unit, speed sensors	102
4. ABS with EDL/ TCS/ ESP control unit, lateral acceleration sender, brake pressure sender, yaw rate sender, ABS hydraulic pump	103
5. ABS with EDL/ TCS/ ESP control unit, longitudinal acceleration sender, brake pressure solenoid valve, brake pressure solenoid trip switch	104
6. ABS with EDL/ TCS/ ESP control unit, steering angle sender, self-diagnosis connection	105
7. ABS with EDL/ TCS/ ESP control unit, TCS/ESP button	106
8. Dash panel insert, brake system warning lamp, ABS warning lamp, stability program warning lamp, handbrake warning switch, brake fluid level warning contact	107
008 - Airbags system	108-112
1. Airbags system	108-109
2. Airbag control unit, airbag coil connector, airbag igniter front, side airbag crash sensor, self-diagnosis connection	110
3. Airbag control unit, side airbag igniter, dash panel insert, airbag warning lamp	111
4. Dash panel insert, seat belt warning system relay, belt switch - driver side	112
009 - Air conditioner (models with petrol engine)	113-122
1. Air conditioner (models with petrol engine)	113-114
2. Air conditioning system control unit, temperature flap control motor, front air distribution control motor, self-diagnosis connection	115
3. Air conditioning system control unit, fresh air/air recirculating flap switch, fresh air blower switch, air conditioner switch, fresh air blower	116
4. Air conditioning system control unit, warm air blower switch, additional heat exchanger and rear control switch, rear warm air blower, rear temperature flap control motor	117
5. Radiator fan control unit, fan run-on thermo-switch, continued circulation of coolant pump, air conditioning system magnetic coupling	118
6. Radiator fan control unit, air conditioner pressure switch, ambient temperature switch	119
7. Radiator fan 2nd speed relay, radiator fan thermo-switch	120
8. Radiator fan relay	121
9. Radiator fan relay, radiator fan	122
010 - Air conditioner (models with diesel engine)	123-131
1. Air conditioner (models with diesel engine)	123-124
2. Air conditioning control unit, temperature flap control motor, front air distribution control motor, self-diagnosis connection	125
3. Air conditioning system control unit, fresh air/air recirculating flap switch, fresh air blower switch, air conditioner switch, fresh air blower	126
4. Air conditioning system control unit, warm air blower switch, additional heat exchanger and rear control switch, rear warm air blower, rear temperature flap control motor	127
5. Radiator fan control unit, continued circulation of coolant pump, air conditioning system magnetic coupling	128
6. Radiator fan control unit, air conditioner pressure switch, ambient temperature switch	129
7. Radiator fan 2nd speed relay, radiator fan thermo-switch	130
8. Radiator fan relay, radiator fan	131
011 - Climatronic (models with petrol engine)	132-144
1. Climatronic (models with petrol engine)	132-133
2. Climatronic control unit, temperature flap control motor, fresh/recirculating air flap control motor, control and display unit for Climatronic, dash panel temperature sensor	134
3. Climatronic control unit, central vents control motor, front air distribution control motor, self-diagnosis connection	135
4. Climatronic control unit, ambient temperature sensor, coolant temperature sender, vent temperature sender, additional heat exchanger valve, sunlight penetration photosensor	136
5. Climatronic control unit. front fresh air blower. rear fresh air blower. rear vent temperature	137

sender	
6. Climatronic control unit, rear temperature flap control motor, rear air distribution control motor	138
7. Climatronic control unit	139
8. Radiator fan control unit, fan run-on thermo-switch, continued circulation of coolant pump, air conditioning system magnetic coupling	140
9. Radiator fan control unit, air conditioner pressure switch	141
10. Radiator fan 2nd speed relay, radiator fan thermo-switch	142
11. Radiator fan relay	143
12. Radiator fan relay, radiator fan	144
012 - Climatronic (models with diesel engine)	145-156
1. Climatronic (models with diesel engine)	145-146
2. Climatronic control unit, temperature flap control motor, fresh/recirculating air flap control motor, control and display unit for Climatronic, dash panel temperature sensor	147
3. Climatronic control unit, central vents control motor, front air distribution control motor, self-diagnosis connection	148
4. Climatronic control unit, ambient temperature sensor, coolant temperature sender, vent temperature sender, additional heat exchanger valve, sunlight penetration photosensor	149
5. Climatronic control unit, front fresh air blower, rear fresh air blower, rear vent temperature sender	150
6. Climatronic control unit, rear temperature flap control motor, rear air distribution control motor	151
7. Climatronic control unit	152
8. Radiator fan control unit, continued circulation of coolant pump, air conditioning system magnetic coupling	153
9. Radiator fan control unit, air conditioner pressure switch	154
10. Radiator fan 2nd speed relay, radiator fan thermo-switch	155
11. Radiator fan relay, radiator fan	156
013 - Central locking central locking with remote control	157-169
1. Central locking central locking with remote control	157-158
2. Front right central locking actuator, self-diagnosis connection	159
3. Rear left central locking actuator	160
4. Rear right central locking actuator	161
5. Driver side central locking switch, central locking switch on front passenger side, rear lid central locking switch, rear lid lock motor, heated rear window	162
6. Driver door contact switch, front passenger door contact switch, rear lid release switch, door contact switch rear (rear lid)	163
7. Alarm horn, bonnet contact switch, rear left door contact switch, rear right door contact switch	164
8. Ultrasonic sensors for interior monitor	165
9. Left turn signal, front right turn signal, rear turn signal	166
10. Multifunction steering wheel fuse and central locking/anti-theft alarm	167
11. Multifunction steering wheel fuse and central locking/anti-theft alarm, fuel tank filler flap central locking actuator	168
12. Multifunction steering wheel fuse and central locking/anti-theft alarm, fuel tank filler flap central locking actuator	169
014 - Electric windows, rear vent windows	170-178
1. Electric windows, rear vent windows	170
2. Rear window regulator isolation switch, Front left window regulator switch, Rear left window regulator switch, in driver door, Rear right window regulator switch, in driver door, Front right window regulator switch in driver door, Driver side interior locking switch, Front left window regulator control unit	171
3. Front left window regulator control unit, Front right window regulator control unit, Driver side window regulator motor	172
4. Front right window regulator switch, Front right window regulator control unit, Front passenger side window regulator motor	173
5. Rear left window regulator switch, in door, Rear left window regulator control unit, Rear left window regulator motor	174
6. Rear left window regulator control unit, Rear right window regulator control unit	175
7. Rear right window regulator switch, in door, Rear right window regulator control unit, Multifunction unit control unit, Fuse 2 in fuse holder, Rear right window regulator motor	176
8. Left vent window switch, Right vent window switch, Multifunction unit control unit, Rear left vent window relay, Rear right vent window relay, Left vent window motor, Right vent window motor	177
9. Rear vent window relay, Multifunction unit control unit, Window regulator single fuse, Fuse 4 (30), in battery fuse holder	178
015 - Sliding/tilting sunroof, digital clock	179-182
1. Sliding/tilting sunroof. digital clock	179-180

2. Sliding sunroof adjustment control unit, pre-selection clock, digital clock	181
3. Sliding sunroof adjustment control unit, pre-selection clock, digital clock	182
016 - Electrically adjustable and heated exterior mirrors	183-188
1. Electrically adjustable and heated exterior mirrors	183-184
2. Mirror adjustment switch, mirror with folding function, adjustment switch, electrically adjustable exterior mirrors for driver's door	185
3. Exterior mirror fold system control unit, electrically adjustable exterior mirror for front passenger's door	186
4. Heated rear window switch, heated exterior mirror relay, heated rear window	187
5. Voltage supply for mirror adjustment and folding	188
017 - Automatic anti-dazzle interior mirror	189-191
1. Automatic anti-dazzle interior mirror	189-190
2. Automatic anti-dazzle interior mirror	191
018 - Immobilizer	192-194
1. Immobilizer	192
2. Immobilizer control unit, immobilizer warning lamp/ central locking warning lamp -SAFE-, elf-diagnosis connection	193
3. Immobilizer control unit	194
019 - Parking aid (models without trailer towing)	195-200
1. Parking aid (models without trailer towing)	195
2. Parking aid control unit, reversing light switch	196
3. Parking aid control unit, parking aid sender, front	197
4. Parking aid control unit, parking aid button, parking aid warning buzzer	198
5. Parking aid control unit, rear parking aid sender	199
6. Parking aid control unit	200
020 - Daytime running light	201-209
1. Daytime running light	201
2. Control unit in dash panel insert	202
3. Left side light bulb, Front left turn signal bulb, Left turn signal repeater bulb, Left headlight dipped beam bulb, Left headlight main beam bulb	203
4. Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Right side light bulb, Front right turn signal bulb, Right turn signal repeater bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	204
5. Switch and instrument illumination regulator, Headlight range control regulator, Daytime running light switch-on relay, Left headlight range control motor, Right headlight range control motor	205
6. Light switch, Fog light switch, Rear fog light switch, Fog light warning lamp	206
7. Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb	207
8. Brake light switch, Reversing light switch, Rear left fog light bulb, Rear right fog light bulb, Left reversing light bulb, Right reversing light bulb, Left number plate light, Right number plate light	208
9. Fuse 5 in fuse holder, Fuse 15 in fuse holder, Fuse 4 (30), in battery fuse holder	209
021 - Headlight washer system, Windscreen wash/wipe system	210-214
1. Headlight washer system, Windscreen wash/wipe system	210-211
2. Intermittent wiper switch, intermittent wiper control	212
3. Windscreen wiper motor, rear window wiper motor, windscreen and rear window washer pump	213
4. Windscreen wiper motor, rear window wiper motor, windscreen and rear window washer pump	214
022 - Fog light and rear fog lights	215-218
1. Fog light and rear fog lights	215-216
2. Fog light switch, rear fog light switch, fog light	217
3. Rear fog lights, reversing light, rear fog light cut-out contact switch	218
023 - Trailer towing	219-227
1. Trailer towing	219
2. Dash panel insert, main beam warning lamp, rear fog light warning lamp, turn signal warning lamp, bulb failure warning lamp, trailer operation warning lamp	220
3. Headlights left, turn signal front left, hazard warning light switch	221
4. Trailer socket, rear fog light cut-out, contact switch	222
5. Headlight, right, turn signal, front right, turn signal switch, headlight dipper/flasher switch, parking light switch	223
6. Lighting switch, rear fog light switch, fog light switch	224
7. Tail light, left, tail light, right	225
8. Brake light switch, reversing light, rear fog light	226
9. Voltage supply for trailer socket	227
024 - Windscreen heater	228-230
1. Windscreen heater	228
2. Heated windscreen switch	229

3. Heated windscreen relay, heated windscreen	230
025 - Second battery	231-235
1. Second battery	231-232
2. Battery cut-out relay, release relay for terminal 61	233
3. Second battery, 12V socket, position of fuses	234
4. Position of fuses	235
026 - Socket (12V), (not for models with second battery)	236-238
1. Socket (12V), (not for models with second battery)	236-237
2. 12 V sockets	238
027 - Four-speed automatic gearbox (AG4)	239-246
1. Four-speed automatic gearbox (AG4)	239-240
2. Starter inhibitor and reversing light relay	241
3. Automatic gearbox control unit, multi-function switch	242
4. Automatic gearbox control unit, solenoid valve, gearbox speed sender, gearbox oil temperature sender, self-diagnosis connection	243
5. Automatic gearbox control unit	244
6. Automatic gearbox control unit, vehicle speed sender, tiptronic switch, selector lever lock solenoid	245
7. Automatic gearbox control unit	246
028 - Five-speed automatic gearbox (AG5)	247-254
1. Five-speed automatic gearbox (AG5)	247-248
2. Starter inhibitor and reversing light relay	249
3. Automatic gearbox control unit, multi-function switch, brake pressure switch	250
4. Automatic gearbox control unit, solenoid valve, gearbox oil temperature sender, self-diagnosis connection	251
5. Automatic gearbox control unit	252
6. Automatic gearbox control unit, tiptronic switch, selector lever lock solenoid	253
7. Automatic gearbox control unit, vehicle speed sender, intermediate shaft speed sender, gearbox input speed sender	254
029 - Five-speed automatic gearbox (AG5)	255-262
1. Five-speed automatic gearbox (AG5)	255-256
2. Starter inhibitor and reversing light relay	257
3. Automatic gearbox control unit, multi-function switch, brake pressure switch	258
4. Automatic gearbox control unit, solenoid valve, gearbox oil temperature sender	259
5. Automatic gearbox control unit	260
6. Automatic gearbox control unit, tiptronic switch, selector lever lock solenoid, self-diagnosis connection	261
7. Automatic gearbox control unit, vehicle speed sender, intermediate shaft speed sender, gearbox input speed sender	262
030 - Four-wheel drive (4 Motion)	263-266
1. Four-wheel drive (4 Motion)	263
2. Four-wheel drive control unit, haldex coupling pump	264
3. Four-wheel drive control unit, hydraulic temperature sender, oil pressure control motor, handbrake warning switch, brake light switch	265
4. Dash panel insert, brake system warning lamp	266
031 - Radio system "Beta" with CD changer	267-271
1. Radio system "Beta" with CD changer	267
2. Radio, CD changer	268
3. Radio, front left loudspeaker, rear left loudspeaker	269
4. Radio, front right loudspeaker, rear right loudspeaker	270
5. Radio, self-diagnosis connection	271
032 - Radio system "Gamma" with CD changer	272-276
1. Radio system "Gamma" with CD changer	272
2. Radio, CD changer	273
3. Radio, front left loudspeaker, rear left loudspeaker	274
4. Radio, front right loudspeaker, rear right loudspeaker, self-diagnosis connection	275
5. Radio	276
033 - Radio system "Beta" with CD changer and telephone preparation	277-282
1. Radio system "Beta" with CD changer and telephone preparation	277
2. Radio, CD changer	278
3. Radio, front left loudspeaker, rear left loudspeaker	279
4. Radio, front right loudspeaker, rear right loudspeaker	280
5. Radio, self-diagnosis connection, aerial amplifier, window aerial	281
6. Operating electronics control unit, telephone microphone, telephone aerial, mobile telephone (Handy)	282
034 - Radio system "Gamma" with CD changer and telephone preparation	283-288

1. Radio system "Gamma" with CD changer and telephone preparation	283
2. Radio, CD changer	284
3. Radio, front left loudspeaker, rear left loudspeaker	285
4. Radio, front right loudspeaker, rear right loudspeaker	286
5. Radio, self-diagnosis connection, aerial amplifier, window aerial	287
6. Operating electronics control unit, telephone microphone, telephone aerial, mobile telephone (Handy)	288
035 - Radio system "Beta" with CD player	289-294
1. Radio system "Beta" with CD player	289
2. Radio, CD player	290
3. Radio, CD changer, front left treble loudspeaker, front right bass loudspeaker (in the door)	291
4. Radio, rear left loudspeaker, front right loudspeaker, rear right loudspeaker	292
5. Radio, self-diagnosis connection, aerial amplifier, window aerial	293
6. Operating electronics control unit, telephone microphone, telephone aerial, mobile telephone (Handy)	294
036 - Radio system "Gamma" with CD player	295-301
1. Radio system "Gamma" with CD player	295
2. Radio, CD player	296
3. Radio, CD changer	297
4. Radio, front left loudspeaker, rear left loudspeaker	298
5. Radio, front right loudspeaker, rear right loudspeaker	299
6. Radio, self-diagnosis connection, aerial amplifier, window aerial	300
7. Operating electronics control unit, telephone microphone, telephone aerial, mobile telephone (Handy)	301
037 - Radio and navigation system with black/white-display, CD changer and telephone preparation, Radio and navigation system (MFD) with colour display, CD changer and telephone preparation	302-309
1. Radio and navigation system with black/white-display, CD changer and telephone preparation, Radio and navigation system (MFD) with colour display, CD changer and telephone preparation	302-303
2. Control unit with display for radio and navigation system, dash panel insert, self-diagnosis connection	304
3. Control unit with display for radio and navigation, front left loudspeaker, rear left loudspeaker	305
4. Control unit with display for radio and navigation, front right loudspeaker, rear right loudspeaker, navigation system aerial GPS, window aerial for radio	306
5. Control unit with display for radio and navigation system, CD changer	307
6. Control unit with display for radio and navigation system	308
7. Operating electronics control unit, telephone microphone mobile telephone	309
038 - Radio and navigation system (MFD) (colour display) with traffic information evaluation, CD changer and telephone preparation	310-318
1. Radio and navigation system (MFD) (colour display) with traffic information evaluation, CD changer and telephone preparation	310-311
2. Control unit with display for radio and navigation system, dash panel insert, self-diagnosis connection	312
3. Control unit with display for radio and navigation, front left loudspeaker, rear left loudspeaker	313
4. Control unit with display for radio and navigation system, front right loudspeaker, rear right loudspeaker	314
5. Control unit with display for radio and navigation system, CD changer, traffic information control unit, window aerial	315
6. Control unit with display for radio and navigation, navigation system aerial (GPS), telephone and auxiliary heater aerial	316
7. Fuse locations	317
8. Operating electronics control unit, telephone microphone mobile telephone	318
039 - Additional water heater B5W S/ D5W S	319-327
1. Additional water heater B5W S/ D5W S	319-320
2. Battery cut-out relay, second battery	321
3. Release relay for terminal 61, additional water heater coolant circuit valve relay	322
4. Recirculating pump, coolant circuit valve, auxiliary heater operation relay	323
5. Climatronic control unit, fresh air blower control unit, fresh air blower, blower relay, fresh air blower Relay, 2nd speed	324
6. Heater control unit B5W S/ D5W S, metering pump, combustion air blower, flame monitor, self-diagnosis connection	325
7. Heater control unit B5W S/ D5W S, overheating sensor, coolant temperature sender, glow plug for heater, ambient temperature switch	326
8. Pre-selection clock, digital clock	327
040 - Additional water heater B5W S/ D5W S	328-336
1. Additional water heater B5W S/ D5W S	328-329
2. Battery cut-out relay, second battery, temperature switch relay (auxiliary heater)	330

3. Additional water heater coolant circuit valve relay	331
4. Recirculating pump, coolant circuit valve, auxiliary heater operation relay	332
5. Climatronic control unit, fresh air blower control unit, fresh air blower, blower relay, fresh air blower Relay, 2nd speed	333
6. Heater control unit B5W S/ D5W S, metering pump, combustion air blower, flame monitor, self-diagnosis connection	334
7. Heater control unit B5W S/ D5W S, overheating sensor, coolant temperature sender (heating), glow plug for heater, ambient temperature switch	335
8. Pre-selection clock, digital clock	336
041 - Additional water heater B5W S/ D5W S	337-345
1. Additional water heater B5W S/ D5W S	337-338
2. Battery cut-out relay, second battery	339
3. Release relay for terminal 61, additional water heater coolant circuit valve relay	340
4. Recirculating pump, coolant circuit valve, auxiliary heater operation relay	341
5. Air conditioning system control unit, fresh air blower switch, fresh air blower, blower relay, fresh air blower Relay, 2nd speed	342
6. Heater control unit B5W S/ D5W S, metering pump, combustion air blower, flame monitor, self-diagnosis connection	343
7. Heater control unit B5W S/ D5W S, overheating sensor, coolant temperature sender, glow plug for heater, ambient temperature switch	344
8. Pre-selection clock, digital clock	345
042 - Additional water heater B5W S/D5W S	346-354
1. Additional water heater B5W S/D5W S	346-347
2. Battery cut-out relay, second battery, temperature switch relay (auxiliary heater)	348
3. Additional water heater coolant circuit valve relay	349
4. Recirculating pump, coolant circuit valve, auxiliary heater operation relay	350
5. Air conditioning system control unit, fresh air blower switch, fresh air blower, blower relay, fresh air blower relay, 2nd speed	351
6. Heater control unit B5W S/D5W S, metering pump, combustion air blower, flame monitor, self-diagnosis connection	352
7. Heater control unit B5W S/D5W S, overheating sensor, coolant temperature sender (heating), glow plug for heater, ambient temperature switch	353
8. Pre-selection clock, digital clock	354
043 - Additional water heater D5W Z (models with diesel engine)	355-360
1. Additional water heater D5W Z (models with diesel engine)	355-356
2. Battery cut-out relay, second battery	357
3. Release relay for terminal 61, temperature switch relay (auxiliary heater)	358
4. Heater control unit B5W Z, metering pump, combustion air blower, flame monitor, self-diagnosis connection	359
5. Heater control unit D5W Z, overheating sensor, coolant temperature sender, glow plug for heater, ambient temperature switch	360
044 - Additional water heater D5W Z (models with diesel engine)	361-364
1. Additional water heater D5W Z (models with diesel engine)	361
2. Battery cut-out relay, second battery, temperature switch relay (auxiliary heater)	362
3. Heater control unit D5W Z, metering pump	363
4. Heater control unit B5W S/ D5W S, combustion air blower, flame monitor, overheating sensor, coolant temperature sender, glow plug for heater, ambient temperature switch	364
045 - Second battery	365-368
1. Second battery	365
2. Battery cut-out relay, second battery	366
3. 12V socket, position of fuses	367
4. Position of fuses	368
046 - Windscreen heater	369-372
1. Windscreen heater	369-370
2. Heated windscreen relay, heated windscreen	371
3. Heated windscreen relay, heated windscreen	372
047 - Electrically adjustable and heated exterior mirror with fold-in feature	373-377
1. Electrically adjustable and heated exterior mirror with fold-in feature	373
2. Mirror adjustment switch, Mirror adjustment changeover switch, Driver side mirror adjustment motor, Driver side fold-in mirror motor	374
3. Folding exterior mirror control unit, Front passenger side mirror adjustment motor, Front passenger side fold-in mirror motor	375
4. Heated rear window switch, Multifunction unit control unit, Fuse in relay plate fuse holder, Heated rear window	376
5. Fuse in relay plate fuse holder	377
048 - Seat heating	378-380



1. Seat heating	378
2. Heated driver seat control unit, driver's seat temperature sensor, heated driver's seat, heated driver's seat backrest	379
3. Heated front passenger seat control unit, front passenger's seat temperature sensor, heated front passenger's seat, heated front passenger's seat backrest	380
049 - Headlights gaseous discharge lamp with automatic headlight range control	381-391
1. Headlights gaseous discharge lamp with automatic headlight range control	381
2. Dash panel insert, main beam warning lamp, rear fog light warning lamp, turn signal warning lamp, bulb failure warning lamp	382
3. Left gas discharge lamp control unit with HRC, left gas discharge lamp control unit, left gas discharge lamp, left main beam headlight, side light bulb, left, turn signal front left	383
4. Left gas discharge lamp control unit with HRC, vehicle level sender, headlight range control motor, left	384
5. Left gas discharge lamp control unit with HRC, right gas discharge lamp control unit with HRC, self-diagnosis connection	385
6. Right gas discharge lamp control unit with HRC, headlight range control motor, right	386
7. Right gas discharge lamp control unit, right gas discharge lamp, main beam right, side light bulb right, turn signal front right	387
8. Lighting switch, rear fog light switch, fog light switch	388
9. Tail light, left, tail light, right, switches and instruments - lighting control	389
10. Brake light switch, reversing light switch, reversing light, rear fog light	390
11. Voltage supply	391
050 - Headlight washer system, windscreen wash/wiper system	392-395
1. Headlight washer system, windscreen wash/wiper system	392
2. Washer pump relay, Headlight washer system pump	393
3. Intermittent wiper switch, Intermittent wiper regulator, Headlight washer system relay	394
4. Wiper motor control unit, Windscreen wiper motor, Rear window wiper motor, Windscreen and rear window washer pump	395
051 - Basic equipment	396-418
1. Basic equipment	396
2. Battery, X-contact relief relay	397
3. Ignition/starter switch	398
4. Control unit in dash panel insert, Data bus diagnostic interface, Diagnostic connection	399
5. Control unit in dash panel insert	400
6. Multifunction display call-up button, Multifunction display memory switch, Front left brake pad wear sender, Front right brake pad wear sender, Rear left brake pad wear sender, Rear right brake pad wear sender, Multifunction indicator, Control unit in dash panel insert	401
7. Bonnet contact switch, Control unit in dash panel insert	402
8. Handbrake warning switch, Brake fluid level warning contact, Windscreen washer fluid level sender, Control unit in dash panel insert	403
9. Hazard warning light switch, Left side light bulb, Front left turn signal bulb, Left turn signal repeater bulb, Left headlight dipped beam bulb, Left headlight main beam bulb	404
10. Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Right side light bulb, Front right turn signal bulb, Right turn signal repeater bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	405
11. Switch and instrument illumination regulator, Headlight range control regulator, Left headlight range control motor, Right headlight range control motor	406
12. Light switch, Fog light switch, Rear fog light switch, Fog light warning lamp	407
13. Brake light switch, Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb	408
14. Reversing light switch, Rear left fog light bulb, Rear right fog light bulb, Left reversing light bulb, Right reversing light bulb, Additional brake light bulb, Left number plate light, Right number plate light	409
15. Door contact switch rear (rear lid), Heated rear window warning lamp, Heated rear window	410
16. Driver door contact switch, Front passenger door contact switch, Rear left door contact switch, Rear right door contact switch, Dash panel left vent illumination bulb, Dash panel central vent illumination, Dash panel right vent illumination bulb, Left drinks holder illumination bulb, Right drinks holder illumination bulb	411
17. Glove compartment light, Driver side door warning lamp, Front passenger side door warning lamp, Rear left door warning lamp, Rear right door warning lamp	412
18. Front interior light, Luggage compartment light on left, Front left entry light, Front right entry light, Rear left entry light, Rear right entry light, Right luggage compartment light	413
19. Rear left reading light, Rear right reading light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Left centre reading light, Right centre reading light, Rear interior light, Rear centre reading light	414
20. Cigarette lighter	415

21. Horn plate, Treble horn, Bass horn, Dual tone horn relay	416
22. Intermittent wiper switch, Intermittent wiper regulator, Windscreen wiper motor, Windscreen and rear window washer pump	417
23. Rear window wiper motor, Left washer jet heater element, Right washer jet heater element	418
052 - Multifunction steering wheel for cruise control system and radio	419-423
1. Multifunction steering wheel for cruise control system and radio	419
2. Operating unit in steering wheel, horn plate, coil connector, driver side airbag igniter	420
3. Multifunction steering wheel control unit, dual tone horn relay, self-diagnosis connection, dual tone horn	421
4. Multifunction steering wheel control unit, cruise control system switch (GND)	422
5. Voltage supply	423
053 - Multimedia system	424-430
1. Multimedia system	424-425
2. Multimedia control unit, multimedia display unit 1	426
3. Multimedia control unit, multimedia system operating unit, multimedia headphones for left side, multimedia display unit 2	427
4. Multimedia control unit, multimedia system operating unit, multimedia headphones for right side	428
5. Fuse locations	429
6. Fuse locations	430
054 - Automatic anti-dazzle interior mirror, automatic anti-dazzle exterior mirror	431-434
1. Automatic anti-dazzle interior mirror, automatic anti-dazzle exterior mirror	431-432
2. Automatic anti-dazzle interior mirror, automatic anti-dazzle exterior mirror	433
3. Automatic anti-dazzle interior mirror, automatic anti-dazzle exterior mirror	434
055 - All-wheel drive (4Motion)	435-438
1. All-wheel drive (4Motion)	435
2. All-wheel drive control unit, Haldex coupling pump	436
3. Brake light switch, Reversing light switch, Handbrake warning switch, Hydraulic temperature sender, All-wheel drive control unit, Oil pressure control motor	437
4. Control unit in dash panel insert, Multifunction unit control unit, Data bus diagnostic interface	438
056 - Anti-lock brake system (ABS)	439-443
1. Anti-lock brake system (ABS)	439
2. Brake light switch, ABS control unit, Multifunction unit control unit	440
3. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	441
4. ABS control unit, ABS hydraulic pump	442
5. ABS control unit, Control unit in dash panel insert, Data bus diagnostic interface, ABS warning lamp, Brake system warning lamp	443
057 - Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS) and electronic stabilisation program (ESP)	444-451
1. Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS) and electronic stabilisation program (ESP)	444
2. Brake light switch, ABS control unit, Multifunction unit control unit, Brake light suppression relay	445
3. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	446
4. Lateral acceleration sender, Brake pressure sender 1, Yaw rate sender, Brake pressure sender 2, ABS control unit, ABS hydraulic pump	447
5. Brake pressure solenoid trip switch, ABS control unit, Brake pressure solenoid valve	448
6. Steering angle sender, ABS control unit	449
7. TCS and ESP button, Longitudinal acceleration sender, ABS control unit	450
8. Handbrake warning switch, Brake fluid level warning contact, Control unit in dash panel insert, Data bus diagnostic interface, ABS warning lamp, Brake system warning lamp, ESP and TCS warning lamp	451
058 - Day driving lights	452-462
1. Day driving lights	452-453
2. Dash panel insert, main beam warning lamp, rear fog light warning lamp, turn signal warning lamp, bulb failure warning lamp	454
3. Left headlight, front left turn signal, hazard warning light switch	455
4. Right headlight, front right turn signal, turn signal switch, headlight dip/flasher switch, parking light switch	456
5. Headlight range control adjuster, headlight range control motor, switches and instruments illumination regulator, registration plate lights	457
6. Light switch, rear fog light switch, fog light switch	458
7. Left tail light, right tail light, day driving lights switch-on relay	459
8. Brake light switch, reversing light, rear fog light, reversing light switch	460
9. Dipped headlight control unit, on/off (Coming home))	461
10. Fuses	462

059 - Headlight washer system, windscreen washer/wiper system	463-467
1. Headlight washer system, windscreen washer/wiper system	463-464
2. Washer pump relay, headlight washer system pump	465
3. Intermittent wiper switch, intermittent wipe regulator, headlight washer system relay, washer pump relay	466
4. Windscreen wiper motor, rear window wiper motor, windscreen and rear window washer pump	467
060 - Taxi equipment	468-476
1. Taxi equipment	468
2. Alarm system control unit	469
3. Horn plate, Treble horn, Bass horn, Dual tone horn relay, Alarm system control unit	470
4. Taxi alarm system 2 switch, Alarm system off switch, Blocking diode, Alarm system control unit	471
5. Taxi alarm system 2 control unit, Taxi roof sign light bulb, Taxi number light bulb	472
6. Interior light switch (taxi), Taxi sign switch, Taxi alarm system 2 control unit	473
7. Two-way radio button, Taxi alarm remote control, control unit, Two-way radio, Aerial, Two-way radio loudspeaker, Remote controlled taxi alarm aerial, 2-way radio unit microphone	474
8. Alarm system switch, Taximeter	475
9. Fuse 1 in fuse holder, Fuse 3 in fuse holder, Fuse 6 in fuse holder, Fuse 8 in fuse holder, Fuse 10 in fuse holder, 2nd battery fuse, Fuse 1 (30), in battery fuse holder, Fuse 28 in fuse holder	476
061 - Parking aid (models not fitted with a tow bar)	477-482
1. Parking aid (models not fitted with a tow bar)	477-478
2. Parking aid control unit, reversing light switch	479
3. Parking aid control unit, front parking aid senders	480
4. Parking aid control unit, parking aid button, parking aid warning buzzer, diagnostic socket	481
5. Parking aid control unit, rear parking aid senders	482
062 - Basic equipment	483-505
1. Basic equipment	483
2. Battery, X-contact relief relay	484
3. Ignition/starter switch	485
4. Control unit in dash panel insert, Data bus diagnostic interface, Diagnostic connection	486
5. Control unit in dash panel insert, Data bus diagnostic interface	487
6. Multifunction display call-up button, Multifunction display memory switch, Front left brake pad wear sender, Front right brake pad wear sender, Rear left brake pad wear sender, Rear right brake pad wear sender, Multifunction indicator, Control unit in dash panel insert	488
7. Bonnet contact switch, Control unit in dash panel insert	489
8. Handbrake warning switch, Brake fluid level warning contact, Windscreen washer fluid level sender, Control unit in dash panel insert	490
9. Hazard warning light switch, Left side light bulb, Front left turn signal bulb, Left turn signal repeater bulb, Left headlight dipped beam bulb, Left headlight main beam bulb	491
10. Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Right side light bulb, Front right turn signal bulb, Right turn signal repeater bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	492
11. Switch and instrument illumination regulator, Headlight range control regulator, Left headlight range control motor, Right headlight range control motor	493
12. Light switch, Fog light switch, Rear fog light switch, Fog light warning lamp	494
13. Brake light switch, Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb	495
14. Reversing light switch, Rear left fog light bulb, Rear right fog light bulb, Left reversing light bulb, Right reversing light bulb, High-level brake light bulb, Left number plate light, Right number plate light	496
15. Rear door contact switch (rear lid), Heated rear window warning lamp, Heated rear window	497
16. Driver door contact switch, Front passenger door contact switch, Rear left door contact switch, Rear right door contact switch, Dash panel left vent illumination bulb, Dash panel central vent illumination bulb, Dash panel right vent illumination bulb, Left drinks holder illumination bulb, Right drinks holder illumination bulb	498
17. Glove compartment light, Driver side door warning lamp, Front passenger side door warning lamp, Rear left door warning lamp, Rear right door warning lamp	499
18. Front interior light, Left luggage compartment light, Front left entry light, Front right entry light, Rear left entry light, Rear right entry light, Right luggage compartment light	500
19. Rear left reading light, Rear right reading light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Left centre reading light, Right centre reading light, Rear interior light, Rear centre reading light	501
20. Cigarette lighter	502
21. Horn plate, Treble horn, Bass horn, Dual tone horn relay	503
22. Intermittent wiper switch, Intermittent wiper regulator, Windscreen wiper motor, Windscreen and rear window washer pump	504
23. Rear window wiper motor. Left washer iet heater element. Right washer iet heater element	505

063 - Windscreen heater	506-509
1. Windscreen heater	506-507
2. Heated windscreen switch	508
3. Heated windscreen relay, heated windscreen	509
064 - Immobilizer	510-514
1. Immobilizer	510-511
2. Immobilizer control unit	512
3. Dash panel insert, immobilizer warning lamp	513
4. Dash panel insert, immobilizer warning lamp	514
065 - Headlight washer system, windscreen washer/wiper system	515-520
1. Headlight washer system, windscreen washer/wiper system	515-516
2. Intermittent wiper switch, intermittent wipe regulator, headlight washer system relay, washer pump relay	517
3. Windscreen wiper motor, rear window wiper motor, windscreen and rear window washer pump	518
4. Fuse locations	519
5. Fuse locations	520
066 - Second battery	521-525
1. Second battery	521-522
2. Battery isolation relay, second battery	523
3. 12 V sockets, position of fuses	524
4. Fuse locations	525
067 - Radio system "Delta" with CD changer and telephone preparation	526-531
1. Radio system "Delta" with CD changer and telephone preparation	526
2. Radio, CD changer	527
3. Radio, front left loudspeaker, rear left loudspeaker	528
4. Radio, front right loudspeaker, rear right loudspeaker	529
5. Radio	530
6. Operating electronics control unit, telephone microphone, telephone aerial, mobile telephone (Handy)	531
068 - CAN bus network - drive train and convenience system	532-536
1. CAN bus network - drive train and convenience system	532
2. Mobile telephone operating electronics control unit, multifunction steering wheel control unit, telephone microphone, radio	533
3. Dash panel insert, self-diagnosis connection, data bus diagnostic interface	534
4. Connection for: ABS/ABS control unit with EDL, steering angle sender, airbag control unit, automatic gearbox control unit	535
5. Connection for: Four-wheel drive control unit, immobilizer control unit, parking aid control unit, Motronic control unit, diesel direct injection system control unit	536
069 - Automatic anti-dazzle interior mirror, automatic anti-dazzle exterior mirror	537-540
1. Automatic anti-dazzle interior mirror, automatic anti-dazzle exterior mirror	537-538
2. Automatic anti-dazzle interior mirror, automatic anti-dazzle exterior mirror	539
3. Automatic anti-dazzle interior mirror, automatic anti-dazzle exterior mirror	540
070 - Parking aid (models with trailer towing attachment)	541-547
1. Parking aid (models with trailer towing attachment)	541
2. Parking aid control unit, reversing light switch	542
3. Parking aid control unit, front parking aid senders	543
4. Parking aid control unit, parking aid button, parking aid warning buzzer	544
5. Parking aid control unit, rear parking aid senders	545
6. Parking aid control unit, rear fog light cut-out contact switch	546
7. Parking aid control unit	547
071 - Parking aid (models with trailer towing attachment)	548-554
1. Parking aid (models with trailer towing attachment)	548-549
2. Parking aid control unit, reversing light switch	550
3. Parking aid control unit, front parking aid senders	551
4. Parking aid control unit, parking aid button, parking aid warning buzzer, diagnostic socket	552
5. Parking aid control unit, rear parking aid senders	553
6. Parking aid control unit, rear fog light cut-out contact switch	554
072 - Trailer towing	555-564
1. Trailer towing	555-556
2. Dash panel insert, main beam warning lamp, rear fog light warning lamp, turn signal warning lamp, bulb failure warning lamp, trailer towing warning lamp	557
3. Left headlight, front left turn signal, hazard warning light switch	558
4. Trailer towing electric socket, rear fog light cut-out contact switch	559
5. Right headlight, front right turn signal, turn signal switch, headlight dip/flasher switch, parking light switch	560
6. Light switch. rear fog light switch. fog light switch	561

7. Left tail lights, right tail lights	562
8. Brake light switch, reversing light, rear fog light, reversing light switch	563
9. Voltage supply for trailer socket	564
073 - Four-wheel drive (4 Motion)	565-569
1. Four-wheel drive (4 Motion)	565-566
2. Four-wheel drive control unit, hydraulic temperature sender, oil pressure control motor, handbrake warning switch, self-diagnosis connection, brake light switch	567
3. Dash panel insert, brake system warning lamp	568
4. Dash panel insert, brake system warning lamp	569
074 - Auxiliary coolant heater B5W S/ D5W S	570-578
1. Auxiliary coolant heater B5W S/ D5W S	570-571
2. Battery isolation relay, second battery, temperature switch relay for auxiliary heater	572
3. Auxiliary coolant heater coolant circuit valve relay	573
4. Circulation pump, coolant circuit valve, auxiliary heater operation relay	574
5. Climatronic control unit, fresh air blower control unit, fresh air blower, blower relay, fresh air blower relay (2nd speed)	575
6. Heater control unit B5W S/ D5W S, metering pump, combustion air blower, flame monitor, coolant temperature display sender, self-diagnosis connection	576
7. Vacuum switch for auxiliary heater, heater control unit B5W S/ D5W S, overheating sensor, glow plug for heater, ambient temperature switch	577
8. Pre-selection clock/ digital clock	578
075 - Additional water heater B5W S/D5W S	579-587
1. Additional water heater B5W S/D5W S	579-580
2. Battery cut-out relay, second battery, temperature switch relay (auxiliary heater)	581
3. Additional water heater coolant circuit valve relay, fuses	582
4. Recirculating pump, coolant circuit valve, auxiliary heater operation relay	583
5. Air conditioning system control unit, fresh air blower switch, fresh air blower, blower relay, fresh air blower relay, 2nd speed	584
6. Heater control unit B5W S/ D5W S, metering pump, combustion air blower, flame monitor, coolant temperature sender (heating), self-diagnosis connection	585
7. Heater control unit B5W S/D5W S, overheating sensor, glow plug for heater, ambient temperature switch, two-way valve for coolant cut-off valve	586
8. Pre-selection clock, digital clock	587
076 - additional water heater D5W Z (models with diesel engine)	588-593
1. additional water heater D5W Z (models with diesel engine)	588-589
2. Heater control unit D5W Z	590
3. Heater control unit D5W Z, combustion air blower, flame monitor, overheating sensor, coolant temperature sender, glow plug for heater	591
4. Heater control unit D5W Z, metering pump, ambient temperature switch	592
5. Heater control unit D5W Z, metering pump, ambient temperature switch	593
077 - Climatronic (models with petrol engine)	594-606
1. Climatronic (models with petrol engine)	594-595
2. Climatronic control unit, temperature flap control motor, fresh/recirculating air flap control motor, control and display unit for Climatronic, dash panel temperature sensor	596
3. Climatronic control unit, control motor for centre vent, front air distribution control motor, self-diagnosis connection	597
4. Climatronic control unit, ambient temperature sensor, coolant temperature sender, vent temperature sender, sunlight penetration photosensor	598
5. Climatronic control unit, front fresh air blower, rear fresh air blower, rear vent temperature sender	599
6. Climatronic control unit, rear temperature flap control motor, rear air distribution control motor	600
7. Climatronic control unit	601
8. Radiator fan control unit, fan run-on thermo-switch, continued circulation of coolant pump, air conditioning system magnetic coupling	602
9. Radiator fan control unit, air conditioner pressure switch	603
10. Radiator fan 2nd speed relay, radiator fan thermo-switch	604
11. Radiator fan relay	605
12. Radiator fan relay, radiator fan	606
078 - Climatronic (models with diesel engine)	607-618
1. Climatronic (models with diesel engine)	607-608
2. Climatronic control unit, temperature flap control motor, fresh/recirculating air flap control motor, control and display unit for Climatronic, dash panel temperature sensor	609
3. Climatronic control unit, control motor for centre vent, front air distribution control motor, self-diagnosis connection	610
4. Climatronic control unit. ambient temperature sensor. coolant temperature sender. vent	611

temperature sender, sunlight penetration photosensor	
5. Climatronic control unit, front fresh air blower, rear fresh air blower, rear vent temperature sender	612
6. Climatronic control unit, rear temperature flap control motor, rear air distribution control motor	613
7. Climatronic control unit	614
8. Radiator fan control unit, continued circulation of coolant pump, air conditioning system magnetic coupling	615
9. Radiator fan control unit, air conditioner pressure switch	616
10. Radiator fan 2nd speed relay, radiator fan thermo-switch	617
11. Radiator fan relay, radiator fan	618
079 - Electrically adjustable and heated exterior mirror with fold-in feature	619-623
1. Electrically adjustable and heated exterior mirror with fold-in feature	619
2. Mirror adjustment switch, Mirror adjustment changeover switch, Driver side mirror adjustment motor, Driver side fold-in mirror motor	620
3. Folding exterior mirror control unit, Front passenger side mirror adjustment motor, Front passenger side fold-in mirror motor	621
4. Heated rear window switch, Multifunction unit control unit, Fuse in relay plate fuse holder, Heated rear window	622
5. Fuse in relay plate fuse holder	623
080 - Air conditioning system (models with petrol engine)	624-632
1. Air conditioning system (models with petrol engine)	624
2. Multifunction unit control unit, Temperature flap control motor, Front air distribution control motor	625
3. Fresh air blower switch, Air conditioning system switch, Fresh air and air recirculation flap switch, Fresh air blower, Fresh air and air recirculation flap control motor	626
4. Warm air blower switch, Additional heat exchanger and rear control switch, Potentiometer for rear interior temperature, Rear warm air blower, Rear temperature flap control motor	627
5. Thermal switch for fan run-on, Radiator fan control unit, Air conditioning system magnetic clutch, Continued coolant circulation pump	628
6. Ambient temperature switch, Air conditioning system pressure switch, Radiator fan control unit	629
7. Radiator fan thermal switch, Radiator fan 2nd speed relay	630
8. Radiator fan relay	631
9. Radiator fan relay, Radiator fan	632
081 - Air conditioning system (models with diesel engine)	633-640
1. Air conditioning system (models with diesel engine)	633
2. Multifunction unit control unit, Temperature flap control motor, Front air distribution control motor	634
3. Fresh air blower switch, Air conditioning system switch, Fresh air and air recirculation flap switch, Fresh air blower, Fresh air and air recirculation flap control motor	635
4. Warm air blower switch, Additional heat exchanger and rear control switch, Potentiometer for rear interior temperature, Rear warm air blower, Rear temperature flap control motor	636
5. Radiator fan control unit, Air conditioning system magnetic clutch, Continued coolant circulation pump	637
6. Ambient temperature switch, Air conditioning system pressure switch, Radiator fan control unit	638
7. Radiator fan thermal switch, Radiator fan 2nd speed relay	639
8. Radiator fan relay, Radiator fan	640
082 - Climatronic, with Climatronic engine code ASZ only	641-651
1. Climatronic, with Climatronic engine code ASZ only	641
2. Climatronic control unit, temperature flap control motor, fresh air and recirculated air flap control motor, Climatronic operating and display unit, dash panel temperature sensor	642
3. Climatronic control unit, centre vent control motor, front air distribution control motor, self-diagnosis connection	643
4. Climatronic control unit, ambient temperature sensor, coolant temperature sender, vent temperature sender, auxiliary heat exchanger valve, sunlight penetration photosensor	644
5. Climatronic control unit, front fresh air blower, rear fresh air blower, rear vent temperature sender	645
6. Climatronic control unit, rear temperature flap control motor, rear air distribution control motor	646
7. Climatronic control unit	647
8. Radiator fan control unit, air conditioning system magnetic coupling	648
9. Diesel direct injection system control unit, high pressure sender, coolant temperature sender, radiator fan control unit	649
10. Diesel direct injection system control unit, continued coolant circulation relay, continued coolant circulation pump, radiator fan	650
11. Fuses	651

083 - Air conditioning system (models with a petrol engine)	652-661
1. Air conditioning system (models with a petrol engine)	652-653
2. Air conditioning system control unit, temperature flap control motor, front air distribution control motor, diagnostic socket	654
3. Air conditioning system control unit, fresh air and air recirculation flap switch, fresh air and air recirculation flap control motor, fresh air blower switch, air conditioner switch, fresh air blower	655
4. Air conditioning system control unit, warm air blower switch, additional heat exchanger and rear control switch, rear warm air blower, rear temperature flap control motor	656
5. Radiator fan control unit, radiator fan run-on thermal switch, continued coolant circulation pump, air conditioner magnetic coupling	657
6. Radiator fan control unit, air conditioner pressure switch, ambient temperature switch	658
7. Radiator fan 2nd speed relay, radiator fan thermal-switch	659
8. Radiator fan relay	660
9. Radiator fan relay, radiator fan	661
084 - Air conditioning system (models with a diesel engine)	662-669
1. Air conditioning system (models with a diesel engine)	662
2. Air conditioning system control unit, temperature flap control motor, front air distribution control motor, self-diagnosis connection	663
3. Air conditioning system control unit, fresh air/air recirculation flap switch, fresh air/recirculated air flap control motor, fresh air blower switch, air conditioning system switch, fresh air blower	664
4. Air conditioning system control unit, warm air blower switch, additional heat exchanger and rear control switch, rear warm air blower, rear temperature flap control motor	665
5. Radiator fan control unit, continued coolant circulation pump, air conditioning system magnetic clutch	666
6. Radiator fan control unit, air conditioning system pressure switch, ambient temperature sender	667
7. Radiator fan relay for second speed, radiator fan thermal switch	668
8. Radiator fan relay, radiator fan	669
085 - Air conditioner	670-678
1. Air conditioner	670-671
2. Air conditioning system control unit, temperature flap control motor, front air distribution control motor, diagnostic socket	672
3. Air conditioning system control unit, fresh air and air recirculation flap switch, fresh air and air recirculation flap control motor, fresh air blower switch, air conditioner switch, fresh air blower	673
4. Air conditioning system control unit, warm air blower switch, additional heat exchanger and rear control switch, rear warm air blower, rear temperature flap control motor	674
5. Radiator fan control unit, air conditioner magnetic coupling	675
6. Diesel direct injection system control unit, high pressure sender, radiator fan control unit, ambient temperature switch	676
7. Diesel direct injection system control unit, continued coolant circulation relay, radiator fan, coolant temperature sender	677
8. Battery fuse holder, continued coolant circulation pump	678
086 - Auxiliary coolant heater B5W S/ D5W S	679-687
1. Auxiliary coolant heater B5W S/ D5W S	679-680
2. Auxiliary coolant heater coolant circuit valve relay	681
3. Circulation pump, coolant circuit valve, auxiliary heater operation relay	682
4. Climatronic control unit, fresh air blower control unit, fresh air blower, blower relay, fresh air blower relay (2nd speed)	683
5. Heater control unit B5W S/ D5W S, metering pump, combustion air blower, flame monitor, coolant temperature display sender, self-diagnosis connection	684
6. Heater control unit B5W S/ D5W S, overheating sensor, glow plug for heater, ambient temperature switch, 2-way valve for coolant shut-off valve	685
7. Pre-selection clock/ digital clock	686
8. Pre-selection clock/ digital clock	687
087 - Auxiliary coolant heater B5W S/ D5W S	688-697
1. Auxiliary coolant heater B5W S/ D5W S	688-689
2. Auxiliary coolant heater coolant circuit valve relay, fuses	690
3. Circulation pump, coolant circuit valve, auxiliary heater operation relay	691
4. Air conditioning system control unit, fresh air blower switch, fresh air blower, blower relay	692
5. Heater control unit B5W S/ D5W S, metering pump, self-diagnosis connection, fresh air blower relay (2nd speed)	693
6. Heater control unit B5W S/ D5W S, flame monitor, overheating sensor, coolant temperature display sender, glow plug for heater, combustion air blower	694
7. Heater control unit B5W S/ D5W S. ambient temperature switch. 2-wav valve for coolant shut-off	695

valve	
8. Pre-selection clock/ digital clock, illumination regulators - switches and instruments, digital display illumination bulb	696
9. Pre-selection clock/ digital clock, illumination regulators - switches and instruments, digital display illumination bulb	697
088 - Immobilizer	698-702
1. Immobilizer	698-699
2. Immobilizer control unit, central locking deadlock function warning lamp, self-diagnosis connection	700
3. Immobilizer control unit	701
4. Dash panel insert, immobilizer warning lamp	702
089 - Basic equipment	703-727
1. Basic equipment	703
2. Battery, X-contact relief relay	704
3. Ignition/starter switch	705
4. Dash panel insert, self-diagnosis connection	706
5. Dash panel insert, immobilizer warning lamp	707
6. Dash panel insert, rev. counter, odometer display, speedometer, alternator warning lamp	708
7. Dash panel insert, multifunction display, brake wear indicator, door open warning lamp	709
8. Dash panel insert, main beam warning lamps, rear fog light, bulb failure, bonnet contact switch, bonnet open warning lamps, selector lever lock, trailer operation	710
9. Dash panel insert, turn signal warning lamp, windscreen washer fluid level sender, brake system warning lamp, handbrake warning switch, brake fluid level warning contact, washer fluid low warning lamp	711
10. Front left headlight bulbs, front left turn signal, hazard warning light switch	712
11. Front right headlight, front right turn signal, turn signal switch, headlight dipper/flasher switch, parking light switch	713
12. Headlight range control regulator, headlight range control motor, illumination regulators - switches and instruments	714
13. Light switch, rear fog light switch, fog light switch	715
14. Left tail light, right tail light, brake light, high level brake light bulb, rear turn signal	716
15. Brake light switch, reversing lights, rear fog light, reversing lights switch	717
16. Heated rear window switch, heated rear window, door contact switch rear (rear lid), number plate light	718
17. Dash panel vent illumination bulb, driver door contact switch, rear left door contact switch, drinks holder illumination	719
18. Glove compartment light, front passenger door contact switch, rear right door contact switch, door warning lamps	720
19. Luggage compartment lights, entry lights, front interior light	721
20. Illuminated vanity mirror, right centre reading light, left centre reading light, rear interior light, rear right reading light	722
21. Connection for radio, cigarette lighter, rear left reading light	723
22. Dual tone horn relay, horn plate, dual tone horn	724
23. Intermittent wiper switch, intermittent wipe regulator	725
24. Windscreen wiper motor, rear window wiper motor, wiper motor control unit, windscreen and rear window washer pump	726
25. Heated washer jets	727
090 - Anti-locking brake system (ABS)	728-733
1. Anti-locking brake system (ABS)	728-729
2. ABS control unit, brake light switch	730
3. ABS for control unit, speed sensor	731
4. ABS control unit, ABS hydraulic pump, diagnostic socket	732
5. ABS control unit, dash panel insert, ABS warning lamp, brake system warning lamp	733
091 - Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stabilisation program (ESP)	734-742
1. Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stabilisation program (ESP)	734-735
2. ABS and EDL/ TCS/ ESP control unit, brake light suppression relay, brake light switch	736
3. ABS and EDL/TCS/ESP control unit, speed sensors	737
4. ABS and EDL/TCS/ESP control unit, lateral acceleration sender, brake pressure sender, membrane movement potentiometer in brake servo, yaw rate sender, ESP sensor unit, longitudinal acceleration sender, ABS hydraulic pump	738
5. ABS and EDL/TCS/ESP control unit, brake pressure solenoid valve, brake pressure solenoid trip switch	739
6. ABS and EDL/TCS/ESP control unit, steering angle sender, diagnostic socket	740
7. ABS and EDL/TCS/ESP control unit. TCS/ESP button	741



8. Dash panel insert, brake system warning lamp, ABS warning lamp, stabilising program warning lamp, handbrake warning switch, brake fluid level warning contact	742
092 - Airbag systems	743-748
1. Airbag systems	743-744
2. Airbag control unit, side airbag igniter, side airbag crash sensor	745
3. Airbag control unit, curtain airbag igniter, dash panel insert, airbag warning lamp	746
4. Dash panel insert, driver side belt switch, seat belt warning system warning lamp, buzzer	747
5. Dash panel insert, driver side belt switch, seat belt warning system warning lamp, buzzer	748
093 - 1.8 l/110 kW Motronic, engine code AWC	749-766
1. 1.8 l/110 kW Motronic, engine code AWC	749-750
2. Ignition/starter switch	751
3. Motronic current supply relay	752
4. Motronic control unit, ignition system	753
5. Motronic control unit	754
6. Immobilizer control unit, Hall sender, coolant temperature sender, exhaust gas recirculation potentiometer, engine speed sender, exhaust gas recirculation valve, charge air pressure sender	755
7. Motronic control unit, knock sensors, intake air temperature sender	756
8. Motronic control unit, injectors, lambda probe after catalytic converter	757
9. Motronic control unit, throttle valve module, throttle valve drive angle sender for electric throttle, throttle valve drive for electric throttle, lambda probe	758
10. Motronic control unit, air mass meter, accelerator position sender, charge pressure control solenoid valve, active charcoal filter system solenoid valve	759
11. Motronic control unit, secondary air pump relay, secondary air pump motor, clutch pedal switch, cruise control system brake pedal switch, brake light switch	760
12. Motronic control unit, radiator fan control unit, cruise control system switch (GND), fan run-on thermal switch, continued coolant circulation pump	761
13. Fuel pump relay, fuel gauge sender, fuel pump	762
14. Coolant shortage indicator sender, oil pressure switch, oil level and oil temperature sender	763
15. Dash panel insert, coolant temperature/coolant shortage indicator, fuel gauge, rev. counter, speedometer, alternator warning lamp, oil pressure warning	764
16. Dash panel insert, cruise control system warning lamp, multifunction display, ambient temperature indicator, electronic power control fault lamp, exhaust emissions warning lamp	765
17. Dash panel insert, cruise control system warning lamp, multifunction display, ambient temperature indicator, electronic power control fault lamp, exhaust emissions warning lamp	766
094 - 2.0l petrol engine , ATM	767-782
1. 2.0l petrol engine , ATM	767
2. Starter, Voltage regulator, Multifunction unit control unit	768
3. Ignition/starter switch, Starter inhibitor and reversing light relay, Multifunction unit control unit	769
4. Main relay, Multifunction unit control unit	770
5. Motronic control unit, Multifunction unit control unit, Ignition transformer, Spark plug connector	771
6. ABS control unit, Automatic gearbox control unit, Motronic control unit, Multifunction unit control unit	772
7. Engine speed sender, Hall sender, Coolant temperature sender, Exhaust gas recirculation potentiometer, Motronic control unit, Immobiliser control unit, Multifunction unit control unit, Exhaust gas recirculation valve, Diagnostic connection	773
8. Knock sensor 1, Knock sensor 2, Accelerator position sender, Accelerator position sender 2, Motronic control unit, Multifunction unit control unit	774
9. Air mass meter, Lambda probe after catalytic converter, Motronic control unit, Multifunction unit control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	775
10. Lambda probe, Motronic control unit, Throttle valve module, Multifunction unit control unit, Activated charcoal filter solenoid valve 1	776
11. Brake light switch, Clutch pedal switch, Brake pedal switch, Motronic control unit, Secondary air pump relay, Multifunction unit control unit, Secondary air pump motor	777
12. Cruise control system switch, Thermal switch for fan run-on, Motronic control unit, Radiator fan control unit, Multifunction unit control unit, Continued coolant circulation pump	778
13. Fuel gauge sender, Fuel system pressurisation pump, Fuel pump relay, Multifunction unit control unit, Heater element for crankcase breather	779
14. Oil pressure switch, Speedometer sender, Coolant shortage indicator sender, Oil level and oil temperature sender	780
15. Fuel gauge, Coolant temperature gauge, Rev counter, Speedometer, Buzzer and gong, Control unit in dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Coolant temperature and coolant shortage warning lamp, Oil level warning lamp, Reserve fuel warning lamp	781
16. Multifunction display call-up button, Multifunction display memory switch, Multifunction indicator. Control unit in dash panel insert. Data bus diagnostic interface. Cruise control system	782

warning lamp, Exhaust emissions warning lamp, Electronic power control fault lamp	
095 - 2.8 l/150 kW Motronic, engine code AYL	783-801
1. 2.8 l/150 kW Motronic, engine code AYL	783-784
2. Ignition/starter switch	785
3. Fuses in fuse holder	786
4. Motronic control unit, ignition system	787
5. Motronic control unit, ignition system, variable intake manifold change-over valve	788
6. Motronic control unit, inlet camshaft control valve	789
7. Motronic control unit, immobilizer control unit, Hall sender, coolant temperature display sender, engine speed sender, self-diagnosis connection	790
8. Motronic control unit, accelerator position sender, knock sensors	791
9. Motronic control unit, injectors	792
10. Motronic control unit, air mass meter, lambda probe after catalytic converter, activated charcoal filter system solenoid valve	793
11. Motronic control unit, throttle valve module, throttle valve drive angle sender for electric throttle, throttle valve drive for electric throttle, lambda probe	794
12. Motronic control unit, secondary air pump relay, secondary air pump motor, secondary air inlet valve, clutch pedal switch, cruise control system brake pedal switch, brake light switch	795
13. Motronic control unit, radiator fan control unit, cruise control system switch (GND), fan run-on thermal switch, continued coolant circulation pump	796
14. Fuel pump relay, fuel gauge sender, fuel pump	797
15. Coolant shortage indicator sender, oil pressure switch, oil level and oil temperature sender, heater element for crankcase breather	798
16. Dash panel insert, coolant temperature/coolant shortage indicator, fuel gauge, rev. counter, speedometer, alternator warning lamp, oil pressure warning	799
17. Dash panel insert, cruise control system warning lamp, multifunction display, ambient temperature indicator, electronic power control fault lamp, exhaust emissions warning lamp	800
18. Dash panel insert, cruise control system warning lamp, multifunction display, ambient temperature indicator, electronic power control fault lamp, exhaust emissions warning lamp	801
096 - 1.9l diesel engine , ANU,AUY,BVK	802-815
1. 1.9l diesel engine , ANU,AUY,BVK	802
2. Starter, Alternator	803
3. Ignition/starter switch	804
4. Terminal 30 voltage supply relay, Heater element for crankcase breather	805
5. Kickdown switch, Idling speed switch, Accelerator position sender, Diesel direct injection system control unit	806
6. Diesel direct injection system control unit	807
7. Engine speed sender, Coolant temperature sender, Intake manifold pressure sender, Intake manifold temperature sender, Diesel direct injection system control unit, Immobiliser control unit	808
8. Hall sender, Diesel direct injection system control unit, Unit injector valve, No. 1 cyl., Unit injector valve, No. 2 cyl., Unit injector valve, No. 3 cyl., Unit injector valve, No. 4 cyl.	809
9. Air mass meter, Diesel direct injection system control unit, Exhaust gas recirculation valve, Charge pressure control solenoid valve, Variable intake manifold flap changeover valve	810
10. Cruise control system switch, Brake light switch, Clutch pedal switch, Brake pedal switch, Diesel direct injection system control unit	811
11. Fuel gauge sender, Fuel system pressurisation pump, Fuel temperature sender, Fuel pump relay, Diesel direct injection system control unit, Coolant circulation pump	812
12. Coolant shortage indicator sender, Oil level and oil temperature sender, Glow plug relay, Engine glow plug	813
13. Oil pressure switch, Speedometer, Buzzer and gong, Control unit in dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Coolant temperature and coolant shortage warning lamp, Oil level warning lamp	814
14. Fuel gauge, Coolant temperature gauge, Rev. counter, Ambient temperature sensor, Multifunction indicator, Control unit in dash panel insert, Data bus diagnostic interface, Glow period warning lamp, Cruise control system warning lamp, Reserve fuel warning lamp	815
097 - 1.9 l/96 kW - Turbo diesel engine with unit injectors, engine code ASZ	816-830
1. 1.9 l/96 kW - Turbo diesel engine with unit injectors, engine code ASZ	816
2. Starter, alternator	817
3. Ignition/starter switch	818
4. Voltage supply, fuses	819
5. Accelerator position sender, kickdown switch, idling speed switch, crankcase breather heater element, terminal 30 voltage supply relay	820
6. Diesel direct injection system control unit	821
7. Engine speed sender, coolant temperature sender, intake manifold pressure sender, immobilizer control unit, intake manifold temperature sender	822
8. Diesel direct injection system control unit. unit injector valves. Hall sender (camshaft position	823

sender)	
9. Diesel direct injection system control unit, air mass meter, exhaust gas recirculation valve, variable intake manifold flap change-over valve, charge pressure control solenoid valve	824
10. Diesel direct injection system control unit, cruise control system brake pedal switch/diesel direct injection system, clutch pedal switch, brake light switch, cruise control system switch	825
11. Fuel gauge sender, coolant temperature sender, radiator fan control unit, radiator fan control unit, continued coolant circulation relay, continued coolant circulation pump	826
12. Diesel direct injection system control unit, glow plugs relay, engine glow plugs, fuel gauge sender, fuel pump relay, fuel pump	827
13. Coolant shortage indicator sender, oil level and oil temperature sender, oil pressure switch	828
14. Dash panel insert, speedometer, warning buzzer, warning lamps for alternator, oil pressure, coolant temperature/coolant shortage, oil level	829
15. Dash panel insert, multifunction display, coolant temperature gauge, ambient temperature display, fuel gauge, rev counter, glow period warning lamp, reserve fuel, cruise control system	830
098 - Four-speed automatic gearbox (AG4)	831-838
1. Four-speed automatic gearbox (AG4)	831-832
2. Starter inhibitor and reversing light relay	833
3. Automatic gearbox control unit, multi-function switch	834
4. Automatic gearbox control unit, solenoid valves, gearbox speed sender, gearbox oil temperature sender, diagnostic socket	835
5. Automatic gearbox control unit	836
6. Automatic gearbox control unit, vehicle speed sender, Tiptronic switch, selector lever lock solenoid	837
7. Automatic gearbox control unit	838
099 - Five-speed automatic gearbox (AG5)	839-846
1. Five-speed automatic gearbox (AG5)	839-840
2. Starter inhibitor and reversing light relay	841
3. Automatic gearbox control unit, multi-function switch, brake pressure switch	842
4. Automatic gearbox control unit, solenoid valves, gearbox oil temperature sender, diagnostic socket	843
5. Automatic gearbox control unit	844
6. Automatic gearbox control unit, Tiptronic switch, selector lever lock solenoid	845
7. Automatic gearbox control unit, vehicle speed sender, intermediate shaft speed sender, gearbox input speed sender	846
100 - Electrically adjustable and heated exterior mirrors	847-852
1. Electrically adjustable and heated exterior mirrors	847-848
2. Mirror adjustment switch, mirror adjustment switch with fold function, driver door electrically adjustable exterior mirror	849
3. Exterior mirror fold system control unit, front passenger door electrically adjustable exterior mirror	850
4. Heated rear window switch, heated exterior mirror relay, heated rear window	851
5. Voltage supply for mirror adjustment and folding function	852
101 - Taxi equipment	853-861
1. Taxi equipment	853
2. Alarm system control unit	854
3. Horn plate, Horn or dual tone horn, Dual tone horn relay, Alarm system control unit	855
4. Taxi alarm system 2 switch, Alarm system off switch, Alarm system control unit	856
5. Alarm system control unit, Taxi alarm system 2 control unit, Taxi roof sign light bulb, Taxi number light bulb	857
6. Interior light switch (taxi), Taxi sign switch, Taxi alarm system 2 control unit	858
7. Two-way radio button, Taxi alarm remote control, control unit, Two-way radio, Two-way radio loudspeaker	859
8. Alarm system switch, Taximeter, Alarm system fuse, Taxi alarm system 2 fuse, Taximeter fuse, Taximeter and alarm system fuse	860
9. Fuse in relay plate fuse holder, Fuse in relay plate fuse holder, Fuse in relay plate fuse holder, Fuse in relay plate fuse holder, Fuse in relay plate fuse holder, 2nd battery fuse, Fuse 1 (30), in battery fuse holder, Fuse in fuse holder	861
102 - Interior light	862-867
1. Interior light	862-863
2. Driver door contact switch, rear left door contact switch	864
3. Glove box light, front passenger door contact switch, rear right door contact switch, door warning lights	865
4. Luggage compartment lights, entry lights, front interior light	866
5. Illuminated vanity mirror, centre interior light, rear interior light	867
103 - Steering wheel heater	868-870
1. Steering wheel heater	868-869

2. Heated steering wheel control unit, heated steering wheel sensor, heated steering wheel	870
104 - Seat heating (models with no heated steering wheel)	871-873
1. Seat heating (models with no heated steering wheel)	871
2. Heated driver seat control unit, driver seat temperature sensor, heated driver seat, driver seat cushion lateral support heater	872
3. Heated front passenger seat control unit, front passenger seat temperature sensor, heated front passenger seat cushion, heated front passenger seat backrest	873
105 - Seat heating (models with steering wheel heating)	874-877
1. Seat heating (models with steering wheel heating)	874-875
2. Heated front passenger's seat control unit, front passenger's seat temperature sensor, heated front passenger's seat, heated front passenger's seat backrest	876
3. Heated front passenger's seat control unit, front passenger's seat temperature sensor, heated front passenger's seat, heated front passenger's seat backrest	877
106 - Climatronic (models with petrol engine)	878-890
1. Climatronic (models with petrol engine)	878-879
2. Climatronic control unit, temperature flap control motor, fresh air and air recirculation flap control motor, Climatronic operating and display unit, dash panel temperature sensor	880
3. Climatronic control unit, centre vent control motor, front air distribution control motor, diagnostic socket	881
4. Climatronic control unit, ambient temperature sensor, coolant temperature sender, vent temperature sender, sunlight penetration photo-sensor	882
5. Climatronic control unit, front fresh air blower, rear fresh air blower, rear vent temperature sender	883
6. Climatronic control unit, rear temperature flap control motor, rear air distribution control motor	884
7. Climatronic control unit	885
8. Radiator fan control unit, radiator fan run-on thermal switch, continued coolant circulation pump, air conditioner magnetic coupling	886
9. Radiator fan control unit, air conditioner pressure switch	887
10. Radiator fan 2nd speed relay, radiator fan thermal-switch	888
11. Radiator fan relay	889
12. Radiator fan relay, radiator fan	890
107 - Climatronic (models with diesel engine)	891-901
1. Climatronic (models with diesel engine)	891
2. Climatronic control unit, temperature flap control motor, fresh air/recirculated air flap control motor, dash panel temperature sensor	892
3. Climatronic control unit, centre vent control motor, front air distribution control motor, self-diagnosis connection	893
4. Climatronic control unit, ambient temperature sensor, coolant temperature sender, vent temperature sender, sunlight penetration photosensor	894
5. Climatronic control unit, front fresh air blower, rear fresh air blower, rear vent temperature sender	895
6. Climatronic control unit, rear temperature flap control motor, rear air distribution control motor	896
7. Climatronic control unit	897
8. Radiator fan control unit, continued coolant circulation pump, air conditioning system magnetic clutch	898
9. Radiator fan control unit, air conditioning system pressure switch	899
10. Radiator fan relay for second speed, radiator fan thermal switch	900
11. Radiator fan relay, radiator fan	901
108 - Electric windows, rear vent windows	902-910
1. Electric windows, rear vent windows	902
2. Rear window regulator isolation switch, Front left window regulator switch, Rear left window regulator switch, in driver door, Rear right window regulator switch, in driver door, Front right window regulator switch in driver door, Driver side interior locking switch, Front left window regulator control unit	903
3. Front left window regulator control unit, Front right window regulator control unit, Driver side window regulator motor	904
4. Front right window regulator switch, Front right window regulator control unit, Front passenger side window regulator motor	905
5. Rear left window regulator switch, in door, Rear left window regulator control unit, Rear left window regulator motor	906
6. Rear left window regulator control unit, Rear right window regulator control unit	907
7. Rear right window regulator switch, in door, Rear right window regulator control unit, Multifunction unit control unit, Fuse 2 in fuse holder, Rear right window regulator motor	908
8. Left vent window switch. Right vent window switch. Multifunction unit control unit. Rear left	909

vent window relay, Rear right vent window relay, Left vent window motor, Right vent window motor	
9. Rear vent window relay, Multifunction unit control unit, Window regulator single fuse, Fuse 4 (30), in battery fuse holder	910
109 - Electrically adjustable and heated exterior mirrors	911-916
1. Electrically adjustable and heated exterior mirrors	911-912
2. Folding exterior mirror control unit, electrically adjustable exterior mirror for front passenger's door	913
3. Heated rear window switch, heated exterior mirror relay, heated rear window	914
4. Voltage supply for mirror adjustment and folding	915
5. Voltage supply for mirror adjustment and folding	916
110 - Electric windows	917-924
1. Electric windows	917-918
2. Front left electric window control unit, driver door electric window motor, interior locking switch, front electric window switch (driver side), rear electric window switch (driver side)	919
3. Front right electric window control unit, front passenger electric window motor, front right electric window switch (in door)	920
4. Rear left electric window control unit, rear left electric window motor, rear left electric window switch (in door)	921
5. Rear right electric window control unit, rear right electric window motor, rear right electric window switch (in door)	922
6. Vent wing window switch, rear left vent wing window relay, rear right vent wing window relay, vent wing window motors	923
7. Rear vent wing window relay, diagnostic socket	924
111 - Gas discharge headlights with automatic headlight range control and coming home	925-937
1. Gas discharge headlights with automatic headlight range control and coming home	925-926
2. Left gas discharge bulb control unit with HRC, left gas discharge bulb control unit, left gas discharge bulb, left main beam headlight, left side light bulb, front left turn signal	927
3. Left gas discharge bulb control unit with HRC, vehicle level sender, left headlight range control motor	928
4. Left gas discharge bulb control unit with HRC, right gas discharge bulb control unit with HRC, diagnostic socket	929
5. Right gas discharge bulb control unit with HRC, right headlight range control motor	930
6. Right gas discharge bulb control unit, right gas discharge bulb, right main beam headlight, right side light bulb, front right turn signal	931
7. Light switch, rear fog light switch, fog light switch	932
8. Left tail light, right tail light, switches and instruments illumination regulator	933
9. Brake light switch, reversing light switch, reversing light, rear fog light	934
10. Dipped beam control unit, on/off (Coming home)), registration plate lights	935
11. Voltage supply	936
12. Voltage supply	937
112 - Coming Home	938-940
1. Coming Home	938-939
2. Driver door contact switch, dipped headlight control unit, on/off (Coming home system)	940
113 - 4-speed automatic gearbox (AG4)	941-947
1. 4-speed automatic gearbox (AG4)	941
2. Starter inhibitor and reversing light relay	942
3. Multifunction switch, automatic gearbox control unit	943
4. Gearbox speed sender, gearbox oil temperature sender, automatic gearbox control unit, solenoid valve, self-diagnosis connection	944
5. Automatic gearbox control unit	945
6. Tiptronic switch, vehicle speed sender, automatic gearbox control unit, selector lever lock solenoid	946
7. Automatic gearbox control unit	947
114 - 5-speed automatic gearbox (AG5)	948-954
1. 5-speed automatic gearbox (AG5)	948
2. Starter inhibitor and reversing light relay	949
3. Multifunction switch, automatic gearbox control unit	950
4. Gearbox oil temperature sender, automatic gearbox control unit, solenoid valves, self-diagnosis connection	951
5. Automatic gearbox control unit	952
6. Tiptronic switch, automatic gearbox control unit, selector lever lock solenoid	953
7. Vehicle speed sender, gearbox input speed sender, intermediate shaft speed sender, automatic gearbox control unit	954
115 - Trailer operation	955-958
1. Trailer operation	955-956
2. Trailer socket	957

3. Rear fog light cut-out contact switch, trailer operation warning lamp, trailer socket	958
116 - Climatronic (models with petrol engine)	959-970
1. Climatronic (models with petrol engine)	959
2. Dash panel temperature sensor, Climatronic control unit, temperature flap control motor, fresh air and air recirculation flap control motor	960
3. Climatronic control unit, self-diagnosis connection, centre vent control motor, front air distribution control motor	961
4. Ambient temperature sensor, sunlight penetration photosensor, air conditioning system coolant temperature sender, front vent temperature sender, Climatronic control unit	962
5. Fresh air blower control unit, Climatronic control unit, rear fresh air blower control unit, rear vent temperature sender, fresh air blower, rear fresh air blower	963
6. Climatronic control unit, rear air distribution control motor, rear temperature flap control motor	964
7. Climatronic control unit	965
8. Thermal switch for fan run-on, radiator fan control unit, air conditioning system magnetic coupling, continued coolant circulation pump	966
9. Air conditioning system pressure switch, radiator fan control unit	967
10. Radiator fan thermal switch, radiator fan 2nd speed relay, fuses	968
11. Radiator fan relay	969
12. Radiator fan relay, radiator fan	970
117 - Climatronic (models with diesel engine)	971-981
1. Climatronic (models with diesel engine)	971
2. Dash panel temperature sensor, Climatronic control unit, temperature flap control motor, fresh air and air recirculation flap control motor	972
3. Climatronic control unit, self-diagnosis connection, centre vent control motor, front air distribution control motor	973
4. Ambient temperature sensor, sunlight penetration photosensor, air conditioning system coolant temperature sender, front vent temperature sender, Climatronic control unit	974
5. Fresh air blower control unit, Climatronic control unit, rear fresh air blower control unit, rear vent temperature sender, fresh air blower, rear fresh air blower	975
6. Climatronic control unit, rear air distribution control motor, rear temperature flap control motor	976
7. Climatronic control unit	977
8. Radiator fan control unit, air conditioning system magnetic clutch, continued coolant circulation pump	978
9. Air conditioning system pressure switch, radiator fan control unit, fuses	979
10. Radiator fan thermal switch, radiator fan 2nd speed relay, fuses	980
11. Radiator fan relay, radiator fan	981
118 - Climatronic (models with diesel engine)	982-992
1. Climatronic (models with diesel engine)	982
2. Dash panel temperature sensor, Climatronic control unit, temperature flap control motor, fresh air and air recirculation flap control motor	983
3. Climatronic control unit, self-diagnosis connection, centre vent control motor, front air distribution control motor	984
4. Ambient temperature sensor, sunlight penetration photosensor, air conditioning system coolant temperature sender, front vent temperature sender, Climatronic control unit	985
5. Fresh air blower control unit, Climatronic control unit, rear fresh air blower control unit, rear vent temperature sender, fresh air blower, rear fresh air blower	986
6. Climatronic control unit, rear air distribution control motor, rear temperature flap control motor	987
7. Climatronic control unit, fuses	988
8. Radiator fan control unit, air conditioning system magnetic coupling	989
9. Coolant temperature sender, high pressure sender, radiator fan control unit	990
10. Continued coolant circulation relay, radiator fan, continued coolant circulation pump	991
11. Fuses	992
119 - Parking aid (models with no trailer coupling)	993-997
1. Parking aid (models with no trailer coupling)	993
2. Reversing light switch, parking aid control unit	994
3. Front parking aid sender, parking aid control unit	995
4. Parking aid button, parking aid warning buzzer, parking aid control unit, self-diagnosis connection	996
5. Rear parking aid sender, parking aid control unit	997
120 - Parking aid (models with trailer coupling)	998-1004
1. Parking aid (models with trailer coupling)	998
2. Reversing light switch, parking aid control unit	999
3. Front parking aid sender, parking aid control unit	1000

4. Parking aid button, parking aid warning buzzer, parking aid control unit, self-diagnosis connection	1001
5. Rear parking aid sender, parking aid control unit	1002
6. Parking aid control unit, rear fog light cut-out contact switch	1003
7. Parking aid control unit	1004
121 - Anti-locking brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stability program (ESP)	1005-1013
1. Anti-locking brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stability program (ESP)	1005-1006
2. Brake light switch, ABS control unit, brake light suppression relay, brake light	1007
3. Speed sensor, ABS control unit, ABS valves	1008
4. Brake pressure sender 1, ESP sensor unit, diaphragm movement potentiometer in brake servo, ABS control unit, vehicle stabilization program switch valves, ABS hydraulic pump	1009
5. ABS control unit with EDL/ ASR/ ESP, brake pressure solenoid valve, brake pressure solenoid trip switch	1010
6. Steering angle sender, ABS control unit, self-diagnosis connection	1011
7. TCS and ESP button, ABS control unit, fuses	1012
8. Handbrake warning switch, brake fluid level warning contact, control unit in dash panel insert, ESP and TCS warning lamp	1013
122 - Electric windows	1014-1021
1. Electric windows	1014-1015
2. Rear window regulator isolation switch, window regulator switch, driver side interior locking switch, front left window regulator control unit	1016
3. Front right window regulator switch, front right window regulator control unit	1017
4. Rear left window regulator switch, in door, rear left window regulator control unit	1018
5. Rear right window regulator switch, in door, rear right window regulator control unit	1019
6. Left vent window switch, rear vent window relay, left vent window motor	1020
7. Rear left vent window relay, fuses	1021
123 - Windscreen heater	1022-1024
1. Windscreen heater	1022
2. Heated windscreen switch	1023
3. Heated windscreen relay for left side, Heated windscreen fuse, Fuse 1 (30), in battery fuse holder, Fuse 4 (30), in battery fuse holder, Fuse 6 (30), in battery fuse holder, Terminal 30 voltage supply fuse, Fuse in fuse holder, Heated windscreen	1024
124 - Gas discharge headlights with automatic headlight range control and Coming Home	1025-1038
1. Gas discharge headlights with automatic headlight range control and Coming Home	1025-1026
2. Control unit in dash panel insert, warning lamps	1027
3. Left gas discharge light control unit, left headlight range control unit, left headlight	1028
4. Vehicle inclination sender, left headlight range control unit, left headlight range control motor	1029
5. Left headlight range control unit, right headlight range control unit, self-diagnosis connection	1030
6. Right headlight range control unit, right headlight range control motor	1031
7. Right gas discharge light control unit, right headlight	1032
8. Light switch	1033
9. Switches and instruments illumination regulator, left tail light, right tail light	1034
10. Rear fog light, reversing lights	1035-1036
11. Reversing lights switch, dipped headlight control unit, on/off (Coming home system)	1037
12. Fuses	1038
125 - Basic equipment	1039-1066
1. Basic equipment	1039-1040
2. Battery, x-contact relief relay, fuse (30), in fuse holder on battery	1041
3. Ignition/starter switch	1042
4. Data bus diagnostic interface, self-diagnosis connection	1043
5. Control unit in dash panel insert, data bus diagnostic interface, immobilizer warning lamp	1044
6. Alternator warning lamp, control unit in dash panel insert	1045
7. Multifunction display call-up button, multifunction display memory switch, brake pad wear sender, door open warning lamp	1046-1047
8. Bonnet contact switch, control unit in dash panel insert, warning lamps	1048
9. Handbrake warning switch, brake fluid level warning contact, windscreen washer fluid level sender, control unit in dash panel insert, warning lamps	1049
10. Left headlight bulbs, left turn signal, left headlight	1050
11. Turn signal switch, headlight dipper/flasher switch, parking light switch, front right turn signal, front right headlight	1051
12. Switches and instruments illumination regulator, headlight range control regulator, headlight range control motor	1052
13. Light switch, fog light switch, rear fog light switch	1053
14. Left tail light. right tail light. brake light	1054

15. Brake light switch, reversing lights switch, rear fog light, reversing light	1055-1056
16. Heated rear window switch, door contact switch rear (rear lid), number plate light, heated rear window	1057
17. Driver door contact switch, rear left door contact switch, dash panel vent illumination bulb	1058
18. Front passenger door contact switch, rear right door contact switch, glove compartment light, door warning lamps	1059
19. Front interior light, luggage compartment lights, entry lights	1060
20. Rear right reading light, driver side illuminated vanity mirror, right centre reading light, rear interior light	1061
21. Connection for radio, cigarette lighter, rear left reading light, left centre reading light	1062
22. Horn plate, horn or dual tone horn	1063
23. Intermittent wiper switch, intermittent wipe regulator	1064
24. Wiper motor control unit, windscreen wiper motor, rear window wiper motor, windscreen and rear window washer pump	1065
25. Left washer jet heater element	1066
126 - Automatic anti-dazzle interior mirror	1067-1069
1. Automatic anti-dazzle interior mirror	1067-1068
2. Automatic anti-dazzle interior mirror	1069
127 - Air conditioning system (models with petrol engine)	1070-1078
1. Air conditioning system (models with petrol engine)	1070
2. Air conditioning system control unit, self-diagnosis connection, temperature flap control motor, front air distribution control motor	1071
3. Fresh air blower switch, air conditioning system switch, fresh air and air recirculation flap switch, air conditioning system control unit, fresh air blower, fresh air and air recirculation flap control motor	1072
4. Additional heat exchanger and rear control switch, air conditioning system control unit, rear warm air blower, rear temperature flap control motor	1073
5. Thermal switch for fan run-on, radiator fan control unit, air conditioning system magnetic coupling, fuses, continued coolant circulation pump	1074
6. Ambient temperature switch, air conditioning system pressure switch, radiator fan control unit	1075
7. Radiator fan thermal switch, radiator fan 2nd speed relay, fuses	1076
8. Radiator fan relay	1077
9. Radiator fan relay, radiator fan	1078
128 - Air conditioning system (models with diesel engine)	1079-1086
1. Air conditioning system (models with diesel engine)	1079
2. Air conditioning system control unit, self-diagnosis connection, temperature flap control motor, front air distribution control motor	1080
3. Fresh air blower switch, air conditioning system switch, fresh air and air recirculation flap switch, air conditioning system control unit, fresh air blower, fresh air and air recirculation flap control motor	1081
4. Additional heat exchanger and rear control switch, air conditioning system control unit, rear warm air blower, rear temperature flap control motor	1082
5. Radiator fan control unit, air conditioning system magnetic clutch, fuses, continued coolant circulation pump	1083
6. Ambient temperature switch, air conditioning system pressure switch, radiator fan control unit, fuses	1084
7. Radiator fan thermal switch, radiator fan 2nd speed relay, fuses	1085
8. Radiator fan relay, radiator fan	1086
129 - Air conditioning system (models with diesel engine)	1087-1094
1. Air conditioning system (models with diesel engine)	1087
2. Air conditioning system control unit, self-diagnosis connection, temperature flap control motor, front air distribution control motor	1088
3. Fresh air blower switch, air conditioning system switch, fresh air and air recirculation flap switch, air conditioning system control unit, fresh air blower, fresh air and air recirculation flap control motor	1089
4. Additional heat exchanger and rear control switch, air conditioning system control unit, rear warm air blower, rear temperature flap control motor	1090
5. Radiator fan control unit, air conditioning system magnetic coupling, fuses	1091
6. Ambient temperature switch, high-pressure sender, radiator fan control unit	1092
7. Coolant temperature display sender, continued coolant circulation relay, radiator fan	1093
8. Fuses, continued coolant circulation pump	1094
130 - Fog light and rear fog light	1095-1098
1. Fog light and rear fog light	1095-1096
2. Fog light switch, rear fog light switch, fog light	1097
3. Rear fog light cut-out contact switch, rear fog light, reversing light	1098
131 - Slidina/tiltina sunroof. digital clock	1099-1102



1. Sliding/tilting sunroof, digital clock	1099-1100
2. Sunroof switch, sliding sunroof adjustment control unit, sliding sunroof motor	1101
3. Pre-selection clock, sliding sunroof adjustment control unit, digital clock	1102
132 - Day driving light	1103-1114
1. Day driving light	1103-1104
2. Control unit in dash panel insert, warning lamps	1105
3. Left headlight bulbs, left turn signal, left headlight	1106
4. Turn signal switch, headlight dipper/flasher switch, parking light switch, front right turn signal, front right headlight	1107
5. Switches and instruments illumination regulator, headlight range control regulator, headlight range control motor	1108
6. Light switch	1109
7. Day driving light switch-on relay, left tail light, right tail light	1110
8. Rear fog light, reversing lights, number plate light	1111-1112
9. Dipped headlight control unit, on/off (Coming home system)	1113
10. Fuses	1114
133 - Auxiliary heater for models with Climatronic	1115-1122
1. Auxiliary heater for models with Climatronic	1115
2. Battery, Second battery, Battery isolation relay, Multifunction unit control unit, Temperature switch relay for auxiliary heater	1116
3. Multifunction unit control unit, Auxiliary coolant heater coolant circuit valve relay	1117
4. Auxiliary heater operation relay, Multifunction unit control unit, Coolant circuit valve, Circulation pump	1118
5. Fresh air blower control unit, Climatronic control unit, Blower relay, Fresh air blower relay, 2nd speed, Multifunction unit control unit, Fresh air blower	1119
6. Flame monitor, Coolant temperature sender for heater, Heater control unit, Multifunction unit control unit, Combustion air blower, Metering pump	1120
7. Ambient temperature switch, Vacuum switch for auxiliary heater, Overheating sensor, Heater control unit, Multifunction unit control unit, Glow plug for heater	1121
8. Multifunction unit control unit, Digital clock	1122
134 - Auxiliary heater for models with Climatic	1123-1130
1. Auxiliary heater for models with Climatic	1123
2. Battery, Second battery, Battery isolation relay, Multifunction unit control unit, Temperature switch relay for auxiliary heater	1124
3. Multifunction unit control unit, Auxiliary coolant heater coolant circuit valve relay	1125
4. Auxiliary heater operation relay, Multifunction unit control unit, Coolant circuit valve, Circulation pump	1126
5. Fresh air blower switch, Blower relay, Multifunction unit control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	1127
6. Flame monitor, Coolant temperature sender for heater, Heater control unit, Fresh air blower relay, 2nd speed, Multifunction unit control unit, Combustion air blower, Metering pump	1128
7. Ambient temperature switch, Overheating sensor, Heater control unit, Multifunction unit control unit, Glow plug for heater	1129
8. Pre-selection clock, Multifunction unit control unit, Digital display illumination bulb, Digital clock	1130
135 - Central locking central locking with remote control	1131-1143
1. Central locking central locking with remote control	1131-1132
2. Interior locking switch, front left central locking actuator, immobilizer warning lamp, central locking deadlock function warning lamp	1133
3. Front right central locking actuator, self-diagnosis connection	1134
4. Rear left central locking actuator	1135
5. Rear right central locking actuator	1136
6. Driver side central locking switch, central locking switch on front passenger side, rear lid central locking switch, rear lid lock motor	1137
7. Rear lid release switch, driver door contact switch, front passenger door contact switch, door contact switch rear (rear lid)	1138
8. Rear left door contact switch, rear right door contact switch, bonnet contact switch, alarm horn	1139
9. Anti-theft alarm ultrasonic sensor	1140
10. Turn signal	1141
11. Multifunction steering wheel fuse and central locking/anti-theft alarm	1142
12. Multifunction steering wheel fuse and central locking/anti-theft alarm, fuel tank filler flap central locking actuator	1143
136 - Basic equipment	1144-1163
1. Basic equipment	1144
2. Battery, X-contact relief relay	1145
3. Ignition/starter switch	1146

4. Control unit in dash panel insert, Data bus diagnostic interface, Diagnostic connection	1147
5. Control unit in dash panel insert	1148
6. Multifunction display call-up button, Multifunction display memory switch, Driver door contact switch, Front passenger door contact switch, Rear left door contact switch, Rear right door contact switch, Front left brake pad wear sender, Front right brake pad wear sender, Rear left brake pad wear sender, Rear right brake pad wear sender, Multifunction indicator, Control unit in dash panel insert	1149
7. Bonnet contact switch, Control unit in dash panel insert	1150
8. Handbrake warning switch, Brake fluid level warning contact, Windscreen washer fluid level sender, Control unit in dash panel insert	1151
9. Hazard warning light switch, Driver side turn signal repeater bulb, Left side light bulb, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb	1152
10. Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Front passenger side turn signal repeater bulb, Right side light bulb, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	1153
11. Switch and instrument illumination regulator, Headlight range control regulator, Left headlight range control motor, Right headlight range control motor	1154
12. Light switch, Fog light switch, Rear fog light switch, Fog light warning lamp	1155
13. Brake light switch, Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb	1156
14. Reversing light switch, Rear left fog light bulb, Right reversing light bulb, Additional brake light bulb, Left number plate light, Right number plate light	1157
15. Door contact switch rear (rear lid), Heated rear window warning lamp, Heated rear window	1158
16. Dash panel left vent illumination bulb, Dash panel central vent illumination, Dash panel right vent illumination bulb, Cigarette lighter	1159
17. Glove compartment light	1160
18. Horn plate, Treble horn, Bass horn, Dual tone horn relay	1161
19. Intermittent wiper switch, Intermittent wiper regulator, Windscreen wiper motor, Windscreen and rear window washer pump	1162
20. Rear window wiper motor, Left washer jet heater element, Right washer jet heater element	1163
137 - 1.9 l/96 kW - Turbo diesel engine with unit injectors, engine code ASZ	1164-1179
1. 1.9 l/96 kW - Turbo diesel engine with unit injectors, engine code ASZ	1164-1165
2. Starter, alternator	1166
3. Ignition/starter switch	1167
4. Voltage supply, fuses	1168
5. Kick-down switch, idling speed switch, accelerator position sender, terminal 30 voltage supply relay, heater element for crankcase breather	1169
6. Diesel direct injection system control unit	1170
7. Engine speed sender, coolant temperature sender, intake manifold pressure sender, intake manifold temperature sender, immobilizer control unit	1171
8. Diesel direct injection system control unit, unit injector valves, Hall sender	1172
9. Air mass meter, exhaust gas recirculation valve, charge pressure control solenoid valve, variable intake manifold flap change-over valve	1173
10. Cruise control system switch, cruise control system (CCS) SET button, brake light switch, clutch pedal switch, brake pedal switch, diesel direct injection system control unit	1174
11. Fuel temperature sender, radiator outlet coolant temperature sender, continued coolant circulation relay, diesel direct injection system control unit, continued coolant circulation pump	1175
12. Fuel pump relay, fuel system pressurisation pump, fuel gauge sender, glow plugs	1176
13. Oil pressure switch, coolant shortage indicator sender, oil level and oil temperature sender	1177
14. Speedometer, buzzer and gong, alternator warning lamp, oil pressure warning lamp, coolant temperature and coolant shortage warning lamp	1178
15. Fuel gauge, coolant temperature gauge, rev. counter, glow period warning lamp, cruise control system warning lamp, reserve fuel warning lamp	1179
138 - 2.0l diesel engine , BRT,BVH	1180-1196
1. 2.0l diesel engine , BRT,BVH	1180
2. Starter, Alternator	1181
3. Ignition/starter switch	1182
4. Fuse in relay plate fuse holder	1183
5. Kickdown switch, Idling speed switch, Accelerator position sender, Diesel direct injection system control unit, Terminal 30 voltage supply relay, Heater element for crankcase breather	1184
6. Diesel direct injection system control unit	1185
7. Engine speed sender, Charge pressure sender, Intake air temperature sender, Coolant temperature sender, Diesel direct injection system control unit, Immobiliser control unit	1186
8. Hall sender, Diesel direct injection system control unit, Unit injector valve, No. 1 cyl., Unit injector valve, No. 2 cyl., Unit injector valve, No. 3 cyl., Unit injector valve, No. 4 cyl.	1187
9. Diesel direct injection system control unit. Exhaust gas recirculation valve. Charge pressure	1188

control solenoid valve, Intake manifold flap motor	
10. Cruise control system switch, Cruise control system (CCS) SET button, Brake light switch, Clutch pedal switch, Brake pedal switch, Diesel direct injection system control unit	1189
11. Fuel temperature sender, Radiator outlet coolant temperature sender, Continued coolant circulation relay, Diesel direct injection system control unit, Continued coolant circulation pump	1190
12. Lambda probe, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas pressure sensor 1, Diesel direct injection system control unit	1191
13. Air mass meter, Fuel additive tank sender, Diesel direct injection system control unit, Particulate filter additive pump	1192
14. Fuel gauge sender, Fuel system pressurisation pump, Fuel pump relay, Automatic glow period control unit, Diesel direct injection system control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	1193
15. Oil pressure switch, Coolant shortage indicator sender, Oil level and oil temperature sender	1194
16. Speedometer, Buzzer and gong, Control unit in dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Coolant temperature and coolant shortage warning lamp, Oil level warning lamp	1195
17. Fuel gauge, Coolant temperature gauge, Rev. counter, Ambient temperature sensor, Multifunction indicator, Control unit in dash panel insert, Data bus diagnostic interface, Glow period warning lamp, Cruise control system warning lamp, Reserve fuel warning lamp	1196
139 - Airbag	1197-1200
1. Airbag	1197
2. Airbag coil connector and return spring with slip ring, driver side airbag igniter, side airbag igniter on driver side, driver side curtain airbag igniter	1198
3. Key operated switch to deactivate front passenger side airbag, front passenger side airbag deactivated warning lamp, front passenger airbag igniter	1199
4. Side airbag crash sensor, crash sensor for curtain airbag, airbag warning lamp	1200
140 - Radio Volkswagen Individual	1201-1205
1. Radio Volkswagen Individual	1201
2. Radio, fuse	1202
3. Radio, rear left treble loudspeaker, rear left bass loudspeaker, front left bass loudspeaker, wide band loudspeaker for left C-pillar	1203
4. Radio, rear right treble loudspeaker, rear right bass loudspeaker, front right treble loudspeaker, wide band loudspeaker for right C-pillar	1204
5. Radio, aerial connection, telephone connection	1205
141 - Multimedia system	1206-1211
1. Multimedia system	1206-1207
2. Multimedia control unit, fuses	1208
3. Multifunction unit control unit, video recorder and DVD player, additional connections unit for audio and video, headphone connection 1, headphone connection 2	1209
4. Multifunction unit control unit, multimedia display unit 1	1210
5. Multifunction unit control unit, multimedia display unit 2	1211
142 - Interior lighting	1212-1219
1. Interior lighting	1212-1213
2. Fuse	1214
3. Door contact switch	1215
4. Glove compartment light, consumer switch-off fuse, door warning lamps	1216
5. Luggage compartment lights, entry lights	1217
6. Front interior light, centre interior light, rear interior light	1218
7. Vanity mirror contact switch, illuminated vanity mirror	1219
143 - Interior lighting	1220-1227
1. Interior lighting	1220-1221
2. Fuse	1222
3. Door contact switch	1223
4. Glove compartment light, consumer switch-off fuse, door warning lamps	1224
5. Luggage compartment lights, entry lights	1225
6. Front interior light, right centre reading light, illuminated vanity mirror, right centre reading light	1226
7. Rear left reading light, left centre reading light, rear interior light	1227
144 - Multifunction steering wheel	1228-1234
1. Multifunction steering wheel	1228-1229
2. Operating unit in steering wheel, airbag coil connector and return spring with slip ring, horn plate	1230
3. Horn or dual tone horn, dual tone horn relay, multifunction steering wheel control unit, multifunction unit control unit, fuses, self-diagnosis connection	1231
4. Multifunction steering wheel control unit, control unit with display for radio and navigation system, radio, self-diagnosis connection	1232
5. Cruise control system switch. Motronic control unit. Diesel direct injection system control unit.	1233

multifunction steering wheel control unit	
6. Fuses	1234
145 - Sockets (12V)	1235-1236
1. Sockets (12V)	1235
2. Fuses, 12-V socket, 12-V socket 2	1236
146 - Climatronic (models with diesel engine)	1237-1247
1. Climatronic (models with diesel engine)	1237
2. Dash panel temperature sensor, Climatronic control unit, temperature flap control motor, fresh air and air recirculation flap control motor	1238
3. Climatronic control unit, self-diagnosis connection, centre vent control motor, front air distribution control motor	1239
4. Ambient temperature sensor, sunlight penetration photosensor, air conditioning system coolant temperature sender, front vent temperature sender, Climatronic control unit	1240
5. Fresh air blower control unit, Climatronic control unit, rear fresh air blower control unit, rear vent temperature sender, fresh air blower, rear fresh air blower	1241
6. Climatronic control unit, rear air distribution control motor, rear temperature flap control motor	1242
7. Climatronic control unit, fuses	1243
8. Radiator fan control unit, air conditioning system magnetic coupling	1244
9. Coolant temperature sender, high pressure sender, radiator fan control unit	1245
10. Continued coolant circulation relay, radiator fan, continued coolant circulation pump	1246
11. Fuses	1247
147 - Air conditioning system (models with diesel engine)	1248-1255
1. Air conditioning system (models with diesel engine)	1248
2. Air conditioning system control unit, self-diagnosis connection, temperature flap control motor, front air distribution control motor	1249
3. Fresh air blower switch, air conditioning system switch, fresh air and air recirculation flap switch, air conditioning system control unit, fresh air blower, fresh air and air recirculation flap control motor	1250
4. Additional heat exchanger and rear control switch, air conditioning system control unit, rear warm air blower, rear temperature flap control motor	1251
5. Radiator fan control unit, air conditioning system magnetic coupling, fuses	1252
6. Ambient temperature switch, high-pressure sender, radiator fan control unit	1253
7. Coolant temperature display sender, continued coolant circulation relay, radiator fan	1254
8. Fuses, continued coolant circulation pump	1255
148 - Radio	1256-1260
1. Radio	1256
2. Radio, fuse	1257
3. Radio, rear left treble loudspeaker, rear left bass loudspeaker, front left bass loudspeaker, wide band loudspeaker for left C-pillar	1258
4. Radio, rear right treble loudspeaker, rear right bass loudspeaker, front right treble loudspeaker, wide band loudspeaker for right C-pillar	1259
5. Radio, aerial connection, telephone connection, CD changer	1260
149 - Telephone preparation	1261-1264
1. Telephone preparation	1261
2. Mobile telephone operating electronics control unit, fuses	1262
3. Mobile telephone operating electronics control unit, radio, control unit with display for radio and navigation	1263
4. Mobile telephone operating electronics control unit, multifunction steering wheel control unit, telephone microphone	1264
150 - Radio and navigation system black/white-display	1265-1271
1. Radio and navigation system black/white-display	1265
2. Control unit with display for radio and navigation system, fuses	1266
3. Control unit with display for radio and navigation, front left loudspeaker, rear left loudspeaker	1267
4. Control unit with display for radio and navigation, front left loudspeaker, rear left loudspeaker	1268
5. Control unit with display for radio and navigation system, front right loudspeaker, rear right loudspeaker	1269
6. Control unit with display for radio and navigation system, CD changer, side window aerial	1270
7. Control unit in dash panel insert, control unit with display for radio and navigation system, self-diagnosis connection	1271
151 - Radio navigation system (MFD) with traffic information evaluation	1272-1278
1. Radio navigation system (MFD) with traffic information evaluation	1272
2. Control unit with display for radio and navigation, Fuse 4 (30), in battery fuse holder, Fuse in fuse holder, Fuse in fuse holder	1273
3. Control unit with display for radio and navigation	1274
4. Control unit with display for radio and navigation. Rear left treble loudspeaker. Rear left bass	1275

loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker	
5. Control unit with display for radio and navigation, Rear right treble loudspeaker, Rear right bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	1276
6. Control unit with display for radio and navigation, Traffic information control unit, CD changer, Side window aerial	1277
7. Control unit in dash panel insert, Control unit with display for radio and navigation, Diagnostic connection	1278
152 - Headlight washer system, windscreen wash/wiper system	1279-1282
1. Headlight washer system, windscreen wash/wiper system	1279
2. Headlight washer system relay, Washer pump relay, Headlight washer system pump	1280
3. Intermittent wiper switch, Intermittent wiper regulator, Windscreen and rear window washer pump	1281
4. Wiper motor control unit, Windscreen wiper motor, Rear window wiper motor	1282
153 - Preparation for mobile telephone (Bluetooth)	1283-1286
1. Preparation for mobile telephone (Bluetooth)	1283
2. Mobile telephone operating electronics control unit, Fuse 4 (30), in battery fuse holder, Fuse 31 in fuse holder, Fuse 32 in fuse holder	1284
3. Mobile telephone operating electronics control unit, Control unit with display for radio and navigation, Radio	1285
4. Switch and instrument illumination regulator, Operating unit for preparation for mobile telephone, Mobile telephone operating electronics control unit, Telephone microphone, Mobile telephone, Telephone aerial	1286
154 - Central locking with anti-theft alarm system and interior monitor	1287-1298
1. Central locking with anti-theft alarm system and interior monitor	1287
2. Driver side interior locking switch, Front left central locking actuator, Immobiliser warning lamp, Central locking deadlock function warning lamp -SAFE-	1288
3. Front right central locking actuator, Diagnostic connection	1289
4. Rear left central locking actuator	1290
5. Rear right central locking actuator	1291
6. Central locking switch on driver side, Central locking switch on front passenger side, Rear lid central locking switch, Rear lid lock motor	1292
7. Rear lid release switch, Driver door contact switch, Front passenger door contact switch, Door contact switch rear (rear lid)	1293
8. Rear left door contact switch, Rear right door contact switch, Bonnet contact switch, Alarm horn	1294
9. Left ultrasonic sensor for anti-theft alarm system, Right ultrasonic sensor for anti-theft alarm system	1295
10. Driver side turn signal repeater bulb, Front passenger side turn signal repeater bulb, Front left turn signal bulb, Rear left turn signal bulb, Front right turn signal bulb, Rear right turn signal bulb	1296
11. Battery, Fuse 4 (30), in battery fuse holder, Fuse 6 (30), in battery fuse holder, Terminal 30 voltage supply fuse, Fuse in fuse holder	1297
12. Fuse in relay plate fuse holder, Fuse in relay plate fuse holder, Fuse in fuse holder	1298
155 - Radio-navigation system monochrome display (7Q5)	1299-1305
1. Radio-navigation system monochrome display (7Q5)	1299
2. Voltage converter, control unit with display for radio and navigation system, fuses	1300
3. Control unit with display for radio and navigation, front left loudspeaker, rear left loudspeaker	1301
4. Control unit with display for radio and navigation, front left loudspeaker, rear left loudspeaker	1302
5. Control unit with display for radio and navigation system, front right loudspeaker, rear right loudspeaker	1303
6. Control unit with display for radio and navigation system, CD changer, window aerial	1304
7. Control unit in dash panel insert, control unit with display for radio and navigation system, self-diagnosis connection	1305
156 - Radio system	1306-1310
1. Radio system	1306
2. Radio, fuse	1307
3. Radio, rear left treble loudspeaker, rear left bass loudspeaker, front left bass loudspeaker, wide band loudspeaker for left C-pillar, mobile telephone operating electronics control unit	1308
4. Radio, rear right treble loudspeaker, rear right bass loudspeaker, front right treble loudspeaker, wide band loudspeaker for right C-pillar	1309
5. Radio, aerial connection, CD changer, connection for external audio sources	1310
157 - Auxiliary coolant heater , ANU,ASZ,AUY,BRT,BVH,BVK	1311-1315
1. Auxiliary coolant heater , ANU,ASZ,AUY,BRT,BVH,BVK	1311
2. Battery, Second battery, Battery isolation relay, Multifunction unit control unit, Temperature switch relay for auxiliary heater	1312
3. Heater control unit, Multifunction unit control unit	1313
4. Flame monitor, Overheating sensor, Coolant temperature sender for heater, Heater control unit, Multifunction unit control unit. Glow plug for heater. Combustion air blower	1314

5. Ambient temperature switch, Heater control unit, Metering pump	1315
158 - Multimedia system	1316-1320
1. Multimedia system	1316
2. Battery, multimedia control unit, fuses	1317
3. Multimedia control unit, video recorder and DVD player	1318
4. Multifunction unit control unit, multimedia display unit 1	1319
5. Multifunction unit control unit, multimedia display unit 2	1320
407 - -Fault-Finding Program: Check multimedia system with DVD player - 3	1321-1333
1. Check multimedia system with DVD player	1321-1333
1.1 Check multimedia system with DVD player	1321
1.1.1 The following are necessary for fault finding:	1321
1.1.2 Prerequisites:	1321
1.1.3 Preparation for fault finding:	1321
1.2 Checking Multimedia control unit (J650)	1322-1324
1.2.1 Test step A	1322-1324
1.3 Checking DVD player (R129)	1325-1328
1.3.1 Test step D	1328
1.4 Check module for audio out-/input	1329-1330
1.4.1 Test step E	1329-1330
1.5 Checking multimedia display units -1- and -2- (Y22 and Y23)	1331-1333
1.5.1 Test step B	1331
1.5.2 Test step C	1332-1333
801 - -Fitting locations: Fuses - 3	1334-1363
1. Fuses	1334-1363
1.1 Overview of fuses	1334
1.2 Fitting location of fuses on multifunction unit fuse holder	1335-1363
1.2.1 Fuse assignment on multifunction unit fuse holder, to model year 2006	1336
1.2.2 Fuse assignment on multifunction unit fuse holder, from model year 2006	1337-1338
1.2.3 Fuse assignment on multifunction unit fuse holder, from model year 2009	1339
1.2.4 Fitting location of fuses on fuse holder under multifunction unit	1340-1341
1.2.5 Fuse assignment on fuse holder under multifunction unit, to model year 2006	1342-1347
1.2.6 Fuse assignment of fuses on fuse holder under multifunction unit, to model year 2006	1348-1352
1.2.7 Fuse assignment of fuses on fuse holder under multifunction unit, to model year 2009	1353-1356
1.2.8 Fuse assignment in additional fuse holder under seat on front right, to model year 2006:	1357
1.2.9 Fuse assignment in additional fuse holder under seat on front right, from model year 2006:	1358
1.2.10 Fuse assignment in additional fuse holder under seat on front right, from model year 2009:	1358
1.2.12 Fuses in battery fuse holder, to model year 2006	1359
1.2.13 Fuses in battery fuse holder, from model year 2006	1359
1.2.14 Fuses in battery fuse holder, from model year 2009	1360
1.2.16 Fuse assignment of fuses on lower additional fuse holder of multifunction unit, to model year 2006	1361
1.2.17 Fuse assignment of fuses on lower additional fuse holder of multifunction unit, from model year 2006	1362
1.2.18 Fuse assignment of fuses on lower additional fuse holder of multifunction unit, from model year 2009	1362-1363
802 - - Fitting locations: Relays - 3	1364-1375
1. Relays	1364-1375
1.1 Overview of relay carrier	1364
1.2 Assignment of relays on upper relay carrier behind multifunction unit, from model year 2001	1365
1.3 Assignment of relays on upper relay carrier behind multifunction unit, from model year 2002	1366
1.4 Assignment of relays on upper relay carrier behind multifunction unit, from model year 2003	1367
1.5 Assignment of relays on upper relay carrier behind multifunction unit, from model year 2004	1368
1.6 Assignment of relays on upper relay carrier behind multifunction unit, from model year 2006	1369
1.7 Assignment of relays on upper relay carrier behind multifunction unit, from model year 2009	1370
1.8 Assignment of relays on lower relay carrier behind multifunction unit, from model year 2001	1371
1.9 Assignment of relays on lower relay carrier behind multifunction unit, from model year 2002	1372
1.10 Assignment of relays on lower relay carrier behind multifunction unit, from model year 2004	1373
1.11 Assignment of relays on lower relay carrier behind multifunction unit, from model year 2006	1374
1.12 Assignment of relays on lower relay carrier behind multifunction unit, from model year 2009	1375
803 - - Fitting locations: Earth points - 3	1376-1384
1. Earth points	1376-1384
1.1 Overview of earth points in engine compartment	1376-1380
1.2 Overview of earth points in vehicle interior	1381-1384