



Contents

1	Engine list	1
2	Service work	4
2.1	Information about flexible or fixed service	4
2.2	Service tables up to model year ►2020	6
2.3	Service tables as of model year 2021►	18
3	General information	27
3.1	Raising vehicle with lifting platform or trolley jack	27
3.2	Stickers	29
3.3	Connecting vehicle diagnostic tester	30
3.4	Vehicle identification number	30
3.5	Vehicle data sticker	31
3.6	Countries with hot climate	33
3.7	Country overview for petrol not compliant with EN 228	34
3.8	Country overview for diesel not compliant with EN 590/EN 15940	35
3.9	Engine code and engine number	36
3.10	Severe operating conditions	36
3.11	Countries with high levels of dust	37
3.12	Identification plate	38
3.13	Shortened intervals for spark plug replacement	38
4	Descriptions of work	42
4.1	Swivel joints, axle mountings, coupling rod bearings and anti-roll bar rubber mounting: inspecting for damage	44
4.2	Driving light assist and cornering light: checking function	45
4.3	Battery: checking battery terminal clamps for secure seating	47
4.4	Battery (12V): checking with battery tester (always refer to workshop manual)	50
4.5	Status of battery: reading, sending diagnosis protocol online	50
4.6	Tyres: checking condition, wear pattern, tyre pressure and tread depth	50
4.7	Front passenger airbag: checking key switch and "ON/OFF function"	60
4.8	Brake system and shock absorbers: inspecting for leaks and damage	61
4.9	Brake and clutch system: changing brake fluid	61
4.10	Brake fluid level (dependent upon brake pad/lining wear): check.	67
4.11	Brakes, front and rear: checking thickness of brake pads and condition of brake discs	69
4.12	Diesel particulate filter: checking	71
4.13	Dual clutch gearbox OBH: changing gear oil	71
4.14	Electric windows: checking positioning (open and close functions)	71
4.15	Fault memory of all systems: reading with vehicle diagnostic tester, correcting possible faults according to repair guidelines	71
4.16	Bonnet: greasing arrester	72
4.17	Gearbox, final drive and drive shaft boots: inspect for leaks and damage.	72
4.18	Interior and exterior body: inspecting for corrosion with doors and flaps open	73
4.19	Poly V-belt: renewing	73
4.20	Poly V-belt: checking condition	73
4.21	Diesel fuel filter: renewing	74
4.22	Cooling system: checking frost protection and coolant level	78
4.23	Air filter: cleaning housing and renewing filter element	80
4.24	Multi-purpose additive for diesel fuel: adding	84
4.25	Multi-purpose additive for petrol fuel: adding	86
4.26	Engine oil level: checking	88
4.27	Draining or extracting engine oil, renewing oil filter and replenishing engine oil	89
4.28	Engine oil: capacities and specifications up to model year ►2020	106
4.29	Engine oil: capacities and specifications as of model year 2021►	108
4.30	Engine cover panel "top": removing and installing	109
4.31	Engine cover - bottom (noise insulation): removing and installing	113



4.32	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	113
4.33	Panorama tilting/sliding roof with rear panorama roof: checking function, cleaning and greasing guide rails, and cleaning wind deflector	114
4.34	Road test: performing (driving behaviour, noises, air conditioner etc.)	118
4.35	Wheel securing bolts: tightening to specified torque	118
4.36	Reducing agent (AdBlue®/DEF): replenishing	120
4.37	Reducing agent (AdBlue®/DEF): changing	124
4.38	Radio code: reading using vehicle diagnostic tester	124
4.39	Radio/navigation system: entering PIN of anti-theft coding and storing local radio stations to station buttons	125
4.40	Tyre pressure monitoring: performing basic setting	126
4.41	Tyre repair set: checking	127
4.42	Headlight adjustment: checking halogen headlights	128
4.43	Headlight adjustment: checking gas discharge headlights without DLA	131
4.44	Headlight adjustment: checking gas discharge headlights with DLA	137
4.45	Headlight adjustment: checking fog lights	144
4.46	Sliding sunroof drains at front: check for blockage, clean if necessary	146
4.47	Window wash/wipe system and headlight washer system: checking function, park position and for damage, if necessary refilling fluid	146
4.48	Service interval display: resetting	151
4.49	Service interval display: recoding	155
4.50	Track rods: checking clearance, attachment and boots	156
4.51	Auxiliary heater: setting weekday in menu of dash panel insert	157
4.52	Interior filter: cleaning housing and renewing filter element	158
4.53	Transportation mode: switching off	159
4.54	Transportation devices: removing blocking pieces from springs on front axle	159
4.55	Transportation devices: removing tie-down rings	160
4.56	Clock and date: setting	162
4.57	Underbody: inspecting for damage to underbody sealant, underbody panels, routing of lines, plugs	164
4.58	Water drain valves at rear: check for blockage, clean if necessary	164
4.59	Toothed belt (petrol engines): renewing	165
4.60	Camshaft drive toothed belt (diesel engines): renewing	165
4.61	Spark plugs: renewing	165
4.62	Dual clutch gearbox 02E: changing gear oil and filter	178
4.63	All-wheel drive coupling: changing oil	179
5	Exhaust emissions test	184
5.1	Exhaust emissions test for petrol engines	184
5.2	Exhaust emissions test for diesel engines	186
6	00 Periodic Technical Inspection (PTI)	189
7	Glossary	193
8	---Change history---	196