



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Brake allocation via PR No.</b>	<b>1</b>
1.1 Front brakes	1
1.2 Rear brakes	2
<b>2 Technical data for brakes</b>	<b>3</b>
2.1 Brake master cylinder and brake servo	3
2.2 Front brakes	3
2.3 Rear brakes (disc brakes)	4
<b>3 Brake test</b>	<b>5</b>
3.1 General	5
3.2 Test for vehicles with front-wheel drive	5
3.3 Test for vehicles with four-wheel drive	5
3.4 Testing the electromechanical parking brake	6
<b>45 - Anti-lock brake system</b>	<b>8</b>
<b>1 General notes on anti-lock brake system</b>	<b>8</b>
<b>2 Notes for repair work on anti-lock brake system</b>	<b>9</b>
<b>3 Connecting VAS 5051 and selecting functions</b>	<b>10</b>
<b>4 Electrical/electronic components and locations</b>	<b>12</b>
4.1 ABS TRW (ABS/EDL/TCS/ESP)	12
<b>5 Assembly overview - hydraulic unit</b>	<b>14</b>
5.1 ABS TRW (ABS/EDL/TCS/ESP), left-hand drive vehicle	14
5.2 ABS TRW (ABS/EDL/TCS/ESP), right-hand drive vehicle	20
<b>6 Removing and installing parts of ABS system on front and rear axle</b>	<b>28</b>
6.1 Removing and installing parts of ABS system on front axle	28
6.2 Removing and installing parts of anti-lock brake system on rear axle (front-wheel drive)	29
<b>7 Removing and installing parts of ESP system</b>	<b>31</b>
7.1 Removing and installing ESP sensor unit G419	31
7.2 Removing and installing steering angle sender G85	32
<b>46 - Brakes - mechanism</b>	<b>33</b>
<b>1 Repairing front brakes</b>	<b>33</b>
1.1 Assembly overview - front brakes FN 3	33
1.2 Removing and installing brake pads/linings	34
1.3 Removing and installing brake caliper	37
1.4 Assembly overview- front brakes C60	39
1.5 Removing and installing brake pads/linings	40
1.6 Removing and installing brake caliper	43
<b>2 Repairing rear brakes</b>	<b>45</b>
2.1 Assembly overview - rear brake CII 41	45
2.2 Removing and installing brake pads/linings	46
2.3 Removing and installing brake caliper	49
<b>3 Overview of electromechanical parking brake components</b>	<b>52</b>
3.1 Removing and installing control unit for electromechanical parking brake J540	52
3.2 Removing and installing parking brake motor	53
<b>4 Assembly overview - brake pedal</b>	<b>56</b>
4.1 Assembly overview - brake pedal, left-hand drive	56
4.2 Assembly overview - brake pedal, right-hand drive	58
<b>47 - Brakes - hydraulics</b>	<b>66</b>
<b>1 Repairing front brake calipers</b>	<b>66</b>



1.1	Assembly overview - brake caliper FN 3	66
1.2	Removing and installing piston for brake caliper FN 3	66
1.3	Assembly overview - brake caliper C 60	69
1.4	Removing and installing piston for brake caliper C 60	70
<b>2</b>	<b>Repairing rear brake calipers</b>	<b>73</b>
2.1	Assembly overview - brake caliper CII 41	73
2.2	Removing and installing brake caliper piston	74
2.3	Pre-bleeding brake caliper	76
<b>3</b>	<b>Pressurised leak test</b>	<b>77</b>
3.1	Test prerequisites:	77
<b>4</b>	<b>Bleeding brake system</b>	<b>78</b>
4.1	Bleeding brake system with the brake filling and bleeding equipment VAS 5234	78
4.2	Changing brake fluid	80
<b>5</b>	<b>Assembly overview - brake servo/brake master cylinder</b>	<b>81</b>
5.1	Assembly overview - brake servo/brake master cylinder (left-hand drive vehicle)	81
5.2	Assembly overview - brake servo/brake master cylinder (right-hand drive vehicle)	83
5.3	Vacuum pump for brake servo (vehicles with diesel engine)	84
5.4	Vacuum pump for brake servo (vehicles with petrol engine)	85
5.5	Checking brake servo vacuum system	85
5.6	Checking non-return valve :	89
5.7	Removing and installing vacuum sender G608	89
5.8	Removing and installing brake light switch F , left-hand drive	89
5.9	Removing and installing brake light switch F , right-hand drive	90
<b>6</b>	<b>Removing and installing brake master cylinder</b>	<b>92</b>
6.1	Removing and installing brake master cylinder, left-hand drive	92
6.2	Removing and installing brake master cylinder, right-hand drive vehicle	93
<b>7</b>	<b>Removing and installing brake servo</b>	<b>106</b>
7.1	Removing and installing brake servo, left-hand drive	106
7.2	Removing and installing brake servo, right-hand drive vehicle	108
<b>8</b>	<b>Brake lines</b>	<b>127</b>
8.1	Separating point on underbody	127
8.2	Repairing brake lines	127