



Contents

00 - Technical data	1
1 Checklist for evaluating running gear of accident vehicles	1
2 General information	3
40 - Front suspension	4
1 Evaluating accident vehicles	4
2 Raising wheel bearing assembly to unladen position	5
3 Overview - front axle	8
4 Assembly overview: subframe	10
4.1 Assembly overview: front left vehicle level sender G78	13
4.2 Removing and installing front left vehicle level sender G78	14
4.3 Repairing thread in longitudinal member	15
4.4 Fixing subframe in position	16
4.5 Lowering subframe	18
4.6 Removing and installing subframe without steering rack	23
4.7 Removing and installing subframe with steering rack	28
4.8 Repairing subframe	35
5 Assembly overview: front wheel suspension, suspension link	50
5.1 Checking swivel joint	52
5.2 Removing and installing swivel joint	53
5.3 Removing and installing suspension link with mounting bracket	57
5.4 Removing and installing suspension link with mounting bracket (left side for vehicles with DSG or automatic gearboxes)	61
5.5 Renewing bonded rubber bush for suspension link	68
5.6 Renewing mounting bracket with suspension link bush	71
6 Assembly overview: wheel bearing	75
6.1 Removing and installing wheel bearing unit	77
6.2 Removing and installing wheel bearing housing	80
7 Assembly overview: anti-roll bar	87
7.1 Removing and installing anti-roll bar	87
8 Assembly overview: suspension strut	94
8.1 Removing and installing suspension strut	94
8.2 Repairing suspension strut	103
9 Removing and installing drive shafts	106
9.1 Loosening and tightening twelve-point head bolt, with ribbing, securing drive shaft	106
9.2 Loosening and tightening twelve-point head bolt, without ribbing, securing drive shaft	108
9.3 Removing and installing drive shaft with constant velocity joint	110
9.4 Removing and installing left drive shaft with (push-on) constant velocity slip joint	114
9.5 Removing and installing right drive shaft with (push-on) constant velocity slip joint	121
9.6 Removing and installing drive shafts with triple roller joint AAR3300i	128
10 Repairing drive shaft - overview of drive shafts	133
10.1 Heat shield for drive shafts	133
11 Assembly overview: drive shaft with VL107 constant velocity joint	135
11.1 Dismantling and assembling drive shaft with VL107 constant velocity joint	137
11.2 Checking outer constant velocity joint	143
11.3 Checking inner constant velocity joint	144
12 Assembly overview: drive shaft with VL107 constant velocity slip joint	147
12.1 Dismantling and assembling drive shaft with VL107 constant velocity slip joint	149
12.2 Checking outer constant velocity joint	154
13 Assembly overview: drive shaft with triple roller joint AAR3300i	157
13.1 Dismantling and assembling drive shaft with triple roller joint AAR3300i	159



42 - Rear suspension	167
1	Evaluating accident vehicles 167
2	Rear axle in unladen position 168
3	Overview - rear axle 171
4	Assembly overview: subframe (front-wheel drive) 173
4.1	Fixing subframe in position 173
4.2	Lowering rear axle 175
4.3	Removing and installing rear axle 178
4.4	Repairing subframe 181
5	Assembly overview: transverse link, track rod (front-wheel drive) 194
5.1	Assembly overview: rear left vehicle level sender G76, front-wheel drive 196
5.2	Removing and installing rear left vehicle level sender G76 197
5.3	Removing and installing upper transverse link 198
5.4	Removing and installing lower transverse link 200
5.5	Removing and installing track rod 202
6	Assembly overview: wheel bearing housing, trailing arm (front-wheel drive) 207
6.1	Removing and installing wheel bearing housing 209
6.2	Renewing bonded rubber bush for wheel bearing housing 213
6.3	Removing and installing wheel bearing unit 216
6.4	Removing and installing trailing arm with mounting bracket 221
6.5	Repairing trailing arm 225
7	Assembly overview: shock absorber, coil spring (front-wheel drive) 229
7.1	Converting to Nivomat 231
7.2	Removing and installing coil spring 231
7.3	Removing and installing shock absorber 234
7.4	Repairing shock absorber 236
8	Assembly overview: anti-roll bar (front-wheel drive) 239
8.1	Removing and installing anti-roll bar 239
9	Rear axle in unladen position (four-wheel drive) 242
10	Overview of rear axle (four-wheel drive) 245
11	Assembly overview: subframe, final drive (four-wheel drive) 247
11.1	Fixing subframe in position 247
11.2	Lowering rear axle 249
11.3	Removing and installing rear axle 252
11.4	Repairing subframe 259
12	Assembly overview: transverse link, track rod (four-wheel drive) 271
12.1	Assembly overview: rear left vehicle level sender G76 274
12.2	Removing and installing rear left vehicle level sender G76 275
12.3	Removing and installing upper transverse link 276
12.4	Removing and installing lower transverse link 279
12.5	Removing and installing track rod 281
13	Assembly overview: wheel bearing housing, trailing arm (four-wheel drive) 286
13.1	Removing and installing wheel bearing housing 288
13.2	Renewing bonded rubber bush for wheel bearing housing 291
13.3	Removing and installing wheel bearing unit 295
13.4	Removing and installing trailing arm with mounting bracket 296
13.5	Repairing trailing arm 300
14	Assembly overview: shock absorber, coil spring (four-wheel drive) 304
14.1	Converting to Nivomat 306
14.2	Removing and installing coil spring 306
14.3	Removing and installing shock absorber 309
14.4	Repairing shock absorber 311



15	Assembly overview: anti-roll bar (four-wheel drive)	314
15.1	Removing and installing anti-roll bar	314
16	Assembly overview: drive shaft	318
16.1	Loosening and tightening twelve-point bolt for drive shaft connection	320
16.2	Removing and installing drive shaft	321
16.3	Dismantling and assembling drive shaft	324
16.4	Checking inner constant velocity joint	329
43	Self-levelling suspension	332
1	Evaluating accident vehicles	332
2	Components of adaptive chassis control DCC and fitting locations	333
2.1	Shock absorber damping adjustment button E387	335
2.2	Removing and installing front left and right body acceleration senders G341/G342	335
2.3	Renewing bracket for front left/right body acceleration sender G341/G342	337
2.4	Assembly overview: front left/right vehicle level sender G78/G289 for adaptive chassis control DCC	340
2.5	Removing and installing front left/right vehicle level sender G78/G289	341
2.6	Assembly overview: rear left vehicle level sender G76 for adaptive chassis control DCC	342
2.7	Removing and installing rear left vehicle level sender G76 for adaptive chassis control DCC, front-wheel drive	343
2.8	Assembly overview: rear left vehicle level sender G76 for adaptive chassis control DCC, four-wheel drive	344
2.9	Removing and installing rear left vehicle level sender G76 for adaptive chassis control DCC, four-wheel drive	345
2.10	Removing and installing electronically controlled damping control unit J250	346
2.11	Removing and installing retainer for electronically controlled damping control unit J250	348
2.12	Basic setting of adaptive chassis control DCC	348
2.13	Cable routing left front axle	348
2.14	Cable routing right front axle	349
2.15	Cable routing rear axle	350
3	Assembly overview: suspension strut for adaptive chassis control DCC	352
3.1	Removing and installing suspension strut for adaptive chassis control DCC	355
4	Assembly overview: shock absorber for adaptive chassis control DCC	365
4.1	Removing and installing rear body acceleration sender G343	366
4.2	Removing and installing shock absorber for adaptive chassis control DCC	367
4.3	Repairing shock absorber for adaptive chassis control DCC	370
5	Assembly overview: shock absorber for adaptive chassis control DCC (four-wheel drive)	373
5.1	Removing and installing rear body acceleration sender G343 (four-wheel drive)	374
5.2	Removing and installing shock absorber for adaptive chassis control DCC (four-wheel drive)	375
5.3	Repairing shock absorber for adaptive chassis control DCC (four-wheel drive)	378
44	Wheels, tyres, vehicle geometry	381
1	Evaluating accident vehicles	381
2	Specified torque for fitting wheels	382
3	Fitting wheel and tyre	383
3.1	General information	383
3.2	Fittings instructions	383
4	Self-sealing tyres "ContiSeal"	385
4.1	Explanation for mobility tyres	385
4.2	Handling mobility tyres	386
5	Tyre pressure monitor display	388
5.1	System fault in the ABS system	388
5.2	Performing basic setting	389
6	Vehicle alignment check	390



6.1	General information	390
6.2	Prerequisites for wheel alignment	392
6.3	Test preparations	392
6.4	Wheel alignment specifications	393
6.5	Overview - wheel alignment procedure	395
6.6	Correcting front axle camber	396
6.7	Adjusting camber on rear axle	398
6.8	Adjusting toe at rear axle	399
6.9	Adjusting front axle toe	400
6.10	Basic setting of steering angle sensor G85	401
6.11	Vehicle data sticker	402
7	Wheels, tyres	403
7.1	Models with breakdown set	403
7.2	Tyre sealant	403
7.3	Removing a tyre	403
7.4	Fitting a new tyre	404
7.5	Tyre sealant disposal	405
8	Instructions for changing or fitting wheels	406
8.1	Fitting wheels	407
9	Protecting wheel centring seat against corrosion	409
10	Vibration due to wheels/tyres - causes and rectification	410
10.1	Causes of rough running	410
10.2	Balancing wheels	410
10.3	Conducting a road test before balancing wheels	411
10.4	Balancing wheels on stationary wheel balancing machine	411
10.5	Vibration control system VAS 6230 A	413
10.6	Finish balancer	414
10.7	Radial and lateral runout of wheels and tyres	415
10.8	Checking radial and lateral runout on wheels and tyres with tyre gauge V.A.G 1435	415
10.9	Checking radial and lateral run-out on wheel rim	416
10.10	Matching	417
10.11	Flat spots caused by storage or handling	418
11	Adaptive cruise control	420
11.1	Calibrating adaptive cruise control	420
12	Front camera for driver assist systems R242	427
12.1	Adjusting front camera for driver assistance system R242	427
48 - Steering		436
1	Evaluating accident vehicles	436
2	General repair instructions	437
2.1	Steering rack	437
2.2	Gaskets and seals	437
2.3	Nuts and bolts	437
2.4	Electrical components	438
2.5	Guided fault-finding, vehicle self-diagnosis and test instruments	438
3	Assembly overview - airbag and steering wheel	439
3.1	Removing and installing airbag and steering wheel	439
4	Assembly overview: steering column, left-hand drive	442
4.1	Removing and installing steering column, left-hand drive vehicle	442
4.2	Handling and transporting steering column	452
4.3	Checking steering column for damage	454
5	Assembly overview: steering column, right-hand drive	455
5.1	Removing and installing steering column, right-hand drive vehicle	455
5.2	Handling and transporting steering column	465



5.3	Checking steering column for damage	466
6	Electromechanical steering rack, LHD vehicle	467
6.1	Assembly overview - electromechanical steering rack for LHD vehicle	467
6.2	Removing and installing steering rack, left-hand drive	469
7	Electromechanical steering rack, RHD vehicle	478
7.1	Assembly overview - electromechanical steering rack for RHD vehicle	478
7.2	Removing and installing steering rack, right-hand drive vehicle	480
8	Repairing electromechanical steering rack, LHD vehicle	489
8.1	Assembly overview: electromechanical steering rack, LHD vehicle	489
8.2	Renewing bonded rubber bushes for power-assisted steering rack	491
8.3	Removing and installing track rod	493
8.4	Removing and installing track rod ball joint	498
8.5	Removing and installing bellows	499
8.6	Checking play, security and boots of track rod ends	502
8.7	Allocation of track rod ball joints	503
9	Repairing electromechanical steering rack, RHD vehicle	504
9.1	Assembly overview: electromechanical steering rack, RHD vehicle	504
9.2	Removing and installing track rod	504
9.3	Removing and installing track rod ball joint	509
9.4	Removing and installing bellows	510
9.5	Checking play, security and boots of track rod ends	514
9.6	Allocation of track rod ball joints	514