



Contents

27 - Starter, current supply, CCS	1
1 Battery A	1
1.1 Fundamentals for batteries	1
1.2 Types of battery	1
1.3 Warning notices and safety regulations	1
1.4 Battery terminal connection	1
2 Checking battery	2
3 Charging battery	3
4 Disconnecting and connecting battery	4
4.1 Assembly overview	4
4.2 Disconnecting battery	5
4.3 Connecting battery	6
5 Removing and installing battery	8
5.1 Assembly overview	8
5.2 Removing and installing battery	9
5.3 Battery parameterisation	10
6 Starter, vehicles with manual gearbox	11
6.1 Checking starter B	11
6.2 Starter, vehicles with 1.4l, 110 KW TSI engine and manual gearbox MQ200-6F	11
6.3 Starter, vehicles with 2.0 l 103 KW TDI engine and manual gearbox MQ350-6F	14
7 Starter, vehicles with dual clutch gearbox (DSG)	19
7.1 Starter, vehicles with 2.0 l 103 kW TDI engine and dual clutch gearbox DQ250-6F	19
8 Alternator	23
8.1 Securing B+ (battery positive) wire to alternator	23
8.2 Checking poly V-belt	23
8.3 Checking alternator C	24
8.4 Alternator, 1.4 l, 110 KW TSI engine	24
8.5 Alternator, 2.0 l, 103 KW TDI engine	28
8.6 Removing and installing poly V-belt pulley on alternator	33
8.7 Voltage regulator for alternator	38
9 Cruise control system (CCS)	41
10 Start/stop system	42
10.1 General description	42
10.2 Start/stop operation switch E693	43
10.3 Voltage stabiliser J532	43
90 - Gauges, instruments	45
1 Dash panel insert	45
1.1 General description	45
1.2 Renewing dash panel insert	46
1.3 Removing and installing dash panel insert	46
1.4 Description of back of dash panel insert	47
1.5 Pin assignment of connectors on dash panel insert	47
2 Service interval display	48
2.1 Resetting service interval display	48
92 - Windscreen wash/wipe system	49
1 windscreen wiper system.	49
1.1 General description	49
1.2 Deactivating APP function of wiper motor	49
1.3 Assembly overview - windscreen wiper system	50



1.4	Removing and installing windscreen wiper system	51
1.5	Removing and installing wiper arms	55
1.6	Adjusting wiper blade park position	56
1.7	Removing and installing joint-free wipers	57
1.8	Removing and installing rain and light sensor	58
2	Windscreen washer system	62
2.1	Assembly overview - windscreen washer system	62
2.2	Removing and installing washer fluid reservoir	63
2.3	Removing and installing windscreen and rear window washer pump V59	67
2.4	Removing and installing windscreen washer fluid level sender G33	68
2.5	Removing and installing windscreen washer system spray jets	68
2.6	Adjusting windscreen washer system spray jets	69
3	Rear window wiper system	70
3.1	Assembly overview - rear window wiper system	70
3.2	Removing and installing wiper arm	71
3.3	Removing and installing rear window wiper motor V12	71
3.4	Adjusting rear window wiper park position	72
3.5	Removing and installing joint-free wiper	73
4	Rear window washer system	74
4.1	Assembly overview - rear window washer system	74
4.2	Renewing and setting spray jet	75
5	Headlight washer system	76
5.1	General description	76
5.2	Assembly overview - headlight washer system	76
5.3	Removing and installing headlight washer system pump V11	77
5.4	Removing and installing spray jet pop-up cylinders	78
5.5	Removing and installing spray jet retainer	79
5.6	Adjusting headlight washer system spray jets	80
5.7	Bleeding headlight washer system	80
6	Washer fluid line hose couplings	81
7	Hose repair	82
94	Lights, bulbs, switches - exterior	83
1	Operation and safety notes for gas discharge lamps	83
2	Headlights with gas discharge bulbs and cornering lights	86
2.1	General description	86
2.2	Assembly overview - headlights with gas discharge bulbs and cornering lights	87
2.3	Removing and installing headlight	88
2.4	Adjusting headlight installation position	88
2.5	Renewing gas discharge bulbs and cornering light bulbs in headlights	89
2.6	Headlight range control motor	92
2.7	Headlight holder	94
2.8	Dynamic cornering light control motor	95
2.9	Swivel module position sensor	95
2.10	Power output module for headlight	95
2.11	Gas discharge bulb control unit	96
2.12	Cornering light and headlight range control unit J745	97
2.13	Vehicle level sender	98
2.14	Repairing headlight retaining tabs	98
2.15	Converting headlights for use when driving on the left or right	98
2.16	Adjusting headlights	99
3	Headlight with halogen bulbs	100
3.1	General description	100
3.2	Assembly overview - headlights with halogen bulbs	100



3.3	Removing and installing headlights with halogen bulbs	102
3.4	Adjusting headlight installation position	103
3.5	Renewing headlight bulbs	105
3.6	Headlight range control motor	112
3.7	Repairing headlight retaining tabs	114
3.8	Converting headlights for use when driving on the left or right	116
3.9	Adjusting headlights	119
4	Fog lights	120
4.1	Assembly overview - fog lights	120
4.2	Removing and installing fog light	120
4.3	Removing and installing fog light / static cornering light bulb	122
4.4	Adjusting fog lights	122
5	Turn signal repeater and entry light in exterior mirror	123
5.1	General description	123
5.2	Turn signal repeater bulb	123
5.3	Entry light in exterior mirror	124
6	Tail light clusters	126
6.1	Assembly overview - tail light cluster in side panel	126
6.2	Removing and installing tail light cluster in side panel	127
6.3	Removing and installing tail light bulb cluster carrier in side panel	128
6.4	Renewing brake and tail light cluster and turn signal bulbs in tail light cluster in side panel	129
6.5	Assembly overview - tail light cluster in rear lid	129
6.6	Removing and installing tail light cluster in rear lid	130
6.7	Removing and installing tail light cluster bulb carrier in rear lid	131
6.8	Renewing brake and tail light bulbs in rear lid	132
7	Number plate light	133
7.1	Clipped number plate light X	133
8	High-level brake lights	135
8.1	High-level brake light bulb M25	135
9	Steering column switch	137
9.1	General description	137
9.2	Assembly overview - steering column switch	137
9.3	Removal and installation sequence of components of steering column switch	139
9.4	Steering column electronics control unit J527	139
9.5	Steering column combination switch E595	142
9.6	Steering column switch carrier	144
10	Steering column switch, vehicles with KESSY	149
10.1	General description	149
10.2	Assembly overview - steering column switch	149
10.3	Removal and installation sequence of components of steering column switch	151
10.4	Steering column electronics control unit J527	151
10.5	Steering column combination switch E595	154
10.6	Steering column switch carrier	156
10.7	Control unit for electronic steering column lock J764	160
11	Ignition/starter switch and lock cylinder.	162
11.1	Removing and installing steering lock housing	162
11.2	Removing and installing lock cylinder	162
11.3	Removing and installing ignition/starter switch	164
11.4	Removing and installing ignition/starter switch, vehicles with KESSY	165
11.5	Removing and installing ignition key withdrawal lock solenoid N376	166
12	Entry and start authorisation (KESSY)	167
12.1	General description	167
12.2	Assembly overview - entry and start authorisation	168



12.3	Entry and start authorisation control unit J518	169
12.4	Entry and start authorisation aerials and sensors	171
12.5	Removing and installing rear lid power opening sender G750 / G760	174
12.6	Starter button E378	176
13	Parking aid (PDC)	178
13.1	General description	178
13.2	Assembly overview - parking aid	179
13.3	Park assist steering control unit J791	180
13.4	Front parking aid senders	180
13.5	Rear parking aid senders	183
13.6	Renewing parking aid senders	186
13.7	Parking aid loudspeaker	186
13.8	Parking aid button E266	188
14	Park assist steering (PAS)	189
14.1	General description	189
14.2	Assembly overview of park assist steering	190
14.3	Park assist steering control unit J791	191
14.4	Park assist steering senders	192
14.5	Renewing park assist steering senders	196
14.6	Park assist steering loudspeaker	197
14.7	Park assist steering button E581	197
15	Reversing camera system	198
15.1	General description	198
15.2	Assembly overview - reversing camera system	198
15.3	Removing and installing reversing camera	199
15.4	Reversing camera system control unit J772	200
15.5	Calibrating reversing camera system	200
15.6	Renewing video cable	205
16	Lane departure warning	208
16.1	Assembly overview - lane departure warning	208
16.2	General description	208
16.3	Removing and installing front camera for driver assist systems R242	209
16.4	Removing and installing windscreen heater for front sensors Z113	211
96	Lights, bulbs, switches - interior	212
1	Interior lights and switches	212
1.1	Interior monitoring deactivation switch E267 and deactivation button for vehicle inclination sender E360	212
2	Lights and switches in engine compartment	214
2.1	Removing and installing bonnet contact switch F266	214
3	Lights and switches in dash panel	215
3.1	Light switch E1	215
3.2	Headlight range control regulator E102 and switch and instrument illumination regulator E20	216
3.3	Glove compartment light W6	217
3.4	Hazard warning light switch E3	219
3.5	Left footwell light W9 and right footwell light W10	220
3.6	Key operated switch to deactivate front passenger side airbag E224	222
4	Lights and switches in front doors	224
4.1	Driver side window regulator switch module	224
4.2	Mirror adjustment switch on passenger side	225
4.3	Window regulator switch in front passenger door E107	227
4.4	Driver side interior locking button for central locking system E308	228
4.5	Central locking SAFELOCK function warning lamp K133	230
4.6	Door warning lamps	231



5	Lights and switches in rear doors	234
5.1	Rear right window regulator button in rear right door E705 and rear left window regulator button in rear left door E700	234
6	Lights and switches in luggage compartment	236
6.1	Luggage compartment light W3	236
6.2	Rear lid lock unit F256	238
6.3	Button to close rear lid in luggage compartment E406	238
7	Lights and switches in roof trim	240
7.1	Front interior light W1	240
7.2	Rear interior light W43	243
7.3	Left and right interior lights	244
7.4	Removing and installing front passenger side illuminated vanity mirror W14 and driver side illuminated vanity mirror W20	246
8	Lights and switches in centre console	249
8.1	Buttons in centre console storage compartment	249
8.2	Front passenger side airbag deactivated warning lamp K145	250
8.3	Electromechanical parking brake button and auto-hold button	250
8.4	AC/DC converter with socket, 12 V-230 V U13	252
9	Horn	254
9.1	Treble horn H2 and bass horn H7	254
10	Immobiliser	256
10.1	General description	256
10.2	Immobiliser control unit J362	257
10.3	Ignition key	257
10.4	New identity on renewing all components	257
10.5	Online system test	257
11	Anti-theft alarm (ATA)	258
11.1	General description	258
11.2	Assembly overview - anti-theft alarm (ATA)	258
11.3	Activating and deactivating anti-theft alarm	260
11.4	Interior monitoring deactivation switch E267 and deactivation button for vehicle inclination sender E360	260
11.5	Anti-theft alarm sensor G578	261
11.6	Vehicle inclination sender G384	262
11.7	Interior monitoring sensor G273	262
11.8	Central locking and anti-theft alarm system aerial R47	263
11.9	Alarm horn H12	263
11.10	Adaptations of anti-theft alarm	263
97 - Wiring		265
1	Vehicle diagnosis, testing and information systems	265
2	Fuse holder	266
2.1	Fuse holder in dash panel	266
2.2	Fuse holder in electronics box	267
3	Relay carriers	268
3.1	Relay carrier on left of dash panel	268
4	Electronics boxes	269
4.1	Electronics box on left side of engine compartment (engine compartment electronics box)	269
5	Select Control units	273
5.1	On-board supply control unit J519	273
5.2	Driver door control unit J386	276
5.3	Front passenger door control unit J387	276
5.4	Rear left door control unit J388	277
5.5	Rear right door control unit J389	278



5.6	Trailer detector control unit J345	278
6	Wiring harness and connector repairs	281