



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety measures when working with pyrotechnic components	2
1.3 Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	3
1.4 Additional safety regulations for side airbag	4
1.5 Additional safety instructions for curtain airbag	4
1.6 Safety regulations for crash sensors (pressure sensors) for front side airbags	5
1.7 Renewing pyrotechnic, electrical and mechanical components of the restraint system after an accident	5
1.8 Checking airbag securing parts after an accident	7
1.9 Accident without airbag triggering	7
1.10 Checking seat belts	7
1.11 Check belt webbing	8
1.12 Checking inertia reel (locking mechanism)	9
1.13 Visually checking belt buckle	10
1.14 Check operation of belt buckle	10
1.15 Checking belt relays, and buckle tongues	10
1.16 Checking securing parts and anchorage points after an accident	10
1.17 Checking seat belt restraint function for holding additional child seats (not for driver's seat belt) - country-specific	11
1.18 Checking child seat anchors after an accident	11
2 Repair instructions	12
2.1 Contact corrosion	12
2.2 Routing and attachment of lines	12
68 - Interior equipment	13
1 Interior mirror	13
1.1 Removing and installing interior mirror, basic version	13
1.2 Bonding on retaining plate for interior mirror without rain sensor	14
1.3 Removing and installing interior mirror with rain and light sensor G397	15
1.4 Removing and installing front camera for driver assist systems R242	16
1.5 Bonding retaining plate for interior mirror with rain and light sensor G397	16
2 Compartments, covers and trims	18
2.1 Tools	18
2.2 Removing and installing centre console	18
2.3 Removing and installing centre console extension	22
2.4 Removing and installing centre armrest	23
2.5 Removing and installing rear centre console trim	24
2.6 Removing and installing switch unit holder, centre console	25
2.7 Removing and installing cover for centre console	26
2.8 Removing and installing side panel trims for footwell	27
2.9 Removing and installing dash panel end trims	28
2.10 Removing and installing trim for heating and air-conditioning control system	29
2.11 Removing and installing trim strip with integrated warning light switch E3	29
2.12 Removing and installing trim strip on driver's side	30
2.13 Removing and installing light switch E1 trim	31
2.14 Removing and installing vent trim, dash panel	31
2.15 Removing and installing centre dash panel compartment	33
2.16 Removing and installing steering column trim	34
2.17 Removing and installing footwell cover	36
2.18 Removing and installing storage tray in middle of dash panel	37



2.19	Removing and installing glasses compartment in moulded headliner	38
2.20	Removing and installing glove compartment	39
2.21	Removing and installing sun visor	41
3	Grab handles	42
3.1	Tools	42
3.2	Removing and installing roof grab handles	42
3.3	Removing and installing roof grab handles for 2nd row of seats	43
3.4	Removing and installing A-pillar grab handles	44
3.5	Removing and installing A-pillar grab handle brackets	44
4	Sill panel strips	46
4.1	Tools	46
4.2	Removing and installing connecting piece between sill panel strip and luggage compartment trim	46
4.3	Removing and installing sill panel strips	47
4.4	Removing and installing mounting of front sill panel strip	47
4.5	Removing and installing mounting of rear sill panel strip	48
69	- Passenger protection	50
1	Seat belts	50
1.1	Removing and installing front seat belts	50
1.2	Removing and installing front belt height adjusters	52
1.3	Removing and installing front belt buckles	52
1.4	Removing and installing seat belts for outer seats, 2nd row	53
1.5	Removing and installing belt buckles for outer seats, 2nd row	55
1.6	Removing and installing seat belts for middle seat, 2nd row	55
1.7	Removing and installing belt buckles for middle seat, 2nd row	56
1.8	Removing and installing seat belts for 3rd row	57
1.9	Removing and installing belt buckles for 3rd row	58
2	Airbag	60
2.1	Tools	60
2.2	Renewing airbag units following an accident	60
2.3	Removing and installing airbag control unit J234	61
2.4	Removing and installing airbag unit on driver side, Sharan 2011►	63
2.5	Removing and installing airbag unit on driver side, Sharan 2016►	66
2.6	Removing and installing front passenger airbag unit	71
2.7	Removing and installing side airbags on driver and front passenger sides	73
2.8	Removing and installing side airbag for 2nd row of seats	78
2.9	Removing and installing knee airbag	81
2.10	Removing and installing curtain airbag	84
2.11	Removing and installing Seat occupied sensor, front passenger side G128	86
3	Crash sensors	90
3.1	Tools	90
3.2	Removing and installing crash sensor for front airbag G190	90
3.3	Removing and installing side airbag crash sensor, driver side G179	91
3.4	Side airbag crash sensor on front passenger side G180	92
3.5	Removing and installing rear side airbag crash sensor, driver side G256	93
3.6	Removing and installing rear side-airbag crash sensor, front passenger side G257	94
70	- Trim, insulation	95
1	Dash panel	95
1.1	Tools	95
1.2	Removing and installing dash panel	95
1.3	Removing and installing dash panel cross member	101
1.4	Removing and installing dash panel vents	105
2	Door trims	109



2.1	Tools	109
2.2	Removing and installing door trim at front	110
2.3	Removing and installing cover for mirror triangle	114
2.4	Removing and installing sliding door trim	114
2.5	Removing and installing sun blind of sliding door	118
2.6	Repairing sun blind of sliding door	118
3	Pillar trims	120
3.1	Tools	120
3.2	Removing and installing upper A-pillar trims	120
3.3	Removing and installing lower A-pillar trims	122
3.4	Detaching and attaching upper B-pillar trims	123
3.5	Removing and installing upper B-pillar trims	124
3.6	Removing and installing lower B-pillar trims	125
3.7	Releasing and securing C-pillar trims	125
3.8	Removing and installing C-pillar trims	126
3.9	Removing and installing D-pillar trims	127
4	Rear lid trim	129
4.1	Tools	129
4.2	Removing and installing rear lid trim	129
4.3	Removing and installing window frame trims	130
5	Luggage compartment trims	133
5.1	Tools	133
5.2	Removing and installing lock carrier cover	133
5.3	Removing and installing side panel trims for luggage compartment	134
5.4	Removing and installing luggage compartment floor (5-seater)	138
5.5	Removing and installing luggage compartment floor support (5-seater)	139
6	Roof trims	140
6.1	Required special tools, workshop equipment, testers, measuring instruments and auxiliary items	140
6.2	Removing and installing roof end strip	141
6.3	Removing and installing moulded headliner	142
6.4	Removing and installing insulation and roof reinforcements	144
72	Seat frames	147
1	Front seats, general	147
1.1	Tools	147
1.2	Removing and installing seat	148
1.3	Removing and installing trim on tunnel side	152
1.4	Removing and installing backrest adjustment wheel	153
1.5	Removing and installing drawer mounting	153
1.6	Removing and installing heated front seats control unit J774	155
1.7	Removing and installing lumbar adjustment lever	156
1.8	Removing and installing backrest folding table	156
1.9	Removing and installing head restraint	157
1.10	Removing head restraint guides	158
1.11	Removing and installing backrest	160
2	Front seats with manual height adjustment	163
2.1	Tools	163
2.2	Removing and installing trim on sill side	164
2.3	Removing and installing trim bracket on sill side	165
2.4	Removing and installing height adjustment lever	166
2.5	Removing and installing height adjustment element	167
2.6	Removing and installing lumbar support (2-way, manual)	167
3	Front passenger seat without height adjustment	169
3.1	Tools	169



3.2	Removing and installing trim on sill side	170
4	Front passenger seat with through-loading aperture	172
4.1	Removing and installing trim on sill side	172
4.2	Removing and installing trim bracket on sill side	174
4.3	Removing and installing height adjustment lever	175
4.4	Removing and installing height adjustment element	176
4.5	Removing and installing lumbar support (2-way, manual)	176
4.6	Removing and installing folding backrest release unit	177
5	Driver seat, electrically adjustable	179
5.1	Tools	179
5.2	Removing and installing trim on sill side	180
5.3	Removing and installing switches	180
5.4	Removing and installing trim bracket on sill side	181
5.5	Removing and installing seat longitudinal adjustment	182
5.6	Removing and installing backrest adjustment drive	186
5.7	Removing and installing inclination adjustment drive	188
5.8	Removing and installing height adjustment drive	191
5.9	Removing and installing lumbar support (4-way, electric)	192
6	Seats, 2nd row	194
6.1	Tools	194
6.2	Removing and installing seat	195
6.3	Removing and installing front trim	196
6.4	Removing and installing side trim	197
6.5	Removing and installing footwell trim	197
6.6	Removing and installing operating levers for backrest adjustment and seat longitudinal adjustment	198
6.7	Removing and installing	199
6.8	Removing and installing trim of backrest operating lever	199
6.9	Removing and installing backrest cover panel	200
6.10	Removing and installing Bowden cable for operating backrest	201
7	Seats, 3rd row	203
7.1	Tools	203
7.2	Removing and installing seat	203
7.3	Removing and installing backrest mechanism trim	205
7.4	Removing and installing side seat frame trim	206
7.5	Removing and installing seat frame stop buffer	207
7.6	Removing and installing backrest release loop	208
7.7	Removing and installing backrest	208
7.8	Removing and installing spring coupler	209
7.9	Removing and installing backrest cover panel	214
7.10	Removing and installing seat cushions	216
74	Seat - padding, covers	218
1	Front seat covers and padding	218
1.1	Tools	218
1.2	Removing and installing front seat cushion cover and padding	219
1.3	Removing and installing front seat backrest cover and padding	222
2	Seat covers and padding, 2nd row	227
2.1	Tools	227
2.2	Removing and installing seat cushion cover and padding	227
2.3	Removing and installing cover and padding for squab with integrated child seat	228
2.4	Removing and installing push button with trim for adjusting mechanism of child seat	234
2.5	Removing and installing spacer for seat frame with integrated child seat	235
2.6	Removing and installing backrest cover and padding	236
3	Seat covers and padding, 3rd row	239



3.1	Tools	239
3.2	Removing and installing seat cushion cover and padding	239
3.3	Removing and installing backrest cover and padding	240