



Contents

50 - Body - front	1
1 Lock carrier	1
1.1 Tools	1
1.2 Lock carrier - assembly overview	1
1.3 Repairing headlight mounting	3
1.4 Service position	4
1.5 Removing and installing lock carrier with attachments	6
1.6 Removing and installing support	7
2 Wings	10
2.1 Tools	10
2.2 Assembly overview - front wing	10
2.3 Removing and installing wing	11
2.4 Foam elements and end/sealing pieces for wing	14
3 Plenum chamber bulkhead	15
4 Plenum chamber cover	16
4.1 Assembly overview - plenum chamber cover	16
4.2 Removing plenum chamber cover	16
4.3 Installing plenum chamber cover	18
5 Noise insulation	21
5.1 Tools	21
5.2 Assembly overview - short noise insulation	21
5.3 Assembly overview - long noise insulation	22
6 Underbody cladding	23
6.1 Tools	23
6.2 Assembly overview - underbody cladding	23
6.3 Assembly overview - rear underbody cladding	24
7 Bulkhead	26
7.1 Tools	26
7.2 Materials	26
7.3 Assembly overview - bulkhead	27
8 Tunnel cross-piece	28
8.1 Tools	28
8.2 Assembly overview - tunnel cross-piece	28
55 - Bonnet, rear lid	29
1 Bonnet	29
1.1 Tools	29
1.2 Assembly overview - bonnet	29
1.3 Removing and installing bonnet	30
1.4 Removing and installing bonnet hinge	32
1.5 Removing gas strut	34
1.6 Releasing gas from gas strut	35
1.7 Removing and installing insulation	36
1.8 Assembly overview - bonnet lock and release components	38
1.9 Removing and installing lid lock on LHD vehicle	39
1.10 Removing and installing lid lock on RHD vehicle	44
1.11 Separating and joining Bowden cable	47
1.12 Removing and installing striker pin	49
1.13 Release lever	50
1.14 Adjusting bonnet	53
2 Rear lid	58
2.1 Tools	58



2.2	Assembly overview - rear lid	58
2.3	Removing and installing rear lid	59
2.4	Gas strut	62
2.5	Rear lid drive	65
2.6	Rear lid hinge	71
2.7	Removing and installing striker pin	74
2.8	Removing and installing stop buffer	75
2.9	Adjusting rear lid	77
2.10	Removing and installing bonnet lock	80
2.11	Removing and installing release button	82
2.12	Removing and installing rear lid seal	83
2.13	Number plate carrier	85
3	Tank flap unit	87
3.1	Tools	87
3.2	Assembly overview - tank flap unit and actuator	87
3.3	Removing and installing tank flap unit	88
3.4	Removing and installing actuator	92
57	- Front doors, door components, central locking	94
1	Rear door	94
1.1	Tools	94
1.2	Assembly overview - door hinges	95
1.3	Removing and installing door	97
1.4	Installing hinge after renewal of A-pillar	99
1.5	Door alignment	100
2	Door components	104
2.1	Tools	104
2.2	Assembly overview - front door	104
2.3	Removing and installing door cover	105
2.4	Removing and installing door retaining strap	107
2.5	Removing and installing striker pin	109
2.6	Assembly overview - door handle and door lock	109
2.7	Removing and installing lock cylinder cover cap	111
2.8	Removing and installing lock cylinder	112
2.9	Removing and installing cover cap (without lock cylinder)	115
2.10	Removing and installing door handle	117
2.11	Removing and installing door lock	119
2.12	Removing and installing mounting bracket	122
2.13	Removing and installing inner door seal	124
2.14	Removing and installing outer door seal	126
2.15	Assembly overview - insulation	129
3	Central locking	131
3.1	Fitting location overview - central locking components	131
3.2	Adapting keys with remote control	133
3.3	Assembly overview - battery for folding key with remote control	134
3.4	Removing and installing battery for folding key with remote control	134
58	- Rear doors, door components	138
1	Sliding door	138
1.1	Tools	138
1.2	Assembly overview - sliding door roller guides	138
1.3	Removing and installing sliding door	140
1.4	Removing and installing lower roller guide	142
1.5	Removing and installing arrester	143
1.6	Removing and installing hinge	145



1.7	Removing and installing upper roller guide	147
1.8	Removing and installing door arrester and end plate for lower guide rail	149
1.9	Removing and installing locking pegs and catch plates	152
1.10	Removing and installing striker pin	155
1.11	Adjusting sliding door	156
1.12	Assembly overview - sliding door locking and release components	163
1.13	Removing and installing covers	163
1.14	Removing and installing door lock	165
1.15	Interior operating mechanism	168
1.16	Removing and installing cap	170
1.17	Removing and installing door handle	173
1.18	Removing and installing mounting bracket	174
1.19	Removing and installing distributing mechanism	176
1.20	Upper guide rail	178
1.21	Centre guide rail	181
1.22	Removing and installing guide rail cover	185
1.23	Removing and installing retaining strip for cover	188
1.24	Removing and installing protective strip	191
1.25	Removing and installing inner door seals	193
1.26	Removing and installing door seal	195
1.27	Removing and installing sill panel seal	196
1.28	Assembly overview - insulation	199
2	Electrically operated sliding door	200
2.1	Tools	200
2.2	Assembly overview - sliding door roller guides	200
2.3	Removing and installing sliding door	201
2.4	Removing and installing lower roller guide	204
2.5	Removing and installing hinge	205
2.6	Removing and installing upper roller guide	207
2.7	Removing and installing door arrester	210
2.8	Removing and installing locking pegs and catch plates	212
2.9	Removing and installing striker pin	215
2.10	Adjusting sliding door	216
2.11	Assembly overview - sliding door locking and release components	225
2.12	Removing and installing cover	226
2.13	Removing and installing door lock	228
2.14	Removing and installing power latching system	231
2.15	Removing and installing interior door handle	233
2.16	Removing and installing cap	235
2.17	Removing and installing door handle	237
2.18	Removing and installing mounting bracket	239
2.19	Motor for electrically operated sliding door	241
2.20	Removing and installing sliding door control unit	243
2.21	Basic setting of the sliding door electronics	245
2.22	Customer service mode	245
2.23	Upper guide rail	246
2.24	Centre guide rail	249
2.25	Removing and installing guide rail cover	253
2.26	Removing and installing retaining strip for cover	256
2.27	Removing and installing protective strip	259
2.28	Removing and installing inner door seals	261
2.29	Removing and installing door seal with sensor strip	263
2.30	Removing and installing sill panel seal	266
2.31	Assembly overview - insulation	270
60 - Sunroof		271



1	Panorama sliding sunroof (Arvin-Meritor)	271
1.1	Tools	271
1.2	Functional check	271
1.3	Basic setting, panoramic sliding sunroof	272
1.4	Assembly overview - panoramic sliding roof	272
1.5	Removing and installing front glass panel	274
1.6	Removing and installing rear glass panel	277
1.7	Adjusting height of front and rear glass panel	280
1.8	Renewing seals for rear glass panel	282
1.9	Removing and installing the exterior seal	286
1.10	Removing and installing interior seal	290
1.11	Removing and installing wind deflector	292
1.12	Removing and installing preselector for glass panel and sunroof sun blind	294
1.13	Removing and installing sliding sunroof motor	295
1.14	Removing and installing sun blind motor	298
1.15	Removing and installing sun blind	301
1.16	Assembly overview - assembly frame	311
1.17	Removing and installing sun blind Bowden cable	312
1.18	Removing and installing assembly frame	317
1.19	Removing and installing rear part	319
1.20	Removing and installing front motor plate	323
1.21	Removing and installing tilting mechanism and front glass panel cable	327
1.22	Maintenance and care	331
1.23	Manual operation	332
1.24	Cleaning water drain hoses	333
63	- Bumpers	336
1	Front bumper cover	336
1.1	Tools	336
1.2	Repairing front bumper cover	336
1.3	Installing brackets for parking aid system	337
1.4	Front bumper cover	342
1.5	Front bumper cover add-on parts	345
1.6	Front bumper cover substructure parts	347
1.7	Front bumper carrier	347
1.8	Number plate carrier	348
2	Rear bumper cover	352
2.1	Tools	352
2.2	Repairing rear bumper cover	352
2.3	Installing brackets for parking aid system	353
2.4	Rear bumper cover	358
2.5	Rear bumper cover attachments	361
2.6	Rear bumper cover substructure parts	361
2.7	Rear bumper carrier	363
3	Towing bracket	364
3.1	Assembly overview - towing bracket	364
64	- Glazing	367
1	Flush bonded windows	367
1.1	Tools	367
1.2	Materials	368
1.3	Assembly overview - windscreen	369
1.4	Remove windscreen	369
1.5	Install windscreen	372
1.6	Assembly overview - rear window	373



1.7	Removing undamaged rear window	373
1.8	Removing broken rear window	376
1.9	Installing rear window	376
1.10	Assembly overview - rear side window	376
1.11	Removing undamaged rear side window	377
1.12	Removing broken rear side window	379
1.13	Installing rear side window	379
1.14	Assembly overview - front side window	379
1.15	Removing undamaged front side window	380
1.16	Removing broken front side window	382
1.17	Installing front side window	382
1.18	Preparing old undamaged window for glazing	383
1.19	Preparing new window without precoating for glazing	383
1.20	Preparing body flange for glazing	384
1.21	Fitting instructions	386
1.22	Minimum curing period	387
1.23	Touching up paint damage	387
1.24	Removing soiling caused by adhesive sealant	387
2	Front door window	388
2.1	Tools	388
2.2	Assembly overview - front door window	388
2.3	Removing and installing door window	389
2.4	Removing and installing window regulator motor	393
2.5	Removing and installing window regulator	395
2.6	Removing and installing window channel	398
2.7	Inner and outer window slot seals	400
3	Rear door window	402
3.1	Tools	402
3.2	Assembly overview - rear door window	402
3.3	Removing and installing door window	403
3.4	Removing and installing window regulator motor	406
3.5	Removing and installing window regulator	408
3.6	Removing and installing window channel	411
3.7	Inner and outer window slot seals	413
66	Exterior equipment	415
1	Wheel housing liner	415
1.1	Tools	415
1.2	Front wheel housing liner	415
1.3	Rear wheel housing liner	419
1.4	Side member cover	423
2	Exterior mirror	425
2.1	Tools	425
2.2	Assembly overview - exterior mirror	425
2.3	Removing and installing mirror glass	426
2.4	Removing and installing adjustment unit with motor	428
2.5	Removing and installing frame	429
2.6	Removing and installing mirror housing and assembly component	430
2.7	Removing and installing exterior mirror	431
3	Radiator grille	434
3.1	Tools	434
3.2	Assembly overview - radiator grille	434
3.3	Removing and installing radiator grille	435
3.4	Removing and installing emblem, vehicles ►06.15	437
3.5	Removing and installing emblem, vehicles 07.15 ►	438



4	Roof railing	441
4.1	Tools	441
4.2	Assembly overview - roof railing	441
4.3	Removing and installing roof railing	442
4.4	Removing and installing roof railing retaining bracket	444
5	Mouldings and trims	449
5.1	Water deflector	449
5.2	Front and rear door covers	452
5.3	Front and rear door trim panel	457
5.4	Front and rear window channel trim strip	461
5.5	Front and rear window trim strip	464
6	Noise insulation	467
7	Lettering and badges	468
7.1	Tools	468
7.2	Fitting instructions	468
7.3	Removing and installing emblem on rear lid	469
7.4	Rear lettering - dimensions	470
7.5	»STYLE« emblem on B-pillar	470
8	Scuff protection film	472
8.1	Scuff protection film at front and rear	472