



Contents

82 - Supplementary heating	1
1 Auxiliary heater Thermo Top V	1
1.1 Safety measures for working on vehicles with auxiliary heaters	1
1.2 Note on auxiliary heater operation in vehicles with diesel engine	1
1.3 Notes for vehicles with a start-stop system	1
1.4 Safety measures for vehicles with a start-stop system	2
2 Notes on general repairs on vehicles with auxiliary heaters	3
2.1 Starting conditions for auxiliary heating (preheater)	3
2.2 Starting conditions for auxiliary heating	3
3 Rules for cleanliness when working on the auxiliary heater and the fuel system	5
4 Repairing auxiliary heater Thermo Top V	6
4.1 Repairing auxiliary heater Thermo Top V	6
5 Removing and installing auxiliary heater Thermo Top V	12
5.1 Components of auxiliary heater Thermo Top V	12
5.2 Removing ancillaries of auxiliary heater Thermo Top V	15
6 Dismantling and assembling auxiliary heater Thermo Top V	18
6.1 Dismantling and assembling auxiliary heater Thermo Top V	18
6.2 Inner components of auxiliary heater	18
6.3 Removing and installing glow plug with flame monitoring Q8	20
6.4 Removing and installing temperature sensor G18 and overheating sensor G189	21
6.5 Removing and installing heater coolant shut-off valve N279	21
7 Connecting auxiliary heater Thermo Top V to coolant circuit	24
7.1 Connection diagram for coolant hoses in vehicles with auxiliary heating, engine code CAVA	24
7.2 Connection diagram for coolant hoses in vehicles with auxiliary heating, engine code CCZA	25
7.3 Connection diagram for coolant hoses in vehicles with auxiliary heating, engine codes CFFA, CFFB, CFGB	27
7.4 Coolant hose routing on vehicles with 2nd heat exchanger	28
8 Fuel supply for auxiliary heater Thermo Top V	30
8.1 Fuel supply for auxiliary heater Thermo Top V	30
8.2 Removing and installing metering pump V54	31
8.3 Testing quantity of fuel delivered	32
9 Regulation of auxiliary heater Thermo Top V	35
9.1 Functional description of auxiliary heater Thermo Top V	35
9.2 Preheating mode	36
9.3 Auxiliary heating mode	36
9.4 Switching off	36
10 Connector pin assignment of auxiliary heater Thermo Top V	37
10.1 Connector pin assignment of auxiliary heater Thermo Top V	37
11 Functional description of remote control for auxiliary heater Thermo Top V	38
11.1 Switching auxiliary heater on using remote control	38
11.2 Switching auxiliary heater off using remote control	38
11.3 Renewing remote control battery	39
11.4 Warning lamp in remote control	39