



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety measures when working on vehicles with a start/stop system	2
2 Identification	3
2.1 Engine number/engine data	3
3 General information	4
3.1 Rules for cleanliness when working on auxiliary/supplementary heater and fuel system	4
4 Repair instructions	5
4.1 Routing and attachment of lines	5
4.2 General repair instructions	5
20 - Fuel supply system	6
1 Fuel	6
1.1 Assembly overview - fuel tank	6
1.2 Emptying fuel tank	7
1.3 Removing and installing fuel tank	12
2 Fuel delivery unit, fuel gauge sender	16
2.1 Assembly overview - fuel delivery unit/fuel gauge sender	16
2.2 Removing and installing fuel delivery unit, fuel gauge sender	19
3 Plug-in connectors	23
3.1 Separating plug-in connectors	23
4 Fuel filter	27
4.1 Assembly overview - fuel filter	27
4.2 Removing and installing fuel filter	27
5 Activated charcoal filter system	29
5.1 Assembly overview - activated charcoal filter system	29
5.2 Removing and installing activated charcoal filter	29
5.3 Checking fuel tank breather	30
6 Accelerator pedal	32
6.1 Assembly overview - accelerator module	32
6.2 Removing and installing accelerator pedal module GX2	32
7 Fuel pump	35
7.1 Checking fuel system pressurisation pump G6	35
7.2 Removing and installing suction-jet pump	40
8 Senders and sensors	42
8.1 Removing and installing fuel gauge sender G	42