



## Contents

<b>00</b>	<b>Technical data</b> .....	<b>1</b>
1	<b>Safety information</b> .....	1
1.1	Safety regulations for working on fuel supply .....	1
1.2	Safety precautions when using testers and measuring instruments during a road test .....	2
1.3	Safety measures when working on vehicles with a start/stop system .....	2
2	<b>Identification</b> .....	3
2.1	Engine number/engine data .....	3
3	<b>General information</b> .....	4
3.1	Rules for cleanliness when working on auxiliary/supplementary heater and fuel system ..	4
4	<b>Repair instructions</b> .....	5
4.1	Routing and attachment of lines .....	5
4.2	General repair instructions .....	5
<b>20</b>	<b>Fuel supply system</b> .....	<b>6</b>
1	<b>Procedure in event of misfuelling</b> .....	6
1.1	Step 1, engine was started with incorrect fuel .....	6
1.2	Step 2, engine was not started with incorrect fuel .....	7
1.3	Step 3, there are metal particles in fuel delivery unit and fuel tank .....	8
1.4	Step 4, there are no metal particles in fuel delivery unit or fuel tank .....	8
1.5	Step 5, there are metal particles in high-pressure pump .....	9
1.6	Step 6, there are no metal particles in high-pressure pump .....	9
2	<b>Fuel</b> .....	11
2.1	Assembly overview - fuel tank .....	11
2.2	Emptying fuel tank .....	12
2.3	Removing and installing fuel tank .....	16
3	<b>Fuel delivery unit, fuel gauge sender</b> .....	20
3.1	Assembly overview - fuel delivery unit/fuel gauge sender .....	20
3.2	Removing and installing fuel delivery unit, fuel gauge sender .....	22
4	<b>Plug-in connectors</b> .....	26
4.1	Separating plug-in connectors .....	26
5	<b>Fuel filter</b> .....	30
5.1	Assembly overview - fuel filter .....	30
5.2	Removing and installing fuel filter .....	31
5.3	Fuel hoses in the engine compartment .....	35
6	<b>Accelerator pedal</b> .....	36
6.1	Assembly overview - accelerator module .....	36
6.2	Removing and installing accelerator pedal module GX2 .....	36
7	<b>Fuel pump</b> .....	39
7.1	Checking fuel system pressurisation pump G6 .....	39
8	<b>Senders and sensors</b> .....	46
8.1	Removing and installing fuel gauge sender G .....	46