

001 - Basic equipment	1-22
1. Basic equipment	1
2. Onboard supply control unit, Terminal 75 voltage supply relay 1, Terminal 15 voltage supply relay	2
3. Bonnet contact switch, Dual tone horn relay, Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump	3
4. Onboard supply control unit, Left fog light bulb, Left cornering light bulb, Front left headlight	4
5. Onboard supply control unit, Right fog light bulb, Right cornering light bulb, Front right headlight	5
6. Switch and instrument illumination regulator, Onboard supply control unit	6
7. Light switch, Onboard supply control unit	7
8. Ignition/starter switch, Steering angle sender, Onboard supply control unit, Steering column electronics control unit, Ignition key withdrawal lock solenoid	8
9. Onboard supply control unit, Steering column electronics control unit	9
10. Horn plate, Onboard supply control unit, Steering column electronics control unit, Driver side airbag igniter	10
11. Onboard supply control unit, Front left footwell light, Front right footwell light, Glove compartment light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Rear left footwell light, Rear right footwell light	11
12. Onboard supply control unit, Main beam assist control unit, Front interior light, Left centre reading light, Right centre reading light, Rear centre reading light, Automatic anti-dazzle interior mirror	12
13. Humidity sender for air conditioning system, Rain and light sensor, Wiper motor control unit, Onboard supply control unit, Luggage compartment light on left, Right luggage compartment light	13
14. Hazard warning lights button, Blocking diode, Onboard supply control unit, Cigarette lighter, 12 V socket 2	14
15. Brake light switch, Reversing light switch, Heated rear window relay, Onboard supply control unit	15
16. Driver door control unit, Front passenger door control unit, Onboard supply control unit, Driver side turn signal repeater bulb, Front passenger side turn signal repeater bulb	16
17. Rear lid handle release button, Luggage compartment light switch, Rear lid lock unit, Onboard supply control unit, High-level brake light bulb, Rear lid release motor, Left number plate light, Right number plate light	17
18. Onboard supply control unit, Left tail light, Left tail light 2, Right tail light 2	18
19. Control unit with display for radio and navigation, Data bus diagnostic interface, Diagnostic connection	19
20. Immobiliser reader coil, Fuel delivery unit, Dash panel insert	20
21. Coolant shortage indicator sender, Windscreen washer fluid level sender, Front left brake pad wear sender, Oil level and oil temperature sender, Dash panel insert	21
22. Oil pressure switch, Brake fluid level warning contact, Ambient temperature sensor, Control unit for electromechanical parking brake, Dash panel insert	22
002 - Fuse assignment	23-50
1. Fuse assignment	23
2. Battery, Starter, Battery monitor control unit, Fuse holder A	24
3. Fuse holder A	25
4. Fuse holder B	26
5. Fuse holder B	27
6. Fuse holder B	28
7. Fuse holder B	29
8. Fuse holder B	30
9. Fuse holder B	31
10. Main relay, Terminal 50 voltage supply relay, Fuse holder B	32
11. Engine component current supply relay, Fuse holder B	33
12. Fuse holder B	34
13. Fuse holder C	35
14. Fuse holder C	36
15. Fuse holder C	37
16. Fuse holder C	38
17. Fuse holder C	39
18. Fuse holder C	40
19. Fuse holder C	41
20. Fuse holder C	42
21. Fuse holder C	43
22. Fuse holder C	44
23. Fuse holder C	45
24. Fuse holder C	46

25. Fuse holder C	47
26. Fuse holder C	48
27. Fuse holder C	49
28. Fuse holder D	50
003 - Convenience system	51-66
1. Convenience system	51
2. Exterior mirror adjuster, Driver door control unit, Driver door lock unit	52
3. Operating unit for window regulator in driver door, Driver door control unit	53
4. Driver side interior locking button for central locking system, Driver door control unit	54
5. Driver door control unit, Driver side exterior mirror	55
6. Driver door control unit	56
7. Front passenger door control unit, Data bus diagnostic interface	57
8. Front passenger door control unit, Front passenger door lock unit	58
9. Window regulator switch in front passenger door, Front passenger door control unit	59
10. Front passenger door control unit, Front passenger side exterior mirror	60
11. Rear left door exterior handle switch, Rear left door control unit, Rear left door lock unit	61
12. Rear left window regulator button in rear left door, Rear left door control unit	62
13. Rear right door exterior handle switch, Rear right door control unit, Rear right door lock unit	63
14. Rear right window regulator button in rear right door, Rear right door control unit	64
15. Tank flap release, Rear lid handle release button, Rear lid lock unit, Onboard supply control unit, Luggage compartment light on left, Right luggage compartment light	65
16. Bonnet contact switch, Onboard supply control unit	66
004 - Dual clutch gearbox (DSG)	67-70
1. Dual clutch gearbox (DSG)	67
2. Mechatronic unit for dual clutch gearbox	68
3. Selector lever, Mechatronic unit for dual clutch gearbox, Selector lever lock solenoid, Selector lever position display	69
4. Selector lever, Gearbox input speed sender, Clutch temperature sender, Control unit in dash panel insert, Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox, Diagnostic connection	70
005 - 1.4l petrol engine with start/stop system , CAVA	71-85
1. 1.4l petrol engine with start/stop system , CAVA	71
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Onboard supply control unit	72
3. Onboard supply control unit, Voltage stabiliser, Terminal 15 voltage supply relay 2, Starter relay 1, Starter relay 2	73
4. Operating unit in front of centre console, Start/Stop operation button, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine control unit	74
5. Accelerator pedal module, Accelerator position sender, Brake servo pressure sensor, Steering column electronics control unit, Engine control unit	75
6. Brake light switch, Clutch position sender, Engine control unit	76
7. Main relay, Engine control unit	77
8. Lambda probe 1 before catalytic converter, Lambda probe after catalytic converter, Engine control unit, Magnetic clutch for supercharger	78
9. Additional coolant pump relay, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve, Coolant circulation pump	79
10. Engine speed sender, Charge pressure sender, Intake air temperature sender 2, Engine control unit, Charge pressure control solenoid valve, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve	80
11. Engine control unit, Ignition coil 1 with output stage, Spark plug 1	81
12. Hall sender, Fuel pressure sender, Intake air temperature sender 3, Intake manifold pressure sender 3, Regulating flap potentiometer, Engine control unit, Regulating flap control unit, Regulating flap position control motor	82
13. Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Intake manifold pressure sender, Throttle valve module, Engine control unit	83
14. Fuel delivery unit, Control unit in dash panel insert, Data bus diagnostic interface, Fuel pump control unit, Vacuum pump for brakes	84
15. Oil pressure switch, Fuel delivery unit, Coolant shortage indicator sender, Oil level and oil temperature sender, Control unit in dash panel insert	85
006 - 2.0l diesel engine with start/stop system , CFFA,CFFB,CFGB	86-103
1. 2.0l diesel engine with start/stop system , CFFA,CFFB,CFGB	86
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Onboard supply control unit	87
3. Onboard supply control unit, Voltage stabiliser, Terminal 15 voltage supply relay 2, Starter relay 1, Starter relay 2	88
4. Terminal 30 voltage supply relay. Engine/motor control unit	89

5. Lambda probe 1 before catalytic converter, Exhaust gas pressure sensor 1, Gearbox neutral position sender, Engine/motor control unit	90
6. Operating unit in front of centre console, Start/stop operation button, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	91
7. Steering column electronics control unit, Engine/motor control unit, Charge pressure control solenoid valve, Fuel pressure regulating valve, Fuel metering valve, Exhaust gas recirculation cooler changeover valve, Coolant circulation pump 2	92
8. Brake light switch, Clutch position sender, Engine/motor control unit	93
9. Accelerator pedal module, Intake air temperature sender, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit	94
10. Air mass meter, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	95
11. Temperature sender for reducing agent, Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent tank (heater circuit 1)	96
12. Pressure sender for reducing agent metering system, Engine/motor control unit, Injector for reducing agent, Pump for reducing agent, Heater for reducing agent pump (heater circuit 2)	97
13. NOx sender 2, Reducing agent level sender, Evaluation unit for reducing agent level, Engine/motor control unit, Control unit for NOx sender 2, Reversing valve for reducing agent	98
14. Exhaust gas recirculation valve 1, Engine speed sender, Hall sender, Coolant temperature sender, Exhaust gas recirculation potentiometer, Position sender for charge pressure positioner, Engine/motor control unit, Exhaust gas recirculation control motor	99
15. Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Throttle valve module, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2	100
16. Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit, Dash panel insert, Injector, cylinder 3, Injector, cylinder 4	101
17. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	102
18. Oil pressure switch, Coolant shortage indicator sender, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert	103
007 - Radio system	104-108
1. Radio system	104
2. Voltage stabiliser, Control unit 1 for information electronics, Radio, CD changer	105
3. Control unit 1 for information electronics, Radio, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, CD changer, Connection for external audio sources	106
4. Control unit 1 for information electronics, Radio, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	107
5. Control unit 1 for information electronics, Radio, Aerial, GPS aerial, Radio aerial 2, Digital radio aerial	108
008 - Sound system DYNAUDIO	109-111
1. Sound system DYNAUDIO	109
2. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Digital sound package amplifier	110
3. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker, Digital sound package amplifier	111
009 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP)	112-116
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP)	112
2. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	113
3. Button for TCS and electronic stabilisation program, Operating unit in front of centre console, Tyre Pressure Loss Indicator button, Vacuum sender, ABS control unit, Control unit for electromechanical parking brake	114
4. Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface	115
5. Brake fluid level warning contact, Front left brake pad wear sender, Control unit in dash panel insert	116
010 - Airbag systems	117-124
1. Airbag systems	117
2. Side airbag crash sensor on driver side, Crash sensor for front airbag, Airbag control unit, Warning lamp for airbag deactivated on front passenger side	118
3. Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit	119
4. Belt switch for seat row 2, middle left, Belt switch for seat row 2, middle right, Belt switch for seat row 3, middle right, Belt switch for seat row 2, passenger side, Belt switch for seat row 3.	120

passenger side, Airbag control unit, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	
5. Key operated switch to deactivate airbag on front passenger side, Airbag control unit, Airbag igniter 1 on front passenger side, Side airbag igniter on driver side, Side airbag igniter on front passenger side	121
6. Driver side belt switch, Front passenger side belt switch, Belt switch for seat row 2, driver side, Seat occupied sensor, front passenger side, Airbag control unit, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	122
7. Belt switch for seat row 3, middle left, Belt switch for seat row 3, driver side, Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side knee airbag igniter	123
8. Airbag control unit, Control unit in dash panel insert, Steering column electronics control unit, Data bus diagnostic interface, Airbag igniter on driver side, Diagnostic connection	124
011 - Dynamic Chassis Control	125-128
1. Dynamic Chassis Control	125
2. Operating unit in front of centre console, Electronically controlled damping control unit	126
3. Front left vehicle level sender, Front left body acceleration sender, Front right body acceleration sender, Rear body acceleration sender, Electronically controlled damping control unit	127
4. Rear left vehicle level sender, Front right vehicle level sender, Electronically controlled damping control unit, Front left shock absorber damping adjustment valve, Front right shock absorber damping adjustment valve, Rear left shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve	128
012 - Power assisted steering , (LOL)	129-131
1. Power assisted steering , (LOL)	129
2. Steering moment sender, Power steering control unit, Electromechanical power steering motor	130
3. Steering angle sender	131
013 - Power assisted steering for RHD vehicles	132-134
1. Power assisted steering for RHD vehicles	132
2. Steering moment sender, Power steering control unit, Electromechanical power steering motor	133
3.	134
014 - Air conditioning system with manual regulation	135-139
1. Air conditioning system with manual regulation	135
2. Blower relay, Fuse holder C	136
3. High-pressure sender, Air conditioning system control unit, Air conditioner compressor regulating valve	137
4. Potentiometer for temperature flap control motor, Evaporator temperature sensor, Air conditioning system control unit, Air recirculation flap control motor, Air distribution flap control motor	138
5. Air conditioning system control unit, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	139
015 - Climatronic	140-146
1. Climatronic	140
2. Potentiometer for rear temperature flap motor, Potentiometer for rear air distribution flap control motor, Climatronic control unit, Rear temperature flap control motor, Rear air distribution flap control motor	141
3. High-pressure sender, Sunlight penetration photosensor, Left vent temperature sender, Right vent temperature sender, Rear vent temperature sender, Climatronic control unit	142
4. Air quality sensor, Rear blower regulation sender, Fresh air blower control unit, Climatronic control unit, Air conditioner compressor regulating valve, Fresh air blower, Rear fresh air blower	143
5. Potentiometer for left temperature flap control motor, Potentiometer for fresh air/air recirculation, air flow flap control motor, Climatronic control unit, 2nd heat exchanger switch-off valve, Left temperature flap control motor, Fresh air/air recirculation, air flow flap control motor	144
6. Potentiometer for defroster flap control motor, Potentiometer for right temperature flap control motor, Left footwell vent temperature sender, Potentiometer for front air distribution flap control motor, Climatronic control unit, Defroster flap control motor, Right temperature flap control motor, Front air distribution flap control motor	145
7. Operating and display unit for rear air conditioning system, Right footwell vent temperature sender, Evaporator temperature sensor, Climatronic control unit, Onboard supply control unit	146
016 - Auxiliary heater	147-151
1. Auxiliary heater	147
2. Fresh air blower relay, Auxiliary heater control unit, Auxiliary heater operation relay	148
3. Auxiliary heater control unit	149
4. Temperature sensor, Overheating sensor, Auxiliary heater control unit, Combustion air blower, Circulation pump	150
5. Auxiliary heater control unit, Fuel shut-off valve, Glow plug with flame monitor, Roof aerial, Remote control receiver for auxiliary coolant heater. Fuel pre-heating heater element	151

017 - Electromechanical parking brake	152-154
1. Electromechanical parking brake	152
2. Clutch position sender, ABS control unit, Control unit for electromechanical parking brake, Dash panel insert, Left parking brake motor, Right parking brake motor	153
3. Electromechanical parking brake button, Auto-hold button, Onboard supply control unit, Control unit for electromechanical parking brake, Electromechanical parking brake warning lamp, Auto-hold warning lamp	154
018 - Electric seat adjustment with no memory function	155-158
1. Electric seat adjustment with no memory function	155
2. Driver seat adjustment operating unit, Driver seat adjustment thermal fuse 1, Driver seat backrest adjustment motor, Driver seat pan	156
3. Driver seat lumbar support adjustment switch, Front passenger seat lumbar support adjustment switch, Driver seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor, Front passenger seat lumbar support height adjustment motor	157
4. Front passenger seat adjustment operating unit, Front passenger seat adjustment thermal fuse 1, Front passenger seat backrest adjustment motor, Front passenger seat pan	158
019 - Electric seat adjustment with memory function	159-163
1. Electric seat adjustment with memory function	159
2. Lumbar support height adjustment button, Lumbar support longitudinal adjustment button, Driver seat adjustment operating unit, Driver seat adjustment control unit, Driver seat adjustment thermal fuse 1	160
3. Driver operating unit for memory settings, Backrest adjustment sender for driver seat, Onboard supply control unit, Driver seat adjustment control unit, Driver seat backrest adjustment motor	161
4. Longitudinal adjustment sender for driver seat, Height adjustment sender for driver seat, Rake adjustment sender for driver seat, Driver seat adjustment control unit, Driver seat longitudinal adjustment motor, Driver seat height adjustment motor, Drive seat rake adjustment motor	162
5. Lumbar support height adjustment sender, Lumbar support longitudinal adjustment sender, Driver seat adjustment control unit, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	163
020 - Headlight washer system	164-166
1. Headlight washer system	164
2. Intermittent wiper switch, Rear wiper switch, Washer pump switch (automatic wash/wipe and headlight washer system), Headlight washer system relay, Onboard supply control unit, Steering column electronics control unit, Headlight washer system pump	165
3. Windscreen washer fluid level sender, Data bus diagnostic interface, Dash panel insert	166
021 - Parking aid (PDC) with park assist steering (Park Assist)	167-171
1. Parking aid (PDC) with park assist steering (Park Assist)	167
2. Operating unit in front of centre console, Park assist steering control unit, Parking aid loudspeaker, Rear loudspeaker for parking aid	168
3. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Front left sender for park assist steering on left side of vehicle, Front right sender for park assist steering on right side of vehicle, Park assist steering control unit	169
4. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Rear left park assist steering sender, Rear right park assist steering sender, Park assist steering control unit	170
5. Data bus diagnostic interface, Park assist steering control unit, Control unit 1 for information electronics	171
022 - Trailer coupling	172-175
1. Trailer coupling	172
2. Trailer detector control unit, Trailer voltage supply relay, Trailer socket	173
3. Electric hinged tow coupling attachment button, Trailer coupling motor Hall sender, Trailer detector control unit, Trailer towing coupling, Hinged tow attachment ball head motor	174
4. Trailer detector control unit, Data bus diagnostic interface	175
023 - Gas discharge headlights (bi-xenon) with automatic headlight range control, cornering light, LED daytime running lights	176-182
1. Gas discharge headlights (bi-xenon) with automatic headlight range control, cornering light, LED daytime running lights	176
2. Left gas discharge bulb control unit, Onboard supply control unit, Output module for left headlight, Control unit for left daytime running light and side light, Front left headlight	177
3. Right gas discharge bulb control unit, Onboard supply control unit, Output module for right headlight, Control unit for right daytime running light and side light, Front right headlight	178
4. Light switch, Switch and instrument illumination regulator, Onboard supply control unit	179
5. Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface. Control unit for cornering light and headlight range control	180

6. Rear left vehicle level sender, Front left vehicle level sender, Control unit for cornering light and headlight range control	181
7. Electronically controlled damping control unit, Control unit for cornering light and headlight range control	182
024 - Electric sliding door with power latching system	183-191
1. Electric sliding door with power latching system	183
2. Rear left window regulator button in rear left door, Rear left door interior handle switch, Buzzer and gong, Driver door control unit, Rear left door control unit	184
3. Rear left door exterior handle switch, Rear left door power latching system contact switch, Rear left door control unit, Rear left door lock unit, Rear left window regulator motor, Rear left power latching motor	185
4. Anti-trapping sender, Rear left door control unit, Left sliding door control unit, Rear left door lock unit, Sliding door opening motor, Sliding door coupling motor	186
5. Operating unit in front of centre console, Left sliding door button 2, Left sliding door control unit, Right sliding door control unit	187
6. Right sliding door button 2, Anti-trapping sender 2, Right sliding door control unit, Motor to open right sliding door, Sliding door coupling motor 2	188
7. Buzzer and gong, Rear right door control unit, Right sliding door control unit, Rear right door lock unit	189
8. Rear right window regulator button in rear right door, Rear right door exterior handle switch, Rear right door interior handle switch, Rear right door power latching system contact switch, Rear right door control unit, Rear right window regulator motor, Rear right power latching motor	190
9. Front passenger door control unit, Rear right door control unit	191
025 - DC/AC converter with socket	192-193
1. DC/AC converter with socket	192
2. DC/AC converter switch, Electric socket warning lamp, DC/AC converter with socket, 12 V - 230 V, DC/AC converter with socket, 12 V - 115 V	193
026 - Multifunction steering wheel	194-197
1. Multifunction steering wheel	194
2. Steering column electronics control unit	195
3. Airbag coil connector and return ring with slip ring, Horn plate, Airbag control unit, Multifunction steering wheel control unit, Steering column electronics control unit, Airbag igniter on driver side	196
4. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Tiptronic switch (shift up), Tiptronic switch (shift down), Airbag coil connector and return ring with slip ring, Multifunction steering wheel control unit, Steering column electronics control unit	197
027 - Seat heating	198-200
1. Seat heating	198
2. Driver seat temperature sensor, Heated front seats control unit, Heated seat cushion for driver seat, Heated backrest for driver seat	199
3. Heated driver seat regulator, Heated front passenger seat regulator, Button for left seat heating, Button for right seat heating, Front passenger seat temperature sensor, Climatronic control unit, Air conditioning system control unit, Onboard supply control unit, Heated front seats control unit, Heated seat cushion for front passenger seat, Heated backrest for front passenger seat	200
028 - "Keyless access" locking and starting system	201-205
1. "Keyless access" locking and starting system	201
2. Driver door exterior handle contact sensor, Front passenger door exterior handle contact sensor, Entry and start authorisation control unit, Driver side aerial for entry and start system, Passenger side aerial for entry and start system	202
3. Entry and start authorisation control unit, Rear bumper aerial for entry and start system, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system	203
4. Starter button, Onboard supply control unit, Control unit for electronic steering column lock	204
5. Immobiliser reader coil, Control unit in dash panel insert, Data bus diagnostic interface	205
029 - Mobile telephone systems	206-209
1. Mobile telephone systems	206
2. Telematics button module, Mobile telephone operating electronics control unit, Telephone bracket	207
3. Mobile telephone operating electronics control unit, Control unit 1 for information electronics	208
4. Mobile telephone operating electronics control unit, Control unit 1 for information electronics, Roof aerial, Telephone microphone, Telephone aerial	209
030 - Taxi equipment	210-215
1. Taxi equipment	210
2. Volume control for two-way radio, Special vehicle control unit, Two-way radio, Two-way radio loudspeaker, 2-way radio unit microphone	211
3. Taximeter, Mirror taximeter, Special vehicle control unit, Data transmission control unit, Two-way radio	212

4. Mirror taximeter, Special vehicle control unit, Data transmission control unit	213
5. Front interior light button, Taxi alarm active button, Hands-free system button, Taxi alarm remote control, control unit, Special vehicle control unit, Remote controlled taxi alarm aerial	214
6. Taxi sign switch, Taxi alarm off button, Hands-free system button, Passive Taxi alarm button, Data bus diagnostic interface, Special vehicle control unit, Taxi roof sign socket	215
031 - Electrically operated rear lid	216-219
1. Electrically operated rear lid	216
2. Rear lid handle release button, Button to close rear lid in luggage compartment, Rear lid lock unit, Rear lid control unit, Power latching motor for rear lid	217
3. Sensor in motor 1 for rear lid, Sensor in motor 2 for rear lid, Anti-trapping sender 3, Rear lid control unit, Motor 1 for rear lid, Motor 2 for rear lid	218
4. Rear lid release switch, Anti-trapping sender 4, Rear parking aid warning buzzer, Onboard supply control unit, Data bus diagnostic interface, Rear lid control unit	219
032 - Panoramic sliding sunroof	220-221
1. Panoramic sliding sunroof	220
2. Sun blind and sunroof button, Sliding sunroof adjustment control unit, Sunroof roller blind control unit	221
033 - Data bus network	222-238
1. Data bus network	222
2. Sliding sunroof adjustment control unit, Control unit in dash panel insert, Sunroof roller blind control unit, Data bus diagnostic interface	223
3. Headlight range control unit, Data bus diagnostic interface, Front camera for driver assist systems	224
4. Data bus diagnostic interface, Blind Spot Monitor control unit	225
5. Alternator with voltage regulator, Battery monitor control unit, Data bus diagnostic interface, Blind Spot Monitor control unit 2	226
6. Data bus diagnostic interface	227
7. Mobile telephone operating electronics control unit, Data bus diagnostic interface, Reversing camera system control unit, Control unit 1 for information electronics	228
8. Auxiliary heater control unit, Multimedia system control unit, Emergency call module control unit and communication unit, Digital sound package amplifier	229
9. Diagnostic connection	230
10. Air conditioning system control unit, Entry and start authorisation control unit, Onboard supply control unit, Left sliding door control unit, Rear lid control unit, Special vehicle control unit, Right sliding door control unit, Control unit for electronic steering column lock	231
11. Front passenger door control unit, Rear right door control unit, Special vehicle control unit, Coupling point in interior	232
12. Driver door control unit, Rear left door control unit, Driver seat adjustment control unit	233
13. Airbag coil connector and return ring with slip ring, Airbag control unit, Multifunction steering wheel control unit, Steering column electronics control unit	234
14. Selector lever, Electronically controlled damping control unit, All-wheel drive control unit, Power steering control unit, Park assist steering control unit, Automatic anti-dazzle interior mirror	235
15. ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	236
16. Left gas discharge bulb control unit, Right gas discharge bulb control unit, Mechatronic unit for dual clutch gearbox, Control unit for cornering light and headlight range control	237
17. Taximeter, Mirror taximeter, Data transmission control unit, Coupling point on dash panel, centre, Coupling point on left D-pillar	238
034 - Auxiliary air heater (PTC)	239-240
1. Auxiliary air heater (PTC)	239
2. Low heat output relay, High heat output relay, Auxiliary air heater element	240
035 - Anti-theft alarm system	241-242
1. Anti-theft alarm system	241
2. Interior monitoring deactivation switch, Interior monitoring sensor, Vehicle inclination sender, Anti-theft alarm sensor	242
036 - All-wheel drive	243-244
1. All-wheel drive	243
2. Oil pressure and oil temperature sender, All-wheel drive control unit, Coupling opening control valve, Haldex coupling pump	244
037 - Reversing camera (Rear Assist)	245-247
1. Reversing camera (Rear Assist)	245
2. Reversing camera system control unit, Control unit 1 for information electronics, Reversing camera	246
3. Onboard supply control unit 2, Reversing camera system control unit, Control unit 1 for information electronics	247
038 - Multimedia socket MEDIA-IN	248-249

1. Multimedia socket MEDIA-IN	248
2. Data bus diagnostic interface, Multimedia system control unit, Control unit 1 for information electronics, Connection for external audio sources, Connection 2 for external audio sources	249
039 - Heated windscreen	250-251
1. Heated windscreen	250
2. Heated windscreen relay, Heated windscreen	251
040 - Radiator fan	252-253
1. Radiator fan	252
2. Radiator fan control unit, Radiator fan, Radiator fan 2	253
041 - Electrically adjustable lumbar support	254-256
1. Electrically adjustable lumbar support	254
2. Driver seat backrest adjustment switch, Driver seat adjustment thermal fuse 1, Driver seat backrest adjustment motor, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	255
3. Front passenger seat backrest adjustment switch, Front passenger seat adjustment thermal fuse 1, Front passenger seat backrest adjustment motor, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor	256
042 - Airbag systems , (L0R)	257-263
1. Airbag systems , (L0R)	257
2. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Crash sensor for front airbag, Rear side airbag crash sensor on driver side, Airbag control unit, Warning lamp for airbag deactivated on front passenger side	258
3. Belt switch for seat row 2, middle left, Belt switch for seat row 2, middle right, Belt switch for seat row 3, middle right, Belt switch for seat row 2, passenger side, Belt switch for seat row 3, driver side, Airbag control unit, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	259
4. Key operated switch to deactivate airbag on front passenger side, Rear side airbag crash sensor on passenger side, Airbag control unit, Airbag igniter 1 on front passenger side, Side airbag igniter on driver side, Side airbag igniter on front passenger side	260
5. Driver side belt switch, Front passenger side belt switch, Belt switch for seat row 2, driver side, Seat occupied sensor, front passenger side, Airbag control unit, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	261
6. Belt switch for seat row 3, middle left, Belt switch for seat row 3, passenger side, Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side knee airbag igniter	262
7. Airbag coil connector and return ring with slip ring, Airbag control unit, Control unit in dash panel insert, Steering column electronics control unit, Data bus diagnostic interface, Airbag igniter on driver side, Diagnostic connection	263
043 - TV tuner, card reader unit (Japan)	264-267
1. TV tuner, card reader unit (Japan)	264
2. Control unit 1 for information electronics, TV tuner	265
3. Control unit 1 for information electronics, TV aerial 1, TV aerial 2, TV tuner, TV card reader	266
4. Traffic information control unit, Control unit 1 for information electronics, Aerial, Traffic data aerial	267
044 - 2.0l petrol engine , CCZA	268-281
1. 2.0l petrol engine , CCZA	268
2. Battery, Starter, Alternator with voltage regulator, Onboard supply control unit, Terminal 15 voltage supply relay 2, Terminal 50 voltage supply relay	269
3. Radiator outlet coolant temperature sender, Lambda probe after catalytic converter, Engine control unit, Engine component current supply relay, 4-pin connector	270
4. Air mass meter, Main relay, Engine control unit	271
5. Accelerator pedal module, Lambda probe 1 before catalytic converter, Engine control unit	272
6. Brake light switch, Additional coolant pump relay, Engine control unit, Coolant circulation pump	273
7. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	274
8. Engine control unit, Charge pressure control solenoid valve, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control	275
9. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	276
10. Engine speed sender, Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Engine control unit, Fuel pressure regulating valve	277
11. Charge pressure sender, Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine control unit	278
12. Oil pressure switch for reduced oil pressure. Throttle valve module. Data bus diaanostic	279

interface, Engine control unit, Dash panel insert	
13. Fuel delivery unit, Fuel pump control unit, Dash panel insert	280
14. Oil pressure switch, Coolant shortage indicator sender, Dash panel insert	281
045 - 2.0l diesel engine with start/stop system , CFFA,CFFB,CFFE,CFGB	282-299
1. 2.0l diesel engine with start/stop system , CFFA,CFFB,CFFE,CFGB	282
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Onboard supply control unit	283
3. Onboard supply control unit, Voltage stabiliser, Terminal 15 voltage supply relay 2, Starter relay 1, Starter relay 2	284
4. Terminal 30 voltage supply relay, Engine/motor control unit	285
5. Lambda probe 1 before catalytic converter, Exhaust gas temperature sender 1, Exhaust gas pressure sensor 1, Gearbox neutral position sender, Engine/motor control unit	286
6. Operating unit in front of centre console, Start/stop operation button, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Steering column electronics control unit, Engine/motor control unit	287
7. Engine/motor control unit, Charge pressure control solenoid valve, Fuel pressure regulating valve, Fuel metering valve, Exhaust gas recirculation cooler changeover valve, Coolant circulation pump 2	288
8. Brake light switch, Clutch position sender, Engine/motor control unit	289
9. Accelerator pedal module, Charge pressure sender, Intake air temperature sender, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit	290
10. Air mass meter, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	291
11. Temperature sender for reducing agent, Engine/motor control unit, Control unit for reducing agent heater	292
12. Pressure sender for reducing agent metering system, Engine/motor control unit, Injector for reducing agent, Pump for reducing agent, Heater for reducing agent pump (heater circuit 2), Heater for reducing agent line (heater circuit 2)	293
13. NOx sender 2, Reducing agent level sender, Evaluation unit for reducing agent level, Engine/motor control unit, Control unit for NOx sender 2	294
14. Exhaust gas recirculation valve 1, Engine speed sender, Hall sender, Coolant temperature sender, Exhaust gas recirculation potentiometer, Position sender for charge pressure positioner, Engine/motor control unit, Exhaust gas recirculation control motor	295
15. Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Throttle valve module, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2	296
16. Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit, Injector, cylinder 3, Injector, cylinder 4	297
17. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit	298
18. Oil pressure switch, Coolant shortage indicator sender, Oil level and oil temperature sender	299
046 - Front camera for driver assist systems	300-301
1. Front camera for driver assist systems	300
2. Front camera for driver assist systems, Windscreen heater for front sensors	301
047 - 1.4l petrol engine with start/stop system , CAVA,CNWB	302-316
1. 1.4l petrol engine with start/stop system , CAVA,CNWB	302
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Onboard supply control unit	303
3. Onboard supply control unit, Voltage stabiliser, Terminal 15 voltage supply relay 2, Starter relay 1, Starter relay 2	304
4. Operating unit in front of centre console, Start/Stop operation button, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine control unit	305
5. Accelerator pedal module, Accelerator position sender, Brake servo pressure sensor, Steering column electronics control unit, Engine control unit	306
6. Brake light switch, Clutch position sender, Engine control unit	307
7. Main relay, Engine control unit, Magnetic clutch for supercharger	308
8. Lambda probe 1 before catalytic converter, Lambda probe after catalytic converter, Engine control unit	309
9. Additional coolant pump relay, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve, Coolant circulation pump	310
10. Engine speed sender, Charge pressure sender, Intake air temperature sender 2, Engine control unit, Charge pressure control solenoid valve, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve	311
11. Engine control unit, Ignition coil 1 with output stage, Spark plug 1	312
12. Hall sender, Fuel pressure sender, Intake air temperature sender 3, Intake manifold pressure sender 3, Regulating flap potentiometer, Engine control unit, Regulating flap control unit, Regulating flap position control motor	313
13. Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Intake manifold pressure sender. Throttle valve module. Engine control unit	314

14. Fuel delivery unit, Control unit in dash panel insert, Data bus diagnostic interface, Fuel pump control unit, Vacuum pump for brakes	315
15. Oil pressure switch, Fuel delivery unit, Coolant shortage indicator sender, Oil level and oil temperature sender	316
048 - Headlight washer system	317-319
1. Headlight washer system	317
2. Intermittent wiper switch, Rear wiper switch, Washer pump switch (automatic wash/wipe and headlight washer system), Headlight washer system relay, Onboard supply control unit, Steering column electronics control unit, Fuse holder B, Fuse holder C, Headlight washer system pump	318
3. Windscreen washer fluid level sender, Data bus diagnostic interface, Dash panel insert	319
049 - Basic equipment	320-341
1. Basic equipment	320
2. Onboard supply control unit, Terminal 75 voltage supply relay 1, Terminal 15 voltage supply relay 2	321
3. Bonnet contact switch, Dual tone horn relay, Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump	322
4. Onboard supply control unit, Left fog light bulb, Front left headlight, Left static cornering light	323
5. Onboard supply control unit, Right fog light bulb, Front right headlight, Right static cornering light	324
6. Switch and instrument illumination regulator, Onboard supply control unit	325
7. Light switch, Onboard supply control unit	326
8. Ignition/starter switch, Onboard supply control unit, Steering column electronics control unit, Ignition key withdrawal lock solenoid	327
9. Onboard supply control unit, Steering column electronics control unit	328
10. Horn plate, Onboard supply control unit, Steering column electronics control unit, Driver side airbag igniter	329
11. Onboard supply control unit, Front left footwell light, Front right footwell light, Glove compartment light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Rear left footwell light, Rear right footwell light	330
12. Onboard supply control unit, Main beam assist control unit, Front interior light, Left centre reading light, Right centre reading light, Rear centre reading light, Automatic anti-dazzle interior mirror	331
13. Humidity sender for air conditioning system, Rain and light sensor, Wiper motor control unit, Onboard supply control unit	332
14. Blocking diode, Onboard supply control unit, Cigarette lighter, 12 V socket 2, Luggage compartment light on left, Right luggage compartment light	333
15. Hazard warning lights button, Brake light switch, Reversing light switch, Heated rear window relay, Onboard supply control unit	334
16. Driver door control unit, Front passenger door control unit, Onboard supply control unit, Driver side turn signal repeater bulb, Front passenger side turn signal repeater bulb	335
17. Rear lid handle release button, Luggage compartment light switch, Rear lid lock unit, Onboard supply control unit, High-level brake light bulb, Left number plate light, Right number plate light	336
18. Onboard supply control unit, Left tail light, Left tail light 2, Right tail light 2	337
19. Control unit with display for radio and navigation, Data bus diagnostic interface, Diagnostic connection	338
20. Immobiliser reader coil, Fuel delivery unit, Dash panel insert	339
21. Coolant shortage indicator sender, Windscreen washer fluid level sender, Front left brake pad wear sender, Oil level and oil temperature sender, Dash panel insert	340
22. Oil pressure switch, Brake fluid level warning contact, Ambient temperature sensor, Control unit for electromechanical parking brake, Dash panel insert	341
050 - 2.0l petrol engine , CCZA	342-356
1. 2.0l petrol engine , CCZA	342
2.	343
3. Battery, Starter, Alternator with voltage regulator, Onboard supply control unit, Terminal 50 voltage supply relay	344
4. Onboard supply control unit, Engine/motor control unit, Terminal 15 voltage supply relay 2, Engine component current supply relay, 4-pin connector	345
5. Accelerator pedal module, Air mass meter, Main relay, Engine/motor control unit	346
6. Lambda probe 1 before catalytic converter, Lambda probe after catalytic converter, Engine/motor control unit	347
7. Brake light switch, Additional coolant pump relay, Engine/motor control unit, Continued coolant circulation pump	348
8. Radiator outlet coolant temperature sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	349
9. Engine/motor control unit. Charge pressure control solenoid valve. Activated charcoal filter	350

solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control	
10. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	351
11. Engine speed sender, Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Engine/motor control unit, Fuel pressure regulating valve	352
12. Charge pressure sender, Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	353
13. Oil pressure switch for reduced oil pressure, Throttle valve module, Data bus diagnostic interface, Engine/motor control unit, Dash panel insert	354
14. Fuel delivery unit, Fuel pump control unit, Dash panel insert	355
15. Oil pressure switch, Coolant shortage indicator sender, Oil level and oil temperature sender, Dash panel insert	356
051 - Fuse assignment	357-384
1. Fuse assignment	357
2. Battery, Starter, Battery monitor control unit, Fuse holder A	358
3. Fuse holder A	359
4. Fuse holder B	360
5. Fuse holder B	361
6. Fuse holder B	362
7. Fuse holder B	363
8. Fuse holder B	364
9. Fuse holder B	365
10. Main relay, Terminal 30 voltage supply relay, Terminal 50 voltage supply relay, Fuse holder B	366
11. Engine component current supply relay, Fuse holder B	367
12. Fuse holder B	368
13. Fuse holder C	369
14. Fuse holder C	370
15. Fuse holder C	371
16. Fuse holder C	372
17. Fuse holder C	373
18. Fuse holder C	374
19. Fuse holder C	375
20. Fuse holder C	376
21. Fuse holder C	377
22. Fuse holder C	378
23. Fuse holder C	379
24. Fuse holder C	380
25. Fuse holder C	381
26. Fuse holder C	382
27. Fuse holder C	383
28. Fuse holder D	384
052 - Seat heating	385-388
1. Seat heating	385
2. Onboard supply control unit, Heated front seats control unit, Heated backrest for driver seat	386
3. Driver seat temperature sensor, Heated front seats control unit, Heated seat cushion for driver seat	387
4. Heated driver seat regulator, Heated front passenger seat regulator, Button for left seat heating, Button for right seat heating, Front passenger seat temperature sensor, Climatronic control unit, Air conditioning system control unit, Heated seat cushion for front passenger seat, Heated backrest for front passenger seat	388
053 - Trailer coupling	389-394
1. Trailer coupling	389
2. Trailer detector control unit, Fuse holder C, Fuse holder D	390
3. Trailer detector control unit, Trailer voltage supply relay, Trailer socket	391
4. Electric hinged tow coupling attachment button, Trailer coupling motor Hall sender, Trailer detector control unit, Trailer towing coupling, Hinged tow attachment ball head motor	392
5. Trailer detector control unit	393
6. Trailer detector control unit, Data bus diagnostic interface	394
054 - Panoramic sliding sunroof	395-396
1. Panoramic sliding sunroof	395
2. Sun blind and sunroof button, Sliding sunroof adjustment control unit, Sunroof roller blind control unit, Data bus diagnostic interface	396
055 - Electric sliding door with power latching system	397-406
1. Electric sliding door with power latching system	397
2. Rear left interior door handle switch. Buzzer and aona. Driver door control unit. Rear left door	398

control unit, Fuse holder C	
3. Rear left window regulator button in rear left door, Rear left exterior door handle switch, Rear left door power latching system contact switch, Rear left door control unit, Rear left power latching motor	399
4. Rear left door control unit, Rear left door lock unit, Rear left window regulator motor	400
5. Anti-trapping sender, Left sliding door control unit, Rear left door lock unit, Sliding door opening motor, Sliding door coupling motor	401
6. Left sliding door button 2, Left sliding door control unit	402
7. Operating unit in front of centre console, Right sliding door button 2, Anti-trapping sender 2, Right sliding door control unit	403
8. Buzzer and gong, Rear right door control unit, Right sliding door control unit, Rear right door lock unit, Motor to open right sliding door, Sliding door coupling motor 2	404
9. Rear right door power latching system contact switch, Rear right door control unit, Rear right door lock unit, Rear right window regulator motor, Rear right power latching motor	405
10. Rear right window regulator button in rear right door, Rear right exterior door handle switch, Rear right interior door handle switch, Front passenger door control unit, Rear right door control unit	406
056 - Electric seat adjustment with no memory function	407-410
1. Electric seat adjustment with no memory function	407
2. Driver seat adjustment operating unit, Driver seat adjustment thermal fuse 1, Driver seat backrest adjustment motor, Driver seat pan	408
3. Driver seat lumbar support adjustment switch, Front passenger seat lumbar support adjustment switch, Driver seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor, Front passenger seat lumbar support height adjustment motor	409
4. Front passenger seat adjustment operating unit, Front passenger seat adjustment thermal fuse 1, Front passenger seat backrest adjustment motor, Front passenger seat pan	410
057 - Electric seat adjustment with memory function	411-415
1. Electric seat adjustment with memory function	411
2. Lumbar support height adjustment button, Lumbar support longitudinal adjustment button, Driver seat adjustment operating unit, Driver seat adjustment control unit, Driver seat adjustment thermal fuse 1	412
3. Driver operating unit for memory settings, Backrest adjustment sender for driver seat, Onboard supply control unit, Driver seat adjustment control unit, Driver seat backrest adjustment motor	413
4. Longitudinal adjustment sender for driver seat, Height adjustment sender for driver seat, Rake adjustment sender for driver seat, Driver seat adjustment control unit, Driver seat longitudinal adjustment motor, Driver seat height adjustment motor, Drive seat rake adjustment motor	414
5. Lumbar support height adjustment sender, Lumbar support longitudinal adjustment sender, Driver seat adjustment control unit, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	415
058 - Electrically operated rear lid	416-421
1. Electrically operated rear lid	416
2. Rear lid lock unit, Rear lid control unit, Fuse holder D, Power latching motor for rear lid	417
3. Rear lid handle release button, Button to close rear lid in luggage compartment, Sensor in motor 1 for rear lid, Rear lid control unit, Motor 1 for rear lid	418
4. Sensor in motor 2 for rear lid, Anti-trapping sender 3, Anti-trapping sender 4, Rear lid warning buzzer, Rear lid control unit, Motor 2 for rear lid	419
5. Rear lid release switch, Onboard supply control unit, Data bus diagnostic interface, Rear lid control unit	420
6. Rear lid power opening sender, Rear lid power opening sender 2, Entry and start authorisation control unit, Rear lid power opening control unit	421
059 - Reversing camera (Rear Assist) , (KA1)	422-423
1. Reversing camera (Rear Assist) , (KA1)	422
2. Control unit 1 for information electronics, Reversing camera	423
060 - Fuse assignment	424-451
1. Fuse assignment	424
2. Battery, Starter, Battery monitor control unit, Fuse holder A	425
3. Fuse holder A	426
4. Fuse holder B	427
5. Fuse holder B	428
6. Fuse holder B	429
7. Fuse holder B	430
8. Fuse holder B	431
9. Fuse holder B	432
10. Main relay, Terminal 30 voltage supply relay, Fuse holder B	433
11. Engine component current supply relav. Fuse holder B	434

12. Fuse holder B	435
13. Fuse holder C	436
14. Fuse holder C	437
15. Fuse holder C	438
16. Fuse holder C	439
17. Fuse holder C	440
18. Fuse holder C	441
19. Fuse holder C	442
20. Fuse holder C	443
21. Fuse holder C	444
22. Fuse holder C	445
23. Fuse holder C	446
24. Fuse holder C	447
25. Fuse holder C	448
26. Fuse holder C	449
27. Fuse holder C	450
28. Fuse holder D	451
061 - Basic equipment	452-473
1. Basic equipment	452
2. Onboard supply control unit, Terminal 75 voltage supply relay 1, Terminal 15 voltage supply relay 2	453
3. Bonnet contact switch, Dual tone horn relay, Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump	454
4. Onboard supply control unit, Left fog light bulb, Front left headlight, Left static cornering light	455
5. Onboard supply control unit, Right fog light bulb, Front right headlight, Right static cornering light	456
6. Switch and instrument illumination regulator, Onboard supply control unit	457
7. Light switch, Onboard supply control unit	458
8. Ignition/starter switch, Onboard supply control unit, Steering column electronics control unit, Ignition key withdrawal lock solenoid	459
9. Onboard supply control unit, Steering column electronics control unit	460
10. Horn plate, Onboard supply control unit, Steering column electronics control unit, Airbag igniter on driver side	461
11. Onboard supply control unit, Front left footwell light, Front right footwell light, Glove compartment light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Rear left footwell light, Rear right footwell light	462
12. Onboard supply control unit, Main beam assist control unit, Front interior light, Left centre reading light, Right centre reading light, Rear centre reading light, Automatic anti-dazzle interior mirror	463
13. Humidity sender for air conditioning system, Rain and light sensor, Wiper motor control unit, Onboard supply control unit	464
14. Blocking diode, Onboard supply control unit, Cigarette lighter, 12 V socket 2, Left luggage compartment light, Right luggage compartment light	465
15. Hazard warning lights button, Brake light switch, Reversing light switch, Heated rear window relay, Onboard supply control unit	466
16. Rear lid handle release button, Luggage compartment light switch, Rear lid lock unit, Onboard supply control unit, High-level brake light bulb, Left number plate light, Right number plate light	467
17. Onboard supply control unit, Left tail light cluster, Left tail light cluster 2, Right tail light cluster 2	468
18. Driver door control unit, Front passenger door control unit, Driver side turn signal repeater bulb, Front passenger side turn signal repeater bulb	469
19. Data bus diagnostic interface, Control unit 1 for information electronics, Diagnostic connection	470
20. Immobiliser reader coil, Fuel delivery unit, Dash panel insert	471
21. Coolant shortage indicator sender, Windscreen washer fluid level sender, Front left brake pad wear sender, Oil level and oil temperature sender, Dash panel insert	472
22. Oil pressure switch, Brake fluid level warning contact, Ambient temperature sensor, Control unit for electromechanical parking brake, Dash panel insert	473
062 - Keyless access locking and starting system	474-478
1. Keyless access locking and starting system	474
2. Driver exterior door handle, Front passenger exterior door handle, Entry and start authorisation control unit, Driver side aerial for entry and start system, Passenger side aerial for entry and start system	475
3. Entry and start authorisation control unit, Rear bumper aerial for entry and start system, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system	476

4. Starter button, Onboard supply control unit, Control unit for electronic steering column lock	477
5. Immobiliser reader coil, Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface	478
063 - Auxiliary heater	479-483
1. Auxiliary heater	479
2. Fresh air blower relay, Auxiliary heater control unit, Auxiliary heater operation relay	480
3. Auxiliary heater control unit	481
4. Temperature sensor, Overheating sensor, Auxiliary heater control unit, Combustion air blower, Circulation pump	482
5. Auxiliary heater control unit, Fuel shut-off valve, Glow plug with flame monitor, Roof aerial, Remote control receiver for auxiliary coolant heater, Fuel pre-heating heater element	483
064 - Convenience system	484-499
1. Convenience system	484
2. Exterior mirror adjuster, Driver door control unit, Driver door lock unit	485
3. Operating unit for window regulator in driver door, Driver door control unit	486
4. Driver side interior locking button for central locking system, Driver door control unit	487
5. Driver door control unit, Driver side exterior mirror	488
6. Driver door control unit	489
7. Front passenger door control unit, Data bus diagnostic interface	490
8. Front passenger door control unit, Front passenger door lock unit	491
9. Window regulator switch in front passenger door, Front passenger door control unit	492
10. Front passenger door control unit, Passenger side exterior mirror	493
11. Rear left door control unit, Rear left door lock unit	494
12. Rear left window regulator button in rear left door, Rear left door control unit, Rear left power latching motor	495
13. Rear right exterior door handle switch, Rear right door control unit, Rear right door lock unit	496
14. Rear right window regulator button in rear right door, Rear right door control unit, Rear right power latching motor	497
15. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit, Left luggage compartment light, Rear left entry light, Rear right entry light	498
16. Tank flap release, Bonnet contact switch, Onboard supply control unit, Right luggage compartment light	499
065 - Front camera for driver assist systems	500-502
1. Front camera for driver assist systems	500
2. Front camera for driver assist systems, Windscreen heater for front sensors	501
3. Front camera for driver assist systems	502
066 - 1.4l petrol engine with start/stop system , CTHA	503-518
1. 1.4l petrol engine with start/stop system , CTHA	503
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Onboard supply control unit	504
3. Onboard supply control unit, Voltage stabiliser, Starter relay 1, Starter relay 2	505
4. Operating unit in front of centre console, Start/Stop operation button, Engine/motor control unit	506
5. Accelerator pedal module, Accelerator position sender, Brake servo pressure sensor, Engine/motor control unit	507
6. Brake light switch, Clutch position sender, Engine/motor control unit	508
7. Main relay, Engine/motor control unit, Magnetic clutch for supercharger	509
8. Lambda probe 1 before catalytic converter, Lambda probe after catalytic converter, Engine/motor control unit	510
9. Additional coolant pump relay, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve, Coolant circulation pump	511
10. Engine speed sender, Charge pressure sender, Intake air temperature sender 2, Engine/motor control unit, Charge pressure control solenoid valve, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve	512
11. Engine/motor control unit, Ignition coil 1 with output stage, Spark plug 1	513
12. Hall sender, Fuel pressure sender, Intake air temperature sender 3, Intake manifold pressure sender 3, Regulating flap potentiometer, Engine/motor control unit, Regulating flap control unit, Regulating flap position control motor	514
13. Intake air temperature sender, Knock sensor 1, Engine/motor control unit	515
14. Coolant temperature sender, Throttle valve module, Engine/motor control unit	516
15. Fuel delivery unit, Control unit in dash panel insert, Data bus diagnostic interface, Fuel pump control unit, Vacuum pump for brakes	517
16. Oil pressure switch, Fuel delivery unit, Coolant shortage indicator sender, Oil level and oil temperature sender, Control unit in dash panel insert	518
067 - Preparation for radio, Japan only	519-524
1. Preparation for radio. Japan only	519

2. Voltage stabiliser	520
3. Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	521
4. Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	522
5. Connection for external audio sources	523
6. Aerial, GPS aerial, TV aerial 2, Radio aerial 2	524
068 - 1.8l petrol engine , CDAA	525-538
1. 1.8l petrol engine , CDAA	525
2. Battery, Alternator with voltage regulator, Onboard supply control unit, Terminal 15 voltage supply relay 2, Terminal 50 voltage supply relay	526
3. Radiator outlet coolant temperature sender, Lambda probe after catalytic converter, Radiator fan control unit, Engine/motor control unit, Engine component current supply relay	527
4. Air mass meter, Main relay, Engine/motor control unit	528
5. Accelerator pedal module, Lambda probe 1 before catalytic converter, Engine/motor control unit	529
6. Brake light switch, Additional coolant pump relay, Engine/motor control unit, Fuse holder B, Continued coolant circulation pump	530
7. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	531
8. Engine/motor control unit, Charge pressure control solenoid valve, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control	532
9. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	533
10. Engine speed sender, Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Engine/motor control unit, Fuel pressure regulating valve	534
11. Charge pressure sender, Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	535
12. Oil pressure switch for reduced oil pressure, Throttle valve module, Data bus diagnostic interface, Engine/motor control unit, Dash panel insert	536
13. Fuel delivery unit, Fuel pump control unit, Dash panel insert	537
14. Oil pressure switch, Coolant shortage indicator sender, Dash panel insert	538
069 - Climatronic	539-546
1. Climatronic	539
2. Potentiometer for rear air distribution flap control motor, Climatronic control unit	540
3. High-pressure sender, Sunlight penetration photosensor, Left vent temperature sender, Right vent temperature sender, Rear vent temperature sender, Climatronic control unit	541
4. Air quality sensor, Fresh air blower control unit, Climatronic control unit, Air conditioner compressor regulating valve, Fresh air blower	542
5. Potentiometer for left temperature flap control motor, Potentiometer for fresh air/air recirculation, air flow flap control motor, Climatronic control unit, 2nd heat exchanger switch-off valve, Left temperature flap control motor, Fresh air/air recirculation, air flow flap control motor	543
6. Potentiometer for defroster flap control motor, Potentiometer for right temperature flap control motor, Potentiometer for front air distribution flap control motor, Climatronic control unit, Defroster flap control motor, Right temperature flap control motor, Front air distribution flap control motor	544
7. Operating and display unit for rear air conditioning system, Left footwell vent temperature sender, Right footwell vent temperature sender, Evaporator temperature sensor, Rear blower regulation sender, Climatronic control unit, Rear fresh air blower	545
8. Rear blower regulation sender, Climatronic control unit, Onboard supply control unit, Rear fresh air blower	546
070 - 2.0l diesel engine with start/stop system , CFFA,CFFB,CFFE,CFGC	547-564
1. 2.0l diesel engine with start/stop system , CFFA,CFFB,CFFE,CFGC	547
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Onboard supply control unit	548
3. Onboard supply control unit, Voltage stabiliser, Terminal 15 voltage supply relay 2, Starter relay 1, Starter relay 2	549
4. Terminal 30 voltage supply relay, Engine/motor control unit	550
5. Lambda probe 1 before catalytic converter, Exhaust gas temperature sender 1, Exhaust gas pressure sensor 1, Gearbox neutral position sender, Engine/motor control unit	551
6. Operating unit in front of centre console, Start/stop operation button, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Steering column electronics control unit, Engine/motor control unit	552
7. Engine/motor control unit, Charge pressure control solenoid valve, Fuel pressure regulating valve, Fuel metering valve, Exhaust gas recirculation cooler changeover valve, Coolant circulation pump 2	553
8. Brake light switch. Clutch position sender. Engine/motor control unit	554

9. Accelerator pedal module, Charge pressure sender, Intake air temperature sender, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit	555
10. Air mass meter, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	556
11. Temperature sender for reducing agent, Engine/motor control unit, Control unit for reducing agent heater	557
12. Pressure sender for reducing agent metering system, Engine/motor control unit, Injector for reducing agent, Pump for reducing agent, Heater for reducing agent line (heater circuit 2)	558
13. NOx sender 2, Reducing agent level sender, Evaluation unit for reducing agent level, Engine/motor control unit, Control unit for NOx sender 2	559
14. Exhaust gas recirculation valve 1, Engine speed sender, Hall sender, Coolant temperature sender, Exhaust gas recirculation potentiometer, Position sender for charge pressure positioner, Engine/motor control unit, Exhaust gas recirculation control motor	560
15. Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Throttle valve module, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2	561
16. Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit, Injector, cylinder 3, Injector, cylinder 4	562
17. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit	563
18. Oil pressure switch, Coolant shortage indicator sender, Oil level and oil temperature sender	564
071 - Mobile telephone systems with MEDIA-IN multimedia socket	565-568
1. Mobile telephone systems with MEDIA-IN multimedia socket	565
2. Mobile telephone operating electronics control unit, Control unit 1 for information electronics, Telephone microphone	566
3. Mobile telephone operating electronics control unit, Control unit 1 for information electronics, Connection for external audio sources	567
4. Light switch, Telematics button module, Mobile telephone operating electronics control unit, Onboard supply control unit, Telephone aerial, Telephone bracket	568
072 - All-wheel drive	569-570
1. All-wheel drive	569
2. Oil pressure and oil temperature sender, All-wheel drive control unit, Coupling opening control valve, All-wheel drive coupling pump	570
073 - Emergency call module	571-572
1. Emergency call module	571
2. Emergency assistance call button, Data bus diagnostic interface, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Roof aerial, Telephone microphone, GSM aerial	572
074 - Taxi equipment	573-583
1. Taxi equipment	573
2. Special vehicle control unit, Fuse holder C	574
3. Taximeter, Mirror taximeter, Special vehicle control unit	575
4. Mirror taximeter, Special vehicle control unit, Taxi roof sign socket	576
5. Interior light switch (taxi), Taxi alarm off button, Passive Taxi alarm button, Taxi alarm remote control, control unit, Special vehicle control unit, Remote controlled taxi alarm aerial	577
6. Taxi sign switch, Taxi alarm active button, Hands-free system button, Special vehicle control unit	578
7. 2-way radio loudspeaker volume control 1, Data bus diagnostic interface, Special vehicle control unit, 2-way radio unit microphone	579
8. Coupling point on dash panel, centre, Coupling point on left D-pillar	580
9. Coupling point on dash panel, centre, Coupling point on left D-pillar	581
10. Coupling point on dash panel, centre	582
11. Coupling point on dash panel, centre, Coupling point on left D-pillar, Coupling point for roof, centre	583
075 - 1.4l petrol engine , CZDA	584-601
1. 1.4l petrol engine , CZDA	584
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder B	585
3. Main relay, Fuse holder B	586
4. Voltage stabiliser, Fuse holder C	587
5. Onboard supply control unit, Terminal 15 voltage supply relay 2, Starter relay 1, Starter relay 2, Relay and fuse carrier 1	588
6. Power steering control unit, Engine/motor control unit	589
7. Operating unit in front of centre console, Start/Stop operation button, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit, Radiator fan	590
8. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit, Control unit for electronic steering column lock	591
9. Brake light switch, Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	592

10. Oil pressure switch for reduced oil pressure, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	593
11. Hall sender, Coolant temperature sender, Engine/motor control unit, Charge pressure positioner	594
12. Intake manifold sender, Fuel pressure sender, Hall sender 3, Engine/motor control unit	595
13. Throttle valve module, Charge pressure sender, Engine speed sender, Engine/motor control unit	596
14. Oil pressure switch, Knock sensor 1, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	597
15. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel pressure regulating valve, Exhaust camshaft control valve 1, Valve for oil pressure control, Charge air cooling pump	598
16. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	599
17. Fuel delivery unit, Brake servo pressure sensor, Control unit in dash panel insert, Fuel pump control unit, Engine/motor control unit	600
18. Coolant shortage indicator sender, Oil level and oil temperature sender, Control unit in dash panel insert, Onboard supply control unit 2, Data bus diagnostic interface	601
076 - 2.0l petrol engine , DEDA	602-626
1. 2.0l petrol engine , DEDA	602
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder B	603
3. Main relay, Fuse holder B	604
4. Voltage stabiliser, Engine component current supply relay, Fuse holder B	605
5. Onboard supply control unit, Terminal 15 voltage supply relay 2, Starter relay 1, Starter relay 2, Relay and fuse carrier 1	606
6. Fuse holder C	607
7. Engine/motor control unit	608
8. Power steering control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	609
9. Charge pressure sender, Engine/motor control unit, Actuator for engine temperature regulation, Auxiliary pump for heating	610
10. Operating unit in front of centre console, Start/Stop operation button, Radiator outlet coolant temperature sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Fuel metering valve	611
11. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit, Control unit for electronic steering column lock	612
12. Brake light switch, Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit	613
13. Throttle valve module, Fuel pressure sender for low pressure, Engine/motor control unit	614
14. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Lambda probe, Engine/motor control unit, Coolant circulation pump 2	615
15. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	616
16. Engine/motor control unit, Charge pressure control solenoid valve, Charge pressure positioner	617
17. Engine/motor control unit, Exhaust cam actuator A for cylinder 1, Exhaust cam actuator B for cylinder 1, Exhaust cam actuator A for cylinder 2, Exhaust cam actuator B for cylinder 2, Exhaust cam actuator A for cylinder 3, Exhaust cam actuator B for cylinder 3, Exhaust cam actuator A for cylinder 4	618
18. Engine/motor control unit, Camshaft control valve 1, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4, Exhaust cam actuator B for cylinder 4	619
19. Knock sensor 1, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Exhaust camshaft control valve 1	620
20. Coolant temperature sender, Engine/motor control unit, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	621
21. Intake manifold sender, Engine speed sender, Hall sender 3, Engine/motor control unit	622
22. Stage 3 oil pressure switch, Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	623
23. Engine/motor control unit, Coolant shut-off valve, Coolant valve for gearbox	624
24. Fuel delivery unit, Coolant shortage indicator sender, Control unit in dash panel insert, Fuel pump control unit	625
25. Oil level and oil temperature sender, Control unit in dash panel insert, Data bus diagnostic interface	626
077 - 2.0l diesel engine , CUVA,CUVC,CUWA	627-651
1. 2.0l diesel engine , CUVA,CUVC,CUWA	627
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder B	628
3. Main relay, Fuse holder B	629
4. Voltage stabiliser, Fuse holder C	630
5. Onboard supply control unit, Terminal 15 voltage supply relay 2, Starter relay 1, Starter relay 2, Relay and fuse carrier 1	631

6. Engine/motor control unit	632
7. Gearbox neutral position sender, Engine/motor control unit, Radiator fan	633
8. Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2)	634
9. Power steering control unit, Control unit for NOx sender, Engine/motor control unit, Relay for reducing agent metering system	635
10. Operating unit in front of centre console, Start/stop operation button, Steering column electronics control unit, Engine/motor control unit, Control unit for electronic steering column lock	636
11. Brake light switch, Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	637
12. Oil pressure switch, Oil pressure switch for reduced oil pressure, Air mass meter, Engine/motor control unit	638
13. Accelerator pedal module, Lambda probe 1 before catalytic converter, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit	639
14. Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit, Exhaust flap control unit	640
15. Exhaust gas recirculation temperature sensor, Engine/motor control unit, Charge pressure control solenoid valve, Heater element for crankcase breather	641
16. Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	642
17. Charge pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit, Camshaft control valve 1, Fuel pressure regulating valve, Fuel metering valve	643
18. Pressure differential sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	644
19. Intake air temperature sender, Coolant temperature sender, Fuel temperature sender, Exhaust gas temperature sender 1, Tank sender for reducing agent, Engine/motor control unit	645
20. Hall sender, Position sender for charge pressure positioner, Engine/motor control unit, Valve for oil pressure control, Coolant valve for cylinder head	646
21. Throttle valve module, Exhaust gas recirculation valve 2, Engine speed sender, Engine/motor control unit	647
22. Exhaust gas recirculation valve 1, Fuel pressure sender, Engine/motor control unit, Charge air cooling pump	648
23. Engine/motor control unit, Auxiliary pump for heating	649
24. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit	650
25. Coolant shortage indicator sender, Oil level and oil temperature sender, Control unit in dash panel insert, Data bus diagnostic interface	651
078 - Lane change assist	652-654
1. Lane change assist	652
2. Blind Spot Monitor control unit 2, Blind Spot Monitor warning lamp in left exterior mirror, Blind Spot Monitor warning lamp in right exterior mirror	653
3. Onboard supply control unit 2, Data bus diagnostic interface, Blind Spot Monitor control unit	654
079 - Adaptive cruise control	655-656
1. Adaptive cruise control	655
2. Adaptive cruise control unit, Onboard supply control unit 2, Data bus diagnostic interface	656
080 - Anti-lock brake system (ABS)	657-664
1. Anti-lock brake system (ABS)	657
2. ABS control unit, Fuse holder B, Fuse holder C	658
3. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	659
4. Parking brake button, Electromechanical parking brake button, Auto-hold button, ABS control unit	660
5. Clutch position sender, Vacuum sender, ABS control unit, Left parking brake motor, Right parking brake motor	661
6. Button for TCS and electronic stabilisation program, Operating unit in front of centre console, Tyre Pressure Loss Indicator button, ABS control unit	662
7. Onboard supply control unit, Onboard supply control unit 2, Steering column electronics control unit, Data bus diagnostic interface	663
8. Front left brake pad wear sender, Control unit in dash panel insert, Onboard supply control unit, Dash panel insert	664
081 - Parking aid (PDC)	665-671
1. Parking aid (PDC)	665
2. Switch module 2 in centre console, Parking aid control unit, Park assist steering control unit, Parking aid loudspeaker, Rear loudspeaker for parking aid, Fuse 13 on fuse holder C	666
3. Front centre left parking aid sender, Front left parking aid sender, Front left sender for park assist steering on left side of vehicle, Parking aid control unit, Park assist steering control unit	667
4. Front right parking aid sender. Front centre right parking aid sender. Front right sender for	668

park assist steering on right side of vehicle, Parking aid control unit, Park assist steering control unit	
5. Rear left parking aid sender, Rear centre left parking aid sender, Rear left park assist steering sender, Parking aid control unit, Park assist steering control unit	669
6. Rear centre right parking aid sender, Rear right parking aid sender, Rear right park assist steering sender, Parking aid control unit, Park assist steering control unit	670
7. Parking aid control unit, Onboard supply control unit 2, Data bus diagnostic interface, Park assist steering control unit, Control unit 1 for information electronics	671
082 - Taxi equipment	672-685
1. Taxi equipment	672
2. Onboard supply control unit, Onboard supply control unit 2, Voltage stabiliser, Data bus diagnostic interface, Starter relay 2, Fuse holder C, Coupling point in interior	673
3. Voltage stabiliser, Fuse holder K, Coupling point in interior, below left	674
4. Interior light switch (taxi), Passive Taxi alarm button, Special vehicle control unit, Taxi roof sign socket	675
5. Taxi sign switch, Taxi alarm active button, Taxi alarm off button, Special vehicle control unit	676
6. 2-way radio loudspeaker volume control 1, Taximeter, Taxi alarm remote control, control unit, Special vehicle control unit, Two-way radio loudspeaker, Remote controlled taxi alarm aerial	677
7. Special vehicle control unit, Coupling point on left D-pillar	678
8. 2-way radio unit microphone, Coupling point on left D-pillar	679
9. Hands-free system button	680
10. Mirror taximeter, Contact in ignition and starter switch for ignition key warning system	681
11. Coupling point on dash panel, centre	682
12. Coupling point on left D-pillar	683
13. Coupling point on dash panel, centre	684
14. Coupling point on dash panel, centre, Coupling point on left D-pillar, Coupling point for roof, centre	685
083 - Front camera for driver assist systems	686-687
1. Front camera for driver assist systems	686
2. Onboard supply control unit 2, Data bus diagnostic interface, Front camera for driver assist systems, Windscreen heater for front sensors	687
084 - Basic equipment	688-711
1. Basic equipment	688
2. Onboard supply control unit, Terminal 15 voltage supply relay 2	689
3. Onboard supply control unit, Terminal 75 voltage supply relay 1, Rear window wiper motor, Windscreen and rear window washer pump	690
4. Dual tone horn relay, Onboard supply control unit, Left fog light bulb, Front left headlight, Left static cornering light	691
5. Onboard supply control unit, Right fog light bulb, Front right headlight, Right static cornering light	692
6. Switch and instrument illumination regulator, Onboard supply control unit	693
7. Light switch, Bonnet contact switch, Onboard supply control unit	694
8. Ignition/starter switch, Onboard supply control unit, Steering column electronics control unit	695
9. Onboard supply control unit, Steering column electronics control unit	696
10. Horn plate, Onboard supply control unit, Steering column electronics control unit, Airbag igniter on driver side	697
11. Onboard supply control unit, Front left footwell light, Rear left footwell light	698
12. Onboard supply control unit, Front right footwell light, Glove compartment light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Rear right footwell light	699
13. Onboard supply control unit, Front interior light, Left centre reading light, Right centre reading light, Rear centre reading light	700
14. Humidity sender for air conditioning system, Rain and light sensor, Wiper motor control unit, Onboard supply control unit, Main beam assist control unit, Automatic anti-dazzle interior mirror	701
15. Onboard supply control unit, Left luggage compartment light, Right luggage compartment light, Surround lighting 1 in rear lid, Surround lighting 2 in rear lid	702
16. Hazard warning lights button, Brake light switch, Reversing light switch, Heated rear window relay, Onboard supply control unit	703
17. Rear lid handle release button, Luggage compartment light switch, Rear lid lock unit, Onboard supply control unit, High-level brake light bulb, Left number plate light, Right number plate light	704
18. Onboard supply control unit, Right tail light cluster, Right tail light cluster 2	705
19. Onboard supply control unit, Left tail light cluster, Left tail light cluster 2, Left brake and tail light bulb 2	706
20. Driver door control unit, Front passenger door control unit, Driver side exterior mirror turn signal bulb, Front passenger side exterior mirror turn signal bulb	707
21. Data bus diagnostic interface. Control unit 1 for information electronics. Diagnostic connection	708

22. Immobiliser reader coil, Fuel delivery unit, Dash panel insert	709
23. Coolant shortage indicator sender, Windscreen washer fluid level sender, Front left brake pad wear sender, Oil level and oil temperature sender, Dash panel insert	710
24. Oil pressure switch, Brake fluid level warning contact, Ambient temperature sensor, ABS control unit, Dash panel insert	711
085 - Fuse assignment	712-744
1. Fuse assignment	712
2. Battery, Starter, Battery monitor control unit, Fuse holder A	713
3. Fuse holder A	714
4. Fuse holder A, Fuse holder B	715
5. Fuse holder B	716
6. Fuse holder B	717
7. Fuse holder B	718
8. Fuse holder B	719
9. Fuse holder B	720
10. Brake servo pressure sensor, Fuse holder B, Vacuum pump for brakes	721
11. Fuse holder B	722
12. Fuse holder B	723
13. Fuse holder B	724
14. Main relay, Terminal 30 voltage supply relay, Fuse holder B	725
15. Fuse holder B	726
16. Engine component current supply relay, Fuse holder B	727
17. Fuse holder C	728
18. Fuse holder C	729
19. Fuse holder C	730
20. Fuse holder C	731
21. Fuse holder C	732
22. Fuse holder C	733
23. Fuse holder C	734
24. Fuse holder C	735
25. Fuse holder C	736
26. Fuse holder C	737
27. Fuse holder C	738
28. Fuse holder C	739
29. Fuse holder C	740
30. Fuse holder C	741
31. Fuse holder D	742
32. Fuse holder K	743
33. Coupling point in interior, below left	744
086 - Radio navigation system	745-753
1. Radio navigation system	745
2. Voltage stabiliser, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Two-way signal amplifier for mobile telephone/data services, Storage compartment with interface for mobile telephone, Fuse holder B	746
3. Onboard supply control unit 2, Data bus diagnostic interface, Control unit 1 for information electronics, Connection for external audio sources	747
4. Control unit 1 for information electronics, Connection for external audio sources	748
5. Control unit 1 for information electronics	749
6. Control unit 1 for information electronics, Telephone microphone, Connection for external audio sources	750
7. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	751
8. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker, Left aerial module, Radio aerial	752
9. Control unit 1 for information electronics, Roof aerial, Radio aerial 2, Digital radio aerial	753
087 - 2.0l diesel engine , DFLA,DFLD,DFMA	754-778
1. 2.0l diesel engine , DFLA,DFLD,DFMA	754
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder B	755
3. Terminal 30 voltage supply relay, Fuse holder B	756
4. Voltage stabiliser, Fuse holder C	757
5. Onboard supply control unit, Terminal 15 voltage supply relay 2, Starter relay 1, Starter relay 2, Relay and fuse carrier 1	758
6. Engine/motor control unit, Radiator fan	759
7. Gearbox neutral position sender, Engine/motor control unit	760
8. Delivery unit for reducing agent metering system. Engine/motor control unit. Control unit for	761

reducing agent heater, Heater for reducing agent line (heater circuit 2)	
9. Power steering control unit, Control unit for NOx sender, Engine/motor control unit, Relay for reducing agent metering system	762
10. Operating unit in front of centre console, Start/Stop operation button, Steering column electronics control unit, Engine/motor control unit, Control unit for electronic steering column lock	763
11. Brake light switch, Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	764
12. Oil pressure switch, Oil pressure switch for reduced oil pressure, Air mass meter, Engine/motor control unit	765
13. Accelerator pedal module, Lambda probe 1 before catalytic converter, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit	766
14. Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit, Exhaust flap control unit	767
15. Exhaust gas recirculation temperature sensor, Engine/motor control unit, Charge pressure control solenoid valve, Heater element for crankcase breather	768
16. Automatic glow period control unit, Engine/motor control unit, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	769
17. Charge pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit, Camshaft control valve 1, Fuel pressure regulating valve, Fuel metering valve	770
18. Pressure differential sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	771
19. Intake air temperature sender, Coolant temperature sender, Fuel temperature sender, Exhaust gas temperature sender 1, Engine/motor control unit, Injector for reducing agent	772
20. Hall sender, Position sender for charge pressure positioner, Engine/motor control unit, Valve for oil pressure control, Coolant valve for cylinder head	773
21. Throttle valve module, Exhaust gas recirculation valve 2, Engine speed sender, Engine/motor control unit	774
22. Exhaust gas recirculation valve 1, Fuel pressure sender, Engine/motor control unit, Charge air cooling pump	775
23. Engine/motor control unit, Auxiliary pump for heating	776
24. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit	777
25. Coolant shortage indicator sender, Oil level and oil temperature sender, Control unit in dash panel insert, Onboard supply control unit 2, Data bus diagnostic interface	778
088 - 12 V sockets	779-780
1. 12 V sockets	779
2. Cigarette lighter, 12 V socket, 12 V socket 2, 12 V socket 3	780
089 - 1.4l petrol engine , CZDA	781-798
1. 1.4l petrol engine , CZDA	781
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder B	782
3. Main relay, Fuse holder B	783
4. Voltage stabiliser, Fuse holder C	784
5. Onboard supply control unit, Terminal 15 voltage supply relay 2, Starter relay 1, Starter relay 2, Relay and fuse carrier 1	785
6. Power steering control unit, Engine/motor control unit	786
7. Operating unit in front of centre console, Start/Stop operation button, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit, Radiator fan	787
8. Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Steering column electronics control unit, Engine/motor control unit, Control unit for electronic steering column lock	788
9. Brake light switch, Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	789
10. Oil pressure switch for reduced oil pressure, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	790
11. Hall sender, Coolant temperature sender, Engine/motor control unit, Charge pressure positioner	791
12. Intake manifold sender, Fuel pressure sender, Hall sender 3, Engine/motor control unit	792
13. Throttle valve module, Charge pressure sender, Engine speed sender, Engine/motor control unit	793
14. Oil pressure switch, Knock sensor 1, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	794
15. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel pressure regulating valve, Exhaust camshaft control valve 1, Valve for oil pressure control, Charge air cooling pump	795
16. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	796
17. Fuel delivery unit, Brake servo pressure sensor, Control unit in dash panel insert, Fuel pump control unit. Engine/motor control unit	797

18. Coolant shortage indicator sender, Oil level and oil temperature sender, Control unit in dash panel insert, Onboard supply control unit 2, Data bus diagnostic interface	798
090 - 2.0l petrol engine , DEDA	799-823
1. 2.0l petrol engine , DEDA	799
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder B	800
3. Main relay, Fuse holder B	801
4. Voltage stabiliser, Engine component current supply relay, Fuse holder B	802
5. Onboard supply control unit, Terminal 15 voltage supply relay 2, Starter relay 1, Starter relay 2, Relay and fuse carrier 1	803
6. Fuse holder C	804
7. Engine control unit	805
8. Power steering control unit, Engine control unit, Mechatronic unit for dual clutch gearbox	806
9. Charge pressure sender, Engine control unit, Actuator for engine temperature regulation, Auxiliary pump for heating	807
10. Operating unit in front of centre console, Start/Stop operation button, Radiator outlet coolant temperature sender, Engine control unit, Activated charcoal filter solenoid valve 1, Fuel metering valve	808
11. Accelerator pedal module, Steering column electronics control unit, Engine control unit, Control unit for electronic steering column lock	809
12. Brake light switch, Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine control unit	810
13. Throttle valve module, Fuel pressure sender for low pressure, Engine control unit	811
14. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Lambda probe, Engine control unit, Coolant circulation pump 2	812
15. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	813
16. Engine control unit, Charge pressure positioner	814
17. Engine control unit, Exhaust cam actuator A for cylinder 1, Exhaust cam actuator B for cylinder 1, Exhaust cam actuator A for cylinder 2, Exhaust cam actuator B for cylinder 2, Exhaust cam actuator A for cylinder 3, Exhaust cam actuator B for cylinder 3, Exhaust cam actuator A for cylinder 4	815
18. Engine control unit, Camshaft control valve 1, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4, Exhaust cam actuator B for cylinder 4	816
19. Knock sensor 1, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Exhaust camshaft control valve 1	817
20. Coolant temperature sender, Engine control unit, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	818
21. Intake manifold sender, Engine speed sender, Hall sender 3, Engine control unit	819
22. Stage 3 oil pressure switch, Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine control unit	820
23. Engine control unit, Coolant shut-off valve, Coolant valve for gearbox	821
24. Fuel delivery unit, Coolant shortage indicator sender, Control unit in dash panel insert, Fuel pump control unit	822
25. Oil level and oil temperature sender, Control unit in dash panel insert, Onboard supply control unit 2, Data bus diagnostic interface	823
091 - Multimedia system , (7UN)	824-829
1. Multimedia system , (7UN)	824
2. Chip card reader, Voltage stabiliser, Control unit 1 for information electronics, Traffic data aerial, Fuse holder B	825
3. Control unit 1 for information electronics, Interface for external audio sources, Telephone microphone	826
4. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Reversing camera	827
5. Data bus diagnostic interface, Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	828
6. Control unit 1 for information electronics, Roof aerial, Aerial, GPS aerial, Radio aerial 2, Left aerial module, Right aerial module	829
092 - Mobile telephone systems , (9IF),(9ZE)	830-832
1. Mobile telephone systems , (9IF),(9ZE)	830
2. Control unit 1 for information electronics, Two-way signal amplifier for mobile telephone/data services, Telephone microphone, Storage compartment with interface for mobile telephone, Fuse holder C	831
3. Two-way signal amplifier for mobile telephone/data services, Roof aerial, Telephone aerial	832
093 - Dual clutch gearbox (DSG) , (0EX)	833-836
1. Dual clutch gearbox (DSG) , (0EX)	833
2. Selector lever. Mechatronic unit for dual clutch gearbox. Fuse holder B. Fuse holder C	834

3. Selector lever, Mechatronic unit for dual clutch gearbox, Selector lever lock solenoid, Selector lever position display	835
4. Control unit in dash panel insert, Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox, Diagnostic connection	836
094 - Reversing camera (Rear Assist) , (KA2)	837-839
1. Reversing camera (Rear Assist) , (KA2)	837
2. Data bus diagnostic interface, Reversing camera system control unit, Fuse holder C, Diagnostic connection	838
3. Reversing camera system control unit, Control unit 1 for information electronics, Reversing camera	839
095 - Multimedia system , (7UN)	840-845
1. Multimedia system , (7UN)	840
2. Voltage stabiliser, Engine/motor control unit, Control unit 1 for information electronics, Reversing camera, Fuse holder B, Fuse holder C	841
3. Control unit 1 for information electronics, Interface for external audio sources, Telephone microphone	842
4. Chip card reader, Data bus diagnostic interface, Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker, Traffic data aerial	843
5. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	844
6. Control unit 1 for information electronics, Roof aerial, Aerial, GPS aerial, Radio aerial 2, Left aerial module, Right aerial module	845
096 - Fuse assignment	846-879
1. Fuse assignment	846
2. Battery, Starter, Battery monitor control unit, Fuse holder A	847
3. Fuse holder A	848
4. Fuse holder A, Fuse holder B	849
5. Fuse holder B	850
6. Additional coolant pump relay, Fuse holder B, Vacuum pump for brakes	851
7. Fuse holder B	852
8. Fuse holder B	853
9. Fuse holder B	854
10. Fuse holder B	855
11. Fuse holder B	856
12. Fuse holder B	857
13. Fuse holder B	858
14. Main relay, Terminal 30 voltage supply relay, Fuse holder B	859
15. Fuse holder B	860
16. Engine component power supply relay, Fuse holder B	861
17. Fuse holder C	862
18. Fuse holder C	863
19. Fuse holder C	864
20. Fuse holder C	865
21. Fuse holder C	866
22. Fuse holder C	867
23. Fuse holder C	868
24. Fuse holder C	869
25. Fuse holder C	870
26. Fuse holder C	871
27. Fuse holder C	872
28. Blower relay, Fuse holder C	873
29. Fuse holder C	874
30. Fuse holder C, Fuse holder D	875
31. Fuse holder D	876
32. Fuse holder D, Fuse holder K	877
33. Driver seat lumbar support adjustment switch, Driver seat adjustment operating unit, Driver seat adjustment control unit, Relay and fuse carrier 1	878
34. Coupling point in interior, below left	879
097 - 2.0l diesel engine , DFLA,DFLD,DFMA,DLTA,DLTC,DLUB	880-906
1. 2.0l diesel engine , DFLA,DFLD,DFMA,DLTA,DLTC,DLUB	880
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder B	881
3. Main relay, Fuse holder B	882
4. Voltage stabiliser, Fuse holder C	883
5. Onboard supply control unit, Terminal 15 voltage supply relay 2, Starter relay 1, Starter relay 2, Relay and fuse carrier 1	884

6. Engine/motor control unit	885
7. Gearbox neutral position sender, Engine/motor control unit, Radiator fan	886
8. Delivery unit for reducing agent metering system, Temperature sender for reducing agent, Reducing agent level sender, Reducing agent quality sensor, Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent tank (heater circuit 1), Heater for reducing agent line (heater circuit 2)	887
9. Delivery unit for reducing agent metering system, Engine/motor control unit, Relay for reducing agent metering system, Pump for reducing agent, Reducing agent return flow pump	888
10. Control unit for NOx sender, Control unit 2 for NOx sender, Power steering control unit, Engine/motor control unit	889
11. Operating unit in front of centre console, Start/Stop operation button, Steering column electronics control unit, Engine/motor control unit, Control unit for electronic steering column lock	890
12. Brake light switch, Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	891
13. Oil pressure switch, Oil pressure switch for reduced oil pressure, Air mass meter, Engine/motor control unit	892
14. Lambda probe 1 before catalytic converter, Engine/motor control unit	893
15. Accelerator pedal module, Lambda probe 1 before catalytic converter, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit	894
16. Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit, Exhaust flap control unit	895
17. Charge air temperature sender after charge air cooler, Engine/motor control unit, Charge pressure control solenoid valve, Heater element for crankcase breather	896
18. Automatic glow period control unit, Engine/motor control unit, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	897
19. Charge pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit, Camshaft control valve 1, Fuel pressure regulating valve, Fuel metering valve	898
20. Pressure differential sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	899
21. Coolant temperature sender, Fuel temperature sender, Exhaust gas temperature sender 1, Charge air temperature sender before charge air cooler, Engine/motor control unit, Injector for reducing agent	900
22. Hall sender, Position sender for charge pressure positioner, Engine/motor control unit, Valve for oil pressure control, Coolant valve for cylinder head	901
23. Throttle valve module, Exhaust gas recirculation valve 2, Engine speed sender, Engine/motor control unit	902
24. Exhaust gas recirculation valve 1, Fuel pressure sender, Engine/motor control unit, Charge air cooling pump	903
25. Engine/motor control unit, Auxiliary pump for heating	904
26. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit	905
27. Coolant shortage indicator sender, Oil level and oil temperature sender, Control unit in dash panel insert, Onboard supply control unit 2, Data bus diagnostic interface	906
098 - 1.4l petrol engine , CZDA	907-925
1. 1.4l petrol engine , CZDA	907
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder B	908
3. Main relay, Fuse holder B	909
4. Voltage stabiliser, Fuse holder C	910
5. Onboard supply control unit, Starter relay 1, Starter relay 2	911
6. Brake servo pressure sensor, Additional coolant pump relay, Onboard supply control unit, Engine/motor control unit, Terminal 15 voltage supply relay 2, Relay and fuse carrier 1, Vacuum pump for brakes	912
7. Power steering control unit, Engine/motor control unit	913
8. Operating unit in front of centre console, Start/Stop operation button, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit, Radiator fan	914
9. Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Steering column electronics control unit, Engine/motor control unit, Control unit for electronic steering column lock	915
10. Brake light switch, Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	916
11. Oil pressure switch for reduced oil pressure, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	917
12. Hall sender, Coolant temperature sender, Engine/motor control unit, Charge pressure positioner	918
13. Intake manifold sender, Fuel pressure sender, Hall sender 3, Engine/motor control unit	919
14. Throttle valve module, Charge pressure sender, Engine speed sender, Engine/motor control unit	920
15. Oil pressure switch. Knock sensor 1. Engine/motor control unit. Injector. cylinder 1. Injector.	921

cylinder 2, Injector, cylinder 3, Injector, cylinder 4	
16. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel pressure regulating valve, Exhaust camshaft control valve 1, Valve for oil pressure control, Charge air cooling pump	922
17. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	923
18. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit	924
19. Coolant shortage indicator sender, Oil level and oil temperature sender, Control unit in dash panel insert, Onboard supply control unit 2, Data bus diagnostic interface	925
099 - 2.0l petrol engine , DEDA	926-950
1. 2.0l petrol engine , DEDA	926
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder B	927
3. Main relay, Fuse holder B	928
4. Voltage stabiliser, Engine component power supply relay, Fuse holder B	929
5. Onboard supply control unit, Terminal 15 voltage supply relay 2, Starter relay 1, Starter relay 2, Relay and fuse carrier 1	930
6. Fuse holder C	931
7. Engine/motor control unit	932
8. Power steering control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	933
9. Charge pressure sender, Engine/motor control unit, Actuator for engine temperature regulation, Gearbox oil cooling pump	934
10. Operating unit in front of centre console, Start/stop operation button, Radiator outlet coolant temperature sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Fuel metering valve	935
11. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit, Control unit for electronic steering column lock	936
12. Brake light switch, Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit	937
13. Throttle valve module, Fuel pressure sender for low pressure, Engine/motor control unit	938
14. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Lambda probe, Engine/motor control unit, Auxiliary pump for heating	939
15. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	940
16. Engine/motor control unit, Charge pressure positioner	941
17. Engine/motor control unit, Exhaust cam actuator A for cylinder 1, Exhaust cam actuator B for cylinder 1, Exhaust cam actuator A for cylinder 2, Exhaust cam actuator B for cylinder 2, Exhaust cam actuator A for cylinder 3, Exhaust cam actuator B for cylinder 3, Exhaust cam actuator A for cylinder 4	942
18. Engine/motor control unit, Camshaft control valve 1, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4, Exhaust cam actuator B for cylinder 4	943
19. Knock sensor 1, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Exhaust camshaft control valve 1	944
20. Coolant temperature sender, Engine/motor control unit, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	945
21. Intake manifold sender, Engine speed sender, Hall sender 3, Engine/motor control unit	946
22. Stage 3 oil pressure switch, Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	947
23. Engine/motor control unit, Coolant shut-off valve, Coolant valve for gearbox	948
24. Fuel delivery unit, Coolant shortage indicator sender, Control unit in dash panel insert, Fuel pump control unit	949
25. Oil level and oil temperature sender, Control unit in dash panel insert, Data bus diagnostic interface	950
100 - Electric seat adjustment with no memory function , (3L5)	951-955
1. Electric seat adjustment with no memory function , (3L5)	951
2. Driver seat lumbar support adjustment switch, Driver seat adjustment thermal fuse 1, Front passenger seat adjustment thermal fuse 1, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	952
3. Front passenger seat lumbar support adjustment switch, Driver seat backrest adjustment motor, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor	953
4. Driver seat adjustment operating unit, Front passenger seat backrest adjustment motor, Driver seat pan	954
5. Front passenger seat adjustment operating unit, Front passenger seat pan	955
101 - Electric seat adjustment with memory function , (3L4)	956-960
1. Electric seat adjustment with memory function , (3L4)	956
2. Driver seat adjustment operating unit. Driver seat adjustment control unit. Driver seat	957

adjustment thermal fuse 1	
3. Lumbar support height adjustment button, Lumbar support longitudinal adjustment button, Driver operating unit for memory settings, Backrest adjustment sender for driver seat, Driver seat adjustment control unit, Driver seat backrest adjustment motor	958
4. Longitudinal adjustment sender for driver seat, Height adjustment sender for driver seat, Rake adjustment sender for driver seat, Driver seat adjustment control unit, Driver seat longitudinal adjustment motor, Driver seat height adjustment motor, Drive seat rake adjustment motor	959
5. Lumbar support height adjustment sender, Lumbar support longitudinal adjustment sender, Onboard supply control unit, Driver seat adjustment control unit, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	960
102 - Electrically adjustable lumbar support , (7P1),(7P7),(7P8)	961-963
1. Electrically adjustable lumbar support , (7P1),(7P7),(7P8)	961
2. Driver seat backrest adjustment switch, Driver seat adjustment thermal fuse 1, Front passenger seat adjustment thermal fuse 1, Driver seat backrest adjustment motor, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	962
3. Front passenger seat backrest adjustment switch, Front passenger seat backrest adjustment motor, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor	963
103 - 1.4l petrol engine , DJKA	964-986
1. 1.4l petrol engine , DJKA	964
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder B	965
3. Fuse holder B	966
4. Fuse holder C	967
5. Onboard supply control unit, Starter relay 1, Starter relay 2	968
6. Additional coolant pump relay, Onboard supply control unit, Terminal 75 voltage supply relay 1, Terminal 15 voltage supply relay 2, Vacuum pump for brakes	969
7. Operating unit in front of centre console, Engine/motor control unit, Radiator fan	970
8. Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit, Control unit for electronic steering column lock	971
9. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit	972
10. Brake light switch, Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	973
11. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	974
12. Reversing light switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit	975
13. Pressure sensor for activated charcoal filter air flushing, Engine/motor control unit	976
14. Charge pressure sender, Coolant temperature sender, Engine/motor control unit, Charge pressure positioner	977
15. Engine speed sender, Fuel pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit, Fuel metering valve	978
16. Oil pressure switch, Throttle valve module, Knock sensor 1, Engine/motor control unit	979
17. Intake manifold sender, Hall sender, Hall sender 2, Engine/motor control unit	980
18. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	981
19. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Charge air cooling pump	982
20. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	983
21. Fuel delivery unit, Fuel pump control unit	984
22. Fuel delivery unit, Coolant shortage indicator sender, Dash panel insert	985
23. Oil level and oil temperature sender, Power steering control unit, Data bus diagnostic interface, Dash panel insert	986
104 - Lane change assist	987-989
1. Lane change assist	987
2. Blind Spot Monitor control unit 2, Blind Spot Monitor warning lamp in left exterior mirror, Fuse holder C	988
3. Onboard supply control unit 2, Data bus diagnostic interface, Blind Spot Monitor control unit, Blind Spot Monitor warning lamp in right exterior mirror	989
801 - - Fitting locations: Earth points - 3	990-1005
1. Earth points	990-1005
1.1 Overview of earth points in engine compartment	992-995
1.2 Earth points on engine	996-997
1.2.1 Earth point, on cylinder head	996
1.2.2 Earth points on ignition coils	997
1.3 Overview of earth points in vehicle interior (left)	998-1001

1.4 Overview of earth points in vehicle interior (right)	1002-1005
802 - -Fitting locations: Fuses - 3	1006-1117
1. Fuses	1006-1117
1.1 Overview of fuses	1006-1007
1.2 Fuse holder A (SA) on E-Box low, on left in engine compartment	1008-1011
1.2.1 Fuse assignment (SA) from May 2010	1009
1.2.2 Fuse assignment (SA) from May 2015	1010
1.2.3 Fuse assignment (SA), from November 2020	1011
1.3 Fuse holder B (SB) on E-box low, on left in engine compartment	1012-1048
1.3.1 Fuse assignment (SB), from May 2010	1012-1014
1.3.2 Fuse assignment (SB), from May 2011	1015-1017
1.3.3 Fuse assignment (SB), from May 2013	1018-1021
1.3.4 Fuse assignment (SB), from May 2015	1022-1025
1.3.5 Fuse assignment (SB), from May 2016	1026-1029
1.3.6 Fuse assignment (SB), from November 2016	1030-1033
1.3.7 Fuse assignment (SB), from May 2017	1034-1037
1.3.8 Fuse assignment (SB), from November 2017	1038-1041
1.3.9 Fuse assignment (SB), from July 2018	1042-1045
1.3.10 Fuse assignment (SB), from November 2020	1046-1048
1.4 Fuse holder C (SC) under left dash panel	1049-1109
1.4.1 Fuse assignment (SC), from May 2010	1050-1054
1.4.2 Fuse assignment (SC), from May 2011	1055-1059
1.4.3 Fuse assignment (SC), from May 2013	1060-1064
1.4.4 Fuse assignment (SC), from November 2013	1065-1069
1.4.5 Fuse assignment, from May 2015	1070-1074
1.4.6 Fuse assignment, from May 2016	1075-1079
1.4.7 Fuse assignment from November 2016	1080-1084
1.4.8 Fuse assignment, from May 2017	1085-1089
1.4.9 Fuse assignment from November 2017	1090-1094
1.4.10 Fuse assignment, from July 2018	1095-1099
1.4.11 Fuse assignment, from July 2020	1100-1104
1.4.12 Fuse assignment from November 2020	1105-1109
1.5 Fuse and relay carrier (SR1), above fuse holder SC	1110-1112
1.5.1 Fuse assignment (SR1), from May 2010	1111
1.5.2 Fuse assignment (SR1), from May 2017	1112
1.5.3 Fuse assignment (SR1), from July 2018	1112
1.5.4 Fuse assignment (SR1), from July 2020	1113
1.6 Fitting location of fuse holder K -SK-	1113
1.6.1 Fitting location of fuse holder K -SK-, only for special vehicles	1113
1.7 Fuse assignment for fuse holder K -SK-	1114
1.7.1 Fuse assignment for fuse holder K -SK-, from May 2015, only for special vehicles	1114
1.8 Fuse holder D (SD), rear left	1115-1117
1.8.1 Fuse assignment (SD), from May 2010	1116
1.8.2 Fuse assignment (SD), from May 2013	1116
1.8.3 Fuse assignment (SD), from May 2020	1116-1117
803 - - Fitting locations: Relays - 3	1118-1129
1. Relays	1118-1129
1.1 Overview of relay carriers	1118
1.2 Relay assignment in engine compartment, on E-box low, from May 2010	1118
1.3 Relay assignment in engine compartment, under E-box low, from May 2010	1119
1.4 Relay assignment in engine compartment, under E-box low, from May 2012	1120
1.5 Relay assignment in engine compartment, under E-box low, from November 2016	1121
1.6 Relay assignment in engine compartment, under E-box low, from July 2018	1122
1.7 Relay carrier in interior, on left behind dash panel, from May 2010	1123
1.8 Relay carrier in interior, on left behind dash panel, from May 2012	1124
1.9 Relay carrier in interior, on left behind dash panel, from May 2016	1125
1.10 Fuse/relay carrier (SR1) in interior, on left under dash panel, from May 2010	1126
1.11 Fuse/relay carrier (SR1) in interior, on left under dash panel, from May 2016	1127
1.12 Fuse/relay carrier (SR2), rear left, from May 2010	1128-1129
804 - -Fitting locations: Control units in engine compartment - 3	1130-1146
1. Control units in engine compartment	1130-1146
1.1 Overview of control units	1130
1.2 Front right headlight -MX2-	1131-1132
1.2.1 Control unit for right daytime running light and side light -J861-/right gas discharge bulb control unit -J344-/output module for right headlight -J668-	1132
1.3 Auxiliary heater control unit -J364-	1133

1.4 Power steering control unit -J500-	1134
1.5 Engine control unit -J623- with 60-pin connector -T60-/94-pin connector -T94-	1135
1.6 Engine control unit -J623- with 91-pin connector -T91-/105-pin connector -T105-	1136
1.7 Voltage stabiliser -J532-, from May 2011	1137
1.8 Control unit for NOx sender 2 -J881-	1138
1.9 Wiper motor control unit -J400-	1139
1.10 ABS control unit -J104-, up to May 2015	1140
1.11 ABS control unit -J104-, from May 2015	1141
1.12 Mechatronic unit for dual clutch gearbox -J743-	1142
1.13 Front left headlight -MX1-	1143-1144
1.13.1 Control unit for left daytime running light and side light -J860-/left gas discharge bulb control unit -J343-/output module for left headlight -J667-	1144
1.14 Radiator fan control unit -J293-	1145
1.15 Adaptive cruise control unit -J428-	1146
805 - -Fitting locations: control units in passenger compartment - 3	1147-1183
1. Control units in passenger compartment	1147-1183
1.1 Overview of control units	1147-1148
1.2 Headlight range control unit -J431-/control unit for cornering light and headlight range control -J745-	1149
1.3 Fresh air blower control unit -J126-	1150
1.4 Mobile telephone operating electronics control unit -J412-	1151
1.5 Emergency call module control unit and communication unit -J949-	1152
1.6 Mobile telephone operating electronics control unit -J412-	1153
1.7 Front passenger door control unit -J387-	1154
1.8 Multimedia system control unit -J650-	1155
1.9 Control unit for electromechanical parking brake -J540-, up to May 2015	1156
1.10 Special vehicle control unit -J608-	1157-1158
1.10.1 Special vehicle control unit, up to May 2015 -J608-	1157
1.10.2 Special vehicle control unit, from May 2015 -J608-	1158
1.11 Digital sound package amplifier -R184-	1159
1.12 Driver door control unit -J386-	1160
1.13 Driver seat adjustment control unit -J810-	1161
1.14 Heated front seats control unit -J774-	1162
1.15 Heated front seats control unit -J774-	1163
1.16 Multifunction steering wheel control unit -J453-	1164
1.17 Steering column electronics control unit -J527-	1165
1.18 Control unit for electronic steering column lock -J764-	1166
1.19 Parking aid control unit -J446-/park assist steering control unit -J791-, up to May 2015	1167
1.20 Parking aid control unit -J446-/park assist steering control unit -J791-, from May 2015	1168
1.21 Onboard supply control unit -J519-	1169
1.22 Dash panel insert -K-/control unit in dash panel insert -J285-/immobiliser control unit -J362-	1170
1.23 Entry and start authorisation control unit -J518-	1171
1.24 Data bus diagnostic interface -J533-/onboard supply control unit 2 -J520-	1172
1.25 Sliding sunroof adjustment control unit -J245-	1172
1.26 Airbag control unit -J234-	1173
1.27 Display unit for front information display and operating unit control unit -J685-/control unit 1 for information electronics -J794-	1174-1178
1.27.1 Display unit for front information display and operating unit control unit -J685-/control unit 1 for information electronics -J794-, Composition Colour	1174-1176
1.27.2 Display unit for front information display and operating unit control unit -J685-/control unit 1 for information electronics -J794-, Composition Media, Discover Media	1177-1178
1.28 Climatronic control unit -J255-	1179
1.29 Air conditioning system control unit -J301-	1180
1.30 Automatic anti-dazzle interior mirror -Y7-	1180
1.31 Voltage stabiliser -J532-	1181
1.32 Voltage stabiliser -J532-	1182-1183
806 - - Fitting locations: Control units in luggage compartment - 3	1184-1199
1. Control units in luggage compartment	1184-1199
1.1 Overview of control units	1184
1.2 Rear right door control unit -J389-	1185
1.3 Sunroof roller blind control unit -J394-	1186
1.4 Fuel pump control unit -J538-	1187
1.5 Right sliding door control unit -J731-	1188
1.6 Rear lid control unit -J605-	1189
1.7 Remote control receiver for auxiliary heater -R64-	1190
1.8 Trailer detector control unit -J345-	1191

1.9 TV tuner -R78-	1192
1.10 Control unit for reducing agent heater -J891-	1193-1194
1.10.1 Control unit for reducing agent heater -J891-, up to May 2015	1193
1.10.2 Control unit for reducing agent heater -J891-, from May 2015	1194
1.11 Reversing camera system control unit -J772-	1195-1196
1.11.1 Reversing camera system control unit -J772-, up to May 2016	1195
1.11.2 Reversing camera system control unit -J772-, from May 2016	1196
1.12 Left sliding door control unit -J558-	1197
1.13 Electronically controlled damping control unit -J250-	1198
1.14 Rear left door control unit -J388-	1199
807 - -Fitting locations: coupling stations and connectors of wiring harnesses - 3	1200-1210
1. Coupling stations and connectors of wiring harnesses	1200-1210
1.1 Overview of coupling stations and connectors	1200-1201
1.2 Connector, heated windscreen, passenger side	1202
1.3 Coupling station under dash panel in front passenger footwell	1202
1.4 Coupling station on A-pillar, front passenger side	1202
1.5 Operating unit in front of centre console -E461-	1203
1.6 Coupling station, backrest adjuster in seat base, passenger seat	1203
1.7 Coupling station for front passenger seat	1203
1.8 Coupling station, sliding door at C-pillar bottom, passenger side	1204
1.9 Coupling station, tank	1204
1.10 Coupling station for reversing camera in rear lid	1204
1.11 Coupling station for rear bumper	1205
1.12 Coupling station on reducing-agent tank	1205
1.13 Coupling station for trailer operation	1205
1.14 Coupling station all-wheel drive	1206
1.15 Coupling station, sliding door at C-pillar, bottom, driver side	1206
1.16 Driver seat coupling station	1206
1.17 Coupling station, backrest adjuster in seat base, driver seat	1207
1.18 Coupling station, backrest adjuster in seat base, driver seat	1207
1.19 Coupling station, panoramic sliding roof	1207
1.20 Coupling station on A-pillar, driver side	1208
1.21 Diagnostic connection -U31-	1208
1.22 Connector, heated windscreen, driver side	1209
1.23 Coupling station in engine compartment, front left	1209-1210