



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Operation and safety notes for gas discharge lamps	2
2 Repair notes	4
2.1 Contact corrosion	4
2.2 Routing and attachment of lines	4
3 Battery	5
3.1 Battery - general notes	5
3.2 Types of battery	5
27 - Starter, current supply, CCS	6
1 Battery	6
1.1 Assembly overview - battery	6
1.2 Removing and installing battery	8
1.3 Disconnecting and connecting battery	12
1.4 Removing and installing battery tray	15
1.5 Checking battery	16
1.6 Charging battery	16
1.7 Removing and installing earth wire with battery monitor control unit J367	16
1.8 Adapting battery monitor control unit J367	18
2 Alternator	19
2.1 Assembly overview - alternator	19
2.2 Removing and installing alternator	20
2.3 Checking alternator	27
2.4 Removing and installing poly V-belt pulley	27
2.5 Removing and installing voltage regulator	36
3 Starter motor	40
3.1 Assembly overview - starter	40
3.2 Removing and installing starter	41
4 Cruise control system (CCS)	47
5 Start/stop system	48
5.1 General description - start/stop system	48
5.2 Removing and installing voltage stabiliser	48
6 Adaptive cruise control	50
6.1 Overview of fitting locations - adaptive cruise control	50
6.2 Removing and installing automatic distance control unit	51
6.3 Calibrating adaptive cruise control	52
90 - Gauges, instruments	54
1 Dash panel insert	54
1.1 Removing and installing dash panel insert KX2	54
2 Horn	56
2.1 Removing and installing treble horn H2 and bass horn H7	56
92 - Windscreen wash/wipe system	58
1 Windscreen wiper system	58
1.1 Assembly overview - windscreen wiper system	58
1.2 Moving wipers to service position	59
1.3 Removing and installing wiper blade	59
1.4 Removing and installing wiper arms	60



1.5	Adjusting wiper arms	62
1.6	Removing and installing wiper motor V	64
1.7	Renewing wiper motor	66
1.8	Deactivating APP function of wiper motor	69
1.9	Removing and installing rain and light sensor	70
2	Windscreen washer system	74
2.1	Assembly overview - windscreen washer system	74
2.2	Removing and installing filler neck with connecting pipe	75
2.3	Removing and installing washer fluid reservoir	77
2.4	Removing and installing windscreen washer fluid level sender	83
2.5	Removing and installing windscreen washer pump	83
2.6	Removing and installing spray jets	85
2.7	Adjusting spray jets	86
3	Rear window wiper system	87
3.1	Assembly overview - rear window wiper system	87
3.2	Removing and installing wiper blade	87
3.3	Removing and installing wiper arm	88
3.4	Adjusting wiper arm	89
3.5	Removing and installing rear window wiper motor V12	90
4	Rear window washer system	93
4.1	Assembly overview - rear window washer system	93
4.2	Removing and installing washer fluid reservoir	93
4.3	Removing and installing rear window washer pump	94
4.4	Removing and installing spray jet	94
4.5	Adjusting spray jet	94
5	Headlight washer system	95
5.1	Assembly overview - headlight washer system	95
5.2	Removing and installing washer fluid reservoir	96
5.3	Removing and installing headlight washer system pump V11	96
5.4	Removing and installing pop-up cylinder	97
5.5	Removing and installing spray jets	98
5.6	Adjusting spray jets	99
5.7	Bleeding headlight washer system	99
6	Washer fluid lines	101
6.1	Repairing washer fluid lines	101
94	Lights, bulbs, switches - exterior	102
1	Headlights	102
1.1	Assembly overview - headlight	102
1.2	Removing and installing headlight	106
1.3	Adjusting headlights	108
1.4	Adjusting headlight installation position	109
1.5	Removing and installing front turn signal bulb M5/M7	111
1.6	Installing repair kit for headlight housing	114
1.7	Converting headlights from driving on right to driving on left	117
1.8	Converting headlights from driving on left to driving on right	120
1.9	Removing and installing headlight range control motor V48/V49	122
1.10	Removing and installing dipped-beam headlight bulb	126
1.11	Removing and installing headlight main beam bulb M30/M32	127
1.12	Removing and installing gas discharge bulb L13/L14	129
1.13	Removing and installing side light bulb M1/M3	131
1.14	Removing and installing daytime running light bulb L174/L175	132
1.15	Removing and installing LED modules for daytime running light and side light L176/L177	134
1.16	Removing and installing bulbs for cornering light L148/L149	134
1.17	Removing and installing gas discharge bulb control unit J343/J344	136



1.18	Removing and installing output module for headlight J667/J668	137
1.19	Removing and installing control unit for daytime running light and side light J860/J861	138
1.20	Removing and installing swivel module position sensor G474/G475	139
1.21	Removing and installing dynamic cornering light control motor V318/V319	140
1.22	Removing and installing headlight holder	140
2	Fog lights	142
2.1	Assembly overview - fog lights	142
2.2	Removing and installing fog light	142
2.3	Removing and installing fog light bulb L22/L23	144
3	Lights in exterior mirror	146
3.1	Assembly overview - lights in exterior mirror	146
3.2	Removing and installing turn signal	148
3.3	Removing and installing turn signal repeater bulb L131/L132	149
3.4	Removing and installing entry light in exterior mirror	149
3.5	Removing and installing bulb for entry light	149
4	Tail light cluster	151
4.1	Assembly overview - tail light cluster in body	151
4.2	Assembly overview - tail lights in rear lid	151
4.3	Removing and installing tail light in rear lid	152
4.4	Adjusting installation position of tail light	154
4.5	Removing and installing tail light cluster	157
4.6	Removing and installing tail light bulb M2/M4	159
4.7	Removing and installing rear fog light bulb L46/L47	159
4.8	Removing and installing brake and tail light bulb M21/M22	160
4.9	Removing and installing reversing light bulb	161
4.10	Removing and installing turn signal bulb	162
5	High-level brake light	164
5.1	Assembly overview – high-level brake light	164
5.2	Removing and installing high-level brake light	164
6	Number plate light	168
6.1	Removing and installing number plate light X4/X5	168
6.2	Removing and installing bulb for number plate light X4/X5	169
7	Entry and start authorisation system	170
7.1	Overview of fitting locations - keyless entry system	170
7.2	Removing and installing entry and start authorisation control unit J518	172
7.3	Removing and installing door exterior handle contact sensor G415/G416	175
7.4	Removing and installing driver side aerial for entry and start system R134	175
7.5	Removing and installing front passenger side aerial for entry and start system R135	176
7.6	Removing and installing rear bumper aerial for entry and start system R136	176
7.7	Removing and installing luggage compartment aerial for entry and start system R137	177
7.8	Removing and installing interior aerial 1 for entry and start authorisation R138	177
7.9	Removing and installing interior aerial 2 for entry and start authorisation R139	178
7.10	Removing and installing rear lid power opening control unit J938	179
8	Steering column switch module	181
8.1	Assembly overview - steering column switch module	181
8.2	Removing and installing lock cylinder	183
8.3	Removing and installing ignition key withdrawal lock solenoid N376	185
8.4	Removing and installing ignition/starter switch	186
8.5	Removing and installing steering column electronics control unit J527	188
8.6	Removing and installing steering column combination switch	193
8.7	Removing and installing turn signal switch E2	194
8.8	Removing and installing cruise control system switch E45	195
8.9	Removing and installing intermittent wiper switch E22	195
8.10	Removing and installing base for steering column combination switch	195
8.11	Removing and installing steering lock housing	196



9	Parking aid	198
9.1	Assembly overview – parking aid	198
9.2	Removing and installing parking aid control unit J446	199
9.3	Removing and installing parking aid loudspeaker R169	200
9.4	Removing and installing rear parking aid loudspeaker R194	200
9.5	Removing and installing front parking aid senders	202
9.6	Removing and installing rear parking aid senders	203
10	Park assist steering	204
10.1	Assembly overview - park assist steering	204
10.2	Removing and installing control unit	204
10.3	Removing and installing front senders	205
10.4	Removing and installing rear senders	205
11	Automatic headlight range control	207
11.1	Assembly overview - automatic headlight range control	207
11.2	Removing and installing headlight range control unit	207
12	Towing bracket	209
12.1	Assembly overview - towing bracket socket	209
12.2	Trailer socket U10	209
12.3	Removing and installing trailer detector control unit J345	210
13	Blind Spot Monitor	211
13.1	Assembly overview - Blind Spot Monitor	211
13.2	Removing and installing warning lamp for Blind Spot Monitor K303/K304	211
13.3	Removing and installing Blind Spot Monitor control unit J1086/J1087	212
13.4	Calibrating Blind Spot Monitor	213
96	Lights, bulbs, switches - interior	223
1	Lights	223
1.1	Removing and installing glove compartment light W6	223
1.2	Replacing bulb for glove compartment light W6	224
1.3	Removing and installing front footwell light K268/K269	225
1.4	Removing and installing front footwell illumination bulb L151/L152	226
1.5	Removing and installing Central locking SAFELOCK function warning lamp K133	227
1.6	Removing and installing front entry light W31/W32	227
1.7	Removing and installing bulb for entry light	229
1.8	Removing and installing door warning lamp W30/W36	230
1.9	Removing and installing rear entry light W33/W34	230
1.10	Removing and installing rear door warning lamp W37/W38	230
1.11	Removing and installing selector lever position display Y26	230
1.12	Removing and installing luggage compartment light W3	230
1.13	Removing and installing bulb for luggage compartment light W3	232
1.14	Removing and installing illuminated vanity mirror W20/W14	232
1.15	Removing and installing bulb for illuminated vanity mirror	233
1.16	Removing and installing bulb for front interior light W1	234
1.17	Removing and installing bulb for rear interior light W43	234
1.18	Renewing bulb of rear interior light W47/W48	235
1.19	Removing and installing front passenger side airbag deactivated warning lamp K145	236
2	Controls	239
2.1	Removing and installing rotary light switch EX1	240
2.2	Removing and installing headlight range control regulator E102	241
2.3	Removing and installing rear lid remote release button E233	242
2.4	Removing and installing TCS and ESP button E256	242
2.5	Removing and installing parking aid button E266	243
2.6	Removing and installing sunroof button E325	243
2.7	Removing and installing the starter button E378	243
2.8	Removing and installing shock absorber damping adjustment button E387	244



2.9	Removing and installing button to close rear lid in luggage compartment E406	244
2.10	Removing and installing right sliding door button E482	245
2.11	Removing and installing tyre pressure monitor display button E492	245
2.12	Removing and installing electromechanical parking brake button E538/auto-hold button E540	245
2.13	Removing and installing park assist steering button E581	247
2.14	Removing and installing Start/Stop operation button E693	247
2.15	Removing and installing left sliding door button E731	247
2.16	Removing and installing operating unit in front of centre console E461	248
2.17	Removing and installing hazard warning light switch E3	249
2.18	Removing and installing buttons for seat heating E653/E654	250
2.19	Removing and installing glove compartment light switch E26	250
2.20	Removing and installing exterior mirror adjuster EX11	251
2.21	Removing and installing operating unit for window regulator in driver door E512	253
2.22	Removing and installing window regulator switch in front passenger door E107	254
2.23	Removing and installing rear window regulator button E700/E705	256
2.24	Removing and installing driver side interior locking button for central locking system E308	258
2.25	Removing and installing button for deactivating interior monitoring and vehicle inclination sensor E616	259
2.26	Removing and installing door contact switch F2/F3	260
2.27	Removing and installing rear door contact switches F10/F11	261
2.28	Removing and installing rear lid contact switch	261
2.29	Removing and installing rear lid warning buzzer H32	261
2.30	Removing and installing front interior light/reading light	262
2.31	Removing and installing rear interior light/reading light	263
2.32	Removing and installing rear interior light W47/W48	264
2.33	Removing and installing front reading light button E457/E458	266
2.34	Removing and installing key-operated switch to deactivate front passenger side airbag E224	266
3	Anti-theft alarm	269
3.1	Assembly overview - interior monitor	269
3.2	Removing and installing alarm horn H12	271
3.3	Activating and deactivating anti-theft alarm	272
3.4	Removing and installing anti-theft alarm sensor G578	272
4	Immobiliser	274
4.1	Removing and installing immobiliser control unit	274
4.2	Removing and installing immobiliser reader coil	274
5	Front camera for driver assist systems	276
5.1	Removing and installing front camera for driver assist systems	276
6	Cigarette lighter, socket	277
6.1	Assembly overview - DC/AC converter with socket, 12 V-230 V	277
6.2	Removing and installing cigarette lighter U1	278
6.3	Removing and installing socket illumination bulb L42	278
6.4	Removing and installing rear cigarette lighter illumination bulb L32	278
6.5	Removing and installing 12 V socket 2 U18	278
6.6	Removing and installing DC/AC converter with socket, 12 V-230 V U13	278
97 - Wiring		281
1	Relay carriers, fuse holders, electronics boxes	281
1.1	Removing and installing electronics box (E-box)	281
1.2	Removing and installing relay and fuse holder in electronics box	282
1.3	Removing and installing relay and fuse holder behind dash panel on driver side	285
2	Select Control units	289
2.1	Removing and installing onboard supply control unit J519	289
2.2	Removing and installing data bus diagnostic interface J533	290
2.3	Removing and installing rear lid control unit J605	292



3	Connectors	293
3.1	Repairing electrical wiring harnesses and plug-in connections	293
4	Releasing and dismantling connector housings	294
5	Repairing aerial wires	295
6	Vehicle diagnosis, testing and information systems	296