



Contents

00 - Technical data	1
1 Notes on safety	1
1.1 Safety precautions when working on vehicles with auxiliary/supplementary heater	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 Safety precautions when working on the fuel system	2
1.4 Safety precautions when working on cooling system	3
1.5 Safety precautions when using testers and measuring instruments during a road test	3
2 General notes	4
2.1 Starting conditions for auxiliary/supplementary heater	4
2.2 Notes for vehicles with a start/stop system	5
2.3 Rules for cleanliness when working on the auxiliary/supplementary heater and the fuel system	5
2.4 Identification plates	5
3 Repair notes	7
3.1 General repair instructions	7
82 - Supplementary heating	8
1 Overview of fitting locations - auxiliary/supplementary heater	8
1.1 Overview of fitting locations - components not located in passenger compartment	8
2 Auxiliary/supplementary heater	10
2.1 Overview of fitting locations - auxiliary/supplementary heater	10
2.2 Assembly overview - auxiliary/supplementary heater attachments	12
2.3 Assembly overview - auxiliary/supplementary heater, internal	13
2.4 Removing and installing auxiliary/supplementary heater	14
2.5 Dismantling and assembling auxiliary/supplementary heater	18
2.6 Removing and installing air intake silencer	20
2.7 Removing and installing circulation pump V55	20
2.8 Removing and installing exhaust system	23
2.9 Removing and installing bracket for auxiliary/supplementary heater	23
2.10 Removing and installing covers for auxiliary heater control unit J364	24
2.11 Removing and installing glow plug with flame monitoring Q8	25
2.12 Removing and installing temperature sensor G18 and overheating sensor G189	25
2.13 Connector pin assignment for supplementary heater	26
2.14 Dismantling and assembling burner unit	26
2.15 Removing and installing auxiliary heater control unit J364 with combustion air blower V6	27
3 Coolant circuit with auxiliary/supplementary heater	29
3.1 Coolant hose schematic diagram	29
3.2 Bleeding coolant circuit of auxiliary/supplementary heater	29
3.3 Coolant hose routing on vehicles with 2nd heat exchanger	30
3.4 Removing and installing coolant pipes for auxiliary/supplementary heater	31
3.5 Removing and installing heater coolant shut-off valve N279	36
4 Fuel supply	39
4.1 Overview of fitting locations - fuel supply	39
4.2 Testing quantity of fuel delivered	40
4.3 Removing and installing metering pump V54	41
5 Regulation of auxiliary/supplementary heater	43
5.1 Functional description	43
5.2 Supplementary heating mode	44
5.3 Auxiliary heating mode	44
5.4 Switching off auxiliary/supplementary heater	44
6 Other controlling and regulating components	46



6.1	Removing and installing ambient temperature sensor G17	46
6.2	Removing and installing remote control receiver for auxiliary coolant heater R149	46
6.3	Functional description of remote control for auxiliary/supplementary heater	47