



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
2 Repair notes	2
2.1 Rules for cleanliness	2
2.2 General information	2
2.3 Contact corrosion	2
2.4 Routing and attachment of lines	2
3 Battery	4
3.1 Battery - general notes	4
3.2 Types of battery	4
27 - Starter, current supply, CCS	5
1 Battery	5
1.1 Assembly overview – battery	5
1.2 Removing and installing battery	7
1.3 Disconnecting and connecting battery	10
1.4 Removing and installing battery tray	11
1.5 Checking battery	12
1.6 Charging battery	13
1.7 Removing and installing earth wire with battery monitor control unit J367	13
1.8 Adapting battery monitor control unit J367	14
2 Alternator	15
2.1 Assembly overview – alternator	15
2.2 Removing and installing alternator	16
2.3 Checking alternator	25
2.4 Removing and installing poly V-belt pulley	25
2.5 Removing and installing voltage regulator	34
3 Starter	37
3.1 Assembly overview – starter	37
3.2 Removing and installing starter	38
3.3 Checking starter	42
4 Cruise control system (CCS)	43
5 Start/stop system	44
5.1 General description - start/stop system	44
6 Adaptive cruise control	45
6.1 Overview of fitting locations - adaptive cruise control	45
6.2 Removing and installing automatic distance control unit	45
6.3 Calibrating adaptive cruise control	46
90 - Gauges, instruments	47
1 Dash panel insert	47
1.1 Assembly overview – dash panel insert	47
1.2 Removing and installing dash panel insert KX2	48
2 Horn	52
2.1 Assembly overview – horn	52
2.2 Removing and installing left horn H33/right horn H34	52
92 - Windscreen wash/wipe system	54
1 Windscreen wiper system	54
1.1 Assembly overview – windscreen wiper system	54



1.2	Moving wipers to service position	56
1.3	Removing and installing wiper blade	57
1.4	Removing and installing wiper arms	58
1.5	Adjusting wiper arms	60
1.6	Removing and installing wiper motor V	62
1.7	Removing and installing rain and light sensor	63
2	Windscreen washer system	68
2.1	Assembly overview – windscreen washer system	68
2.2	Removing and installing washer fluid reservoir	70
2.3	Removing and installing windscreen washer fluid level sender	72
2.4	Removing and installing windscreen washer pump	73
2.5	Removing and installing spray jets	74
2.6	Adjusting spray jets	75
3	Washer fluid lines	77
94	Lights, bulbs, switches - exterior	78
1	Headlights	78
1.1	Assembly overview – headlight	78
1.2	Assembly overview - daytime running lights	82
1.3	Removing and installing headlight	84
1.4	Adjusting headlights	87
1.5	Adjusting headlight installation position	87
1.6	Removing and installing front turn signal bulb 2 M92/M93	88
1.7	Converting headlights from driving on right to driving on left	89
1.8	Converting headlights from driving on left to driving on right	90
1.9	Removing and installing headlight range control motor V48/V49	91
1.10	Removing and installing headlight dipped beam bulb	95
1.11	Removing and installing headlight main beam bulb M30/M32	98
1.12	Removing and installing daytime running lights	102
1.13	Removing and installing LED modules for daytime running light and side light L176/L177	105
1.14	Removing and installing bulbs for cornering light L148/L149	107
1.15	Removing and installing output module 1 for LED headlight A31/A27	107
2	Fog lights	109
2.1	Assembly overview - fog lights	109
2.2	Removing and installing fog light	109
2.3	Removing and installing fog light bulb L22/L23	111
2.4	Adjusting fog lights	112
3	Lights in exterior mirror	113
3.1	Assembly overview - lights in exterior mirror	113
3.2	Removing and installing turn signal	115
3.3	Removing and installing entry light in exterior mirror	115
4	Tail light cluster	116
4.1	Assembly overview – tail light cluster in body	116
4.2	Assembly overview – tail light clusters in rear lid	116
4.3	Removing and installing tail light in rear lid	117
4.4	Adjusting installation position of tail light	119
4.5	Removing and installing tail light cluster	120
4.6	Removing and installing tail light bulb M2/M4	121
4.7	Removing and installing rear fog light bulb L46/L47	121
4.8	Removing and installing brake and tail light bulb M21/M22	122
4.9	Removing and installing reversing light bulb	122
4.10	Removing and installing turn signal bulb	122
5	High-level brake light	123
5.1	Assembly overview – high-level brake light	123
5.2	Removing and installing high-level brake light	123



6	Number plate light	126
6.1	Removing and installing number plate light X4/X5	126
6.2	Removing and installing bulb for number plate light X4/X5	127
7	Entry and start authorisation system	128
7.1	Overview of fitting locations – entry and start authorisation system	128
7.2	Overview of fitting locations – keyless entry system	129
7.3	Removing and installing entry and start authorisation control unit J518	129
7.4	Removing and installing door exterior handle contact sensor G415/G416	131
7.5	Removing and installing interior aerial 1 for entry and start authorisation R138	131
7.6	Removing and installing interior aerial 2 for entry and start system R139	132
7.7	Removing and installing rear bumper aerial for entry and start system R136	132
7.8	Removing and installing aerial for entry and start system R134/R135	133
8	Steering column switch module	134
8.1	Assembly overview – steering column switch module	134
8.2	Removing and installing lock cylinder	136
8.3	Removing and installing ignition key withdrawal lock solenoid N376	138
8.4	Removing and installing ignition/starter switch	138
8.5	Removing and installing steering column switch module	140
8.6	Removing and installing steering column electronics control unit J527	142
8.7	Removing and installing turn signal switch E2	146
8.8	Removing and installing cruise control system switch E45	147
8.9	Removing and installing intermittent wiper switch E22	147
8.10	Removing and installing base for steering column combination switch	147
8.11	Removing and installing steering lock housing	148
9	Parking aid	151
9.1	Assembly overview – parking aid	151
9.2	Removing and installing parking aid control unit J446	154
9.3	Removing and installing front parking aid warning buzzer H22	155
9.4	Removing and installing front parking aid senders	157
9.5	Removing and installing rear parking aid senders	159
10	Park assist steering	161
10.1	Assembly overview - park assist steering	161
10.2	Removing and installing control unit	162
10.3	Removing and installing front senders	162
10.4	Removing and installing rear senders	163
11	Automatic headlight range control	165
11.1	Assembly overview - automatic headlight range control	165
11.2	Removing and installing cornering light and headlight range control unit J745	166
12	Blind Spot Monitor	169
12.1	Assembly overview - Blind Spot Monitor	169
12.2	Removing and installing warning lamp for Blind Spot Monitor K303/K304	170
12.3	Removing and installing Blind Spot Monitor control unit J1086/J1087	170
96 - Lights, bulbs, switches - interior		172
1	Lights	172
1.1	Overview of fitting locations – lights in dash panel	172
1.2	Overview of fitting locations – lights in front doors	173
1.3	Overview of fitting locations - lights in centre console	174
1.4	Overview of fitting locations – lights in luggage compartment	175
1.5	Overview of fitting locations – lights in roof trim	176
1.6	Removing and installing glove compartment light W6	177
1.7	Removing and installing front footwell light K268/K269	178
1.8	Removing and installing front footwell illumination bulb L151/L152	180
1.9	Removing and installing centre console illumination bulb L150	180
1.10	Removing and installing Central locking SAFELOCK function warning lamp K133	181



1.11	Removing and installing light for interior door handle illumination L219/L220	181
1.12	Removing and installing light 2 for door background lighting W97/W98	182
1.13	Removing and installing light for door ambient lighting W86/W87	183
1.14	Removing and installing door storage compartment illumination bulb L160/L161	183
1.15	Removing and installing selector lever position display Y26	184
1.16	Removing and installing luggage compartment light W3	185
1.17	Removing and installing illuminated vanity mirror W20/W14	185
1.18	Renewing front interior light bulb W1/W13/W19	186
2	Controls	188
2.1	Overview of fitting locations - controls in dash panel	189
2.2	Overview of fitting locations - controls in front doors	189
2.3	Overview of fitting locations - controls in centre console	190
2.4	Overview of fitting locations - controls in roof trim	192
2.5	Removing and installing rotary light switch EX1	193
2.6	Removing and installing TCS and ESP button E256	193
2.7	Removing and installing parking aid button E266	194
2.8	Removing and installing park assist steering button E581	194
2.9	Removing and installing front passenger airbag warning lamp K145	194
2.10	Removing and installing Start/Stop operation button E693	194
2.11	Removing and installing driving mode selection button E735	194
2.12	Removing and installing switch module in centre console EX23/EX30	194
2.13	Removing and installing hazard warning light switch EX3	195
2.14	Removing and installing buttons for seat heating E653/E654	196
2.15	Removing and installing glove compartment light switch E26	196
2.16	Removing and installing switch for exterior mirror adjuster EX11	197
2.17	Removing and installing operating unit for window regulator in driver door EX36	198
2.18	Removing and installing front passenger side window regulator button E716	199
2.19	Removing and installing driver side interior locking button for central locking system E308	200
2.20	Removing and installing door contact switch F2/F3	201
2.21	Removing and installing electromechanical parking brake button E538/auto-hold button E540	201
2.22	Removing and installing convertible roof actuation button E137	202
2.23	Removing and installing central switch for window regulators E643	203
2.24	Removing and installing the starter button E378	203
2.25	Removing and installing rear lid contact switch	204
2.26	Removing and installing vanity mirror contact switch F147/F148	204
2.27	Removing and installing front interior light/reading light	204
2.28	Removing and installing front reading light button E633/E634	205
2.29	Removing and installing emergency assistance call button E276	205
3	Anti-theft alarm	206
3.1	Assembly overview – interior monitor	206
3.2	Removing and installing alarm horn H12	206
3.3	Removing and installing anti-theft alarm sensor G578	208
4	Immobiliser	209
4.1	Removing and installing immobiliser control unit	209
4.2	Removing and installing immobiliser reader coil	209
5	Front camera for driver assist systems	211
5.1	Assembly overview - front camera for assist systems	211
5.2	Removing and installing front camera for driver assist systems	211
6	Towing bracket	214
6.1	Assembly overview - socket, trailer detector control unit	214
6.2	Trailer socket	214
6.3	Removing and installing trailer detector control unit J345	215
7	Cigarette lighter, socket	216
7.1	Removing and installing cigarette lighter U1	216



7.2	Removing and installing socket illumination bulb L42	216
7.3	Removing and installing rear cigarette lighter illumination bulb L32	216
7.4	Removing and installing electric socket U	216
97	- Wiring	217
1	Relay carriers, fuse holders, electronics boxes	217
1.1	Overview of fitting locations - relay carriers, fuse holders, electronics boxes	217
1.2	Removing and installing electronics box	219
1.3	Removing and installing relay and fuse holder in electronics box	222
1.4	Removing and installing relay and fuse holder behind dash panel on driver side	224
2	Control units	227
2.1	Overview of fitting locations - control units	227
2.2	Removing and installing onboard supply control unit J519	229
2.3	Removing and installing data bus diagnostic interface J533	234
2.4	Removing and installing bracket for onboard supply control unit J519	236
2.5	Removing and installing parking aid control unit J446/park assist steering control unit J791	238
3	Connectors	240
3.1	Repairing electrical wiring harnesses and plug-in connections	240
4	Releasing and dismantling connector housings	241
5	Repairing aerial wires	242
6	Fibre optic cables	243
7	Vehicle diagnosis, testing and information systems	244