



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety measures when working on vehicles with a start/stop system	1
<b>2 Identification</b>	<b>2</b>
2.1 Gearbox identification	2
<b>3 Technical data</b>	<b>3</b>
3.1 Allocation gearbox - engine	3
3.2 Capacities	3
<b>4 Overview - power transmission</b>	<b>4</b>
<b>5 Electrical components</b>	<b>6</b>
5.1 Overview of fitting locations - electrical components	6
<b>6 Repair instructions</b>	<b>7</b>
6.1 General repair instructions	7
<b>30 - Clutch</b>	<b>9</b>
<b>1 Pedal cluster</b>	<b>9</b>
1.1 Assembly overview - pedal cluster	9
1.2 Assembly overview - clutch hydraulics	12
1.3 Removing and installing bearing bush	13
1.4 Checking clutch master cylinder and clutch slave cylinder	13
1.5 Removing and installing clutch position sender G476	14
1.6 Removing and installing return spring	14
1.7 Removing and installing over-centre spring	17
1.8 Removing and installing clutch pedal	19
1.9 Removing and installing mounting bracket	21
1.10 Removing and installing clutch master cylinder	25
1.11 Removing and installing clutch slave cylinder	25
1.12 Removing and installing lines for clutch mechanism	28
1.13 Bleeding clutch mechanism	30
<b>2 Clutch</b>	<b>32</b>
<b>34 - Controls, housing</b>	<b>33</b>
<b>1 Selector mechanism</b>	<b>33</b>
1.1 Installation position - selector mechanism	33
1.2 Assembly overview - gear knob and cover	34
1.3 Assembly overview - selector mechanism	35
1.4 Removing and installing gear knob	36
1.5 Removing and installing selector mechanism	38
1.6 Repairing selector mechanism	44
1.7 Adjusting selector mechanism	47
1.8 Checking selector mechanism	49
<b>2 Removing and installing gearbox</b>	<b>50</b>
2.1 Removing gearbox	50
2.2 Installing gearbox	58
2.3 Specified torques for gearbox	63
<b>3 Assembly mountings</b>	<b>65</b>
3.1 Assembly overview - assembly mountings	65
<b>4 Gear oil</b>	<b>67</b>
4.1 Checking gear oil level	67
<b>5 Dismantling and assembling gearbox</b>	<b>69</b>
5.1 Assembly overview - selector unit	69



5.2	Removing and installing selector unit with gearbox installed	70
5.3	Repairing selector unit	74
5.4	Renewing selector shaft seal	75
6	<b>Gearbox housing, clutch housing</b>	<b>77</b>
<b>35</b>	<b>- Gears, shafts</b>	<b>78</b>
1	Input shaft	78
2	Output shaft	79
<b>39</b>	<b>- Final drive - differential</b>	<b>80</b>
1	<b>Oil seals</b>	<b>80</b>
1.1	Overview of fitting locations - seals	80
1.2	Renewing left seal	81
1.3	Renewing right oil seal	82
2	<b>Differential</b>	<b>86</b>