



## Contents

<b>00 - Technical data</b>	<b>1</b>
1 Safety information	1
2 Identification	2
3 Technical data	3
3.1 Capacities	3
4 Overview - power transmission	4
5 Electrical components	6
6 Repair instructions	7
6.1 General repair instructions	7
<b>30 - Clutch</b>	<b>11</b>
1 Clutch mechanism	11
1.1 Assembly overview - clutch release mechanism	11
1.2 Repairing clutch release mechanism	13
2 Clutch	15
2.1 Assembly overview - clutch	15
2.2 Removing and installing clutch	17
<b>34 - Controls, housing</b>	<b>33</b>
1 Selector mechanism	33
2 Removing and installing gearbox	34
3 Transporting gearbox	35
4 Gear oil	36
5 Securing to engine and gearbox support	37
6 Dismantling and assembling gearbox	39
6.1 Overview - gearbox	39
6.2 Assembly overview - gearbox	39
6.3 Assembly overview - gearbox housing cover	40
6.4 Assembly overview - clutch housing	42
6.5 Assembly overview - shafts, differential, selector mechanism	43
6.6 Assembly overview - selector forks	45
6.7 Repairing selector forks	46
6.8 Dismantling and assembling gearbox	51
7 Gearbox housing, clutch housing	73
7.1 Assembly overview - gearbox housing and clutch housing	73
7.2 Assembly overview - gearbox housing cover	75
7.3 Repairing gearbox housing	76
7.4 Repairing gearbox housing cover	77
<b>35 - Gears, shafts</b>	<b>81</b>
1 Input shaft	81
1.1 Assembly overview - input shaft	81
1.2 Dismantling and assembling input shaft	84
1.3 Renewing input shaft seal	97
2 Output shaft	100
2.1 Assembly overview - output shaft	100
2.2 Dismantling and assembling output shaft	103
<b>39 - Final drive - differential</b>	<b>111</b>
1 Oil seals	111
1.1 Overview of fitting locations - oil seals	111



<b>2</b>	<b>Differential</b> .....	<b>112</b>
2.1	Assembly overview - differential .....	112
2.2	Dismantling and assembling differential .....	114
2.3	Adjusting differential .....	123