



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety precautions when using testers and measuring instruments during a road test	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 All-wheel drive - notes on performance test	2
<b>2 Identification</b>	<b>3</b>
2.1 Gearbox identification	3
<b>3 Technical data</b>	<b>6</b>
3.1 Allocation gearbox - engine	6
3.2 Capacities	7
<b>4 Overview - power transmission</b>	<b>8</b>
4.1 Overview - power transmission - front-wheel drive	8
4.2 Overview - power transmission - all-wheel drive	9
<b>5 Electrical components</b>	<b>12</b>
5.1 Overview of fitting locations - electrical components	12
<b>6 Repair instructions</b>	<b>14</b>
6.1 General repair instructions	14
<b>30 - Clutch</b>	<b>17</b>
<b>1 Clutch mechanism</b>	<b>17</b>
1.1 Assembly overview - pedal cluster	17
1.2 Assembly overview - clutch hydraulics	19
1.3 Removing and installing bearing bush	23
1.4 Checking clutch master cylinder and clutch slave cylinder	24
1.5 Removing and installing clutch position sender G476	25
1.6 Removing and installing return spring	26
1.7 Removing and installing over-centre spring	29
1.8 Removing and installing clutch pedal	33
1.9 Removing and installing mounting bracket	34
1.10 Removing and installing clutch master cylinder	40
1.11 Removing and installing bleeder	41
1.12 Removing and installing lines for clutch mechanism	45
1.13 Bleeding clutch mechanism	49
<b>2 Clutch</b>	<b>51</b>
2.1 Determining make of clutch	51
<b>34 - Controls, housing</b>	<b>53</b>
<b>1 Selector mechanism</b>	<b>53</b>
1.1 Installation position - selector mechanism	53
1.2 Assembly overview – gear knob and cover	54
1.3 Assembly overview - selector mechanism	56
1.4 Removing and installing gear knob	58
1.5 Removing and installing selector mechanism	60
1.6 Adjusting selector mechanism	71
1.7 Checking selector mechanism	75
<b>2 Removing and installing gearbox</b>	<b>76</b>
2.1 Removing gearbox	76
2.2 Installing gearbox	97
2.3 Specified torques for gearbox	102
<b>3 Assembly mountings</b>	<b>104</b>
3.1 Assembly overview - assembly mountings	104



<b>4</b>	<b>Bevel box</b> .....	<b>108</b>
4.1	Assembly overview - bevel box .....	108
4.2	Distinguishing between different types of bevel boxes .....	110
4.3	Removing bevel box .....	110
4.4	Installing bevel box .....	119
<b>5</b>	<b>Transporting gearbox</b> .....	<b>125</b>
<b>6</b>	<b>Gear oil</b> .....	<b>126</b>
6.1	Distinguishing between different manual gearbox types when filling oil .....	126
6.2	Checking gear oil level .....	126
<b>7</b>	<b>Dismantling and assembling gearbox</b> .....	<b>131</b>
7.1	Assembly overview - selector unit .....	131
7.2	Removing and installing selector unit with gearbox installed .....	132
7.3	Renewing selector shaft seal .....	136
<b>8</b>	<b>Gearbox housing, clutch housing</b> .....	<b>139</b>
<b>35 - Gears, shafts</b> .....		<b>140</b>
1	Input shaft .....	140
2	Output shaft .....	141
<b>39 - Final drive - differential</b> .....		<b>142</b>
<b>1</b>	<b>Oil seals</b> .....	<b>142</b>
1.1	Overview of fitting locations - oil seals .....	142
1.2	Renewing left seal .....	144
1.3	Renewing right seal .....	147
<b>2</b>	<b>Differential</b> .....	<b>158</b>
<b>3</b>	<b>Components of bevel box</b> .....	<b>159</b>
3.1	Renewing bevel box seals .....	159
3.2	Renewing output flange and redetermining thickness of shim .....	159
3.3	Renewing needle bearing (polygon bearing) and oil seal for right flange shaft .....	159
<b>4</b>	<b>Gear oil</b> .....	<b>164</b>
4.1	Checking gear oil level .....	164